1. Inserting Micro SD cards

Note: Please choose branded Micro SD card and format it on computer before use. Neutral cards are not guaranteed to work normally.

2. Installing and removing batteries

- a. Press on battery cap to open it.
- b. Correctly install battery into camera as indicated by +/- symbols and direction of arrows marked on battery until it's in place.
- c. Battery gauge: please refer to diagram.
- d. Remove battery: open cap to take battery out.

3. Charging

- a. Charging can be done by either connecting power adapter to computer or power
- b. Charge on vehicle by connecting it to car charger.
- c. It can record video while charging.

Note: When it is connected with power and automatically video recording, charging can be done even when long press power witch.

4. Switching camera on and off

Press and hold power switch for 3 to 5 seconds to turn it on /off. Short press DOWN button to turn on Wi-Fi.

Mode Switching

Switch between video recording / photo shooting / playback /menu by pressing "Power On-Off button.

6. How to record videos and configure recording setting

a. Video Recording

Switch to recording mode and there'll be an STBY icon in the upper left corner of

screen. Press OK to start recording and the REC icon in the upper left corner will start to flash. Press "OK" again if you want to stop.

Resolution of videos recorded: 4K 30fps /2.7k 30fps / 1920*1080 60fps /1920*1080 30fps /1280*720 120fps Note: The default recording mode is loop. Not enough storage space available for the recording, the later files will overwrite to the earlier ones. Please choose and adjust your modes according to the menu.

b. Photo Shooting & Setting

Switch the camera on and press "Mode" to select "Photo shooting Mode", there'll be an STBY icon in the upper left corner of display screen and camera is in photo shooing mode. Press "OK" to take photos.

Shooting Pattern: Single shot / Self-timer (3S/5S/10S/20S) / Continuous Shooting

c. File Storage & Playing

After you are done recording, use a USB cable to export the videos onto a computer to play. Or you take Micro SD card out and access the image data with a card reader.

6. Install and use WiFi

Wifi connection (for WiFi model)
Please download and install "GoPlus CamPro" application on your smart phone
before starting WiFi function.PS: Android, please download at Google Play IOS,
please donwload at Apple StoreThe domestic can be downloaded in the mobile phone 360
Connecting step:
A, When turned UP, press and hold the button appears on the wifi icon, then the

wifi light blinks;
B, Finding out "GoPlus CamPro" network on your smart phone, then connecting it

by entering the original password: 12345
C. Operating the GoPlus CamPro application
Now you can preview in real time and remote control your camera on your phone, also you can download files from the camera to your phone Setting Wifi password:

You can re-set the wifi password in the setting mode
Disconnecting the Wifi connection:
press and hold the UP button until the "Waiting for wifi connection..."disappearing on the screen









1. Inserting Micro SD cards

Bit Phase Jeven Involve Micro SD and and familit is in corporate
and final data are on payments and sect in male).

2. Installing and reversity plastifies.

3. Price of Installing and conserving final final

3. Price of Installing and Conserving Installing

5. Price of Installing and Conserving Installing

6. Before planting compare these delayers.

6. Before planting compare these delayers.

6. Before planting compare these delayers.

6. Durage are installed by connecting the and charge

6. Experimental and the compared power address in compare

6. Durage or invited by connecting the and charge

6. Experimental and the compared power address

6. Short-filting connection of the form on mY-1-E.

6. More Sections

6. More Sections

6. How Sec

7





And the second process of the second process



