




KONICA MINOLTA


The essentials of imaging

MS7000 MKII

User's Guide

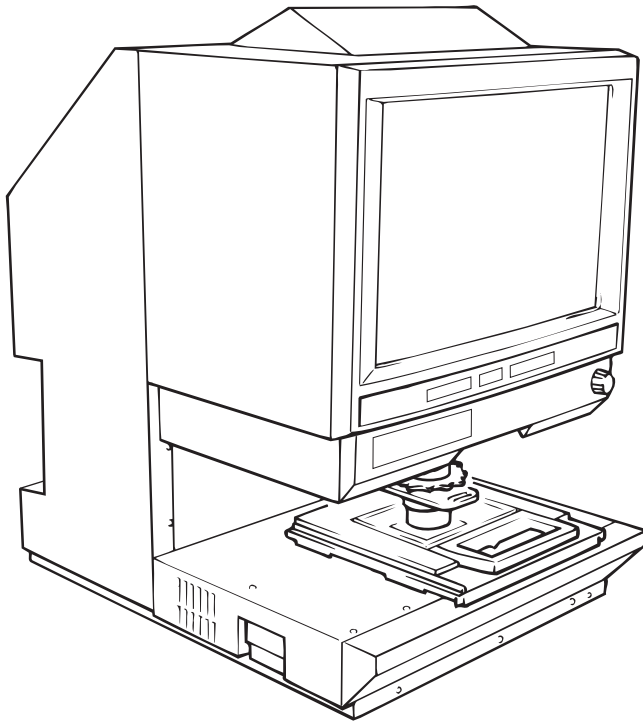

Energy Star®

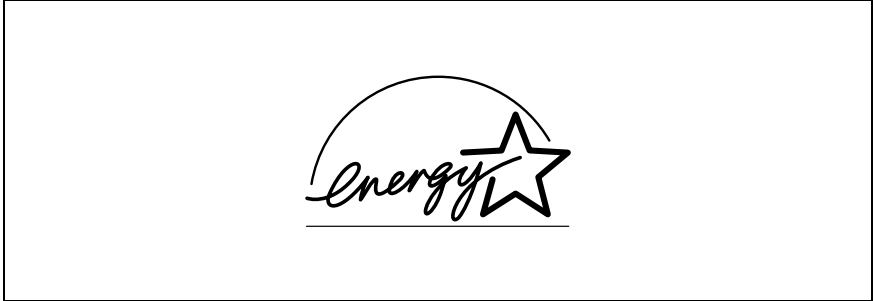

As an ENERGY STAR® Partner, we have determined that this machine meets the ENERGY STAR® Guidelines for energy efficiency.

What is an ENERGY STAR® Product?

An ENERGY STAR® product has a special feature that allows it to automatically switch to a “low-power mode” after a period of inactivity. An ENERGY STAR® product uses energy more efficiently, saves you money on utility bills and helps protect the environment.

Only the setting of “Auto Power Save (15 min.)” complies with the Energy Star standard.

SAFETY INFORMATION



This section contains detailed instructions on the operation and maintenance of this machine. To achieve optimum utility of this device, all operators should carefully read and follow the instructions in this manual. Please keep this manual in a handy place near the machine.

Make sure you observe all of the precautions listed in this manual.

* Ver07

Please note that some parts of the contents of this section may not correspond with the purchased product.

Warning and Precaution Symbols

 WARNING:	Ignoring this warning could cause serious injury or even death.
 CAUTION:	Ignoring this caution could cause injury or damage to property.

Meaning of Symbols



A triangle indicates a danger against which you should take precaution.



This symbol warns against cause burns.



A diagonal line indicates a prohibited course of action.



This symbol warns against dismantling the device.



A black circle indicates an imperative course of action.



This symbol indicates you must unplug the device.

SAFETY INFORMATION

⚠ WARNING

- Do not modify this product, as a fire, electrical shock, or breakdown could result. If the product employs a laser, the laser beam source could cause blindness.
- Do not attempt to remove the covers and panels which have been fixed to the product. Some products have a high-voltage part or a laser beam source inside that could cause an electrical shock or blindness.



- Only use the power cord supplied in the package. If a power cord is not supplied, only use the power cord and plug that is specified in POWER CORD INSTRUCTION. Failure to use this cord could result in a fire or electrical shock.
- Use the power cord supplied in the package only for this machine and NEVER use it for any other product. Failure to observe this precaution could result in a fire or electrical shock.
- Use only the specified power source voltage. Failure to do that could result in a fire or electrical shock.
- Do not use a multiple outlet adapter to connect any other appliances or machines. Use of a power outlet for more than the marked current value could result in a fire or electrical shock.



Do not unplug and plug in the power cord with a wet hand, as an electrical shock could result.



Plug the power cord all the way into the power outlet. Failure to do this could result in a fire or electrical shock.



- Do not scratch, abrade, place a heavy object on, heat, twist, bend, pull on, or damage the power cord. Use of a damaged power cord (exposed core wire, broken wire, etc.) could result in a fire or breakdown.
Should any of these conditions be found, immediately turn OFF the power switch, unplug the power cord from the power outlet, and then call your authorized service representative.
- Do not use an extension cord, in principle. Use of an extension cord could cause a fire or electrical shock. Contact your authorized service representative if an extension cord is required.

SAFETY INFORMATION



Do not place a flower vase or other container that contains water, or metal clips or other small metallic objects on this product. Spilled water or metallic objects dropped inside the product could result in a fire, electrical shock, or breakdown.

Should a piece of metal, water, or any other similar foreign matter get inside the product, immediately turn OFF the power switch, unplug the power cord from the power outlet, and then call your authorized service representative.



- Do not keep using this product, if this product becomes inordinately hot or emits smoke, or unusual odor or noise. Immediately turn OFF the power switch, unplug the power cord from the power outlet, and then call your authorized service representative. If you keep on using it as is, a fire or electrical shock could result.
- Do not keep using this product, if this product has been dropped or its cover damaged. Immediately turn OFF the power switch, unplug the power cord from the power outlet, and then call your authorized service representative. If you keep on using it as is, a fire or electrical shock could result.



Do not throw the toner cartridge or toner into an open flame. The hot toner may scatter and cause burns or other damage.



Connect the power cord to an electrical outlet that is equipped with a grounding terminal.

SAFETY INFORMATION

 **CAUTION**

- Do not use flammable sprays, liquids, or gases near this product, as a fire could result.
- Do not leave a toner unit or drum unit in a place within easy reach of children. Licking or ingesting any of these things could injure your health.
- Do not let any object plug the ventilation holes of this product. Heat could accumulate inside the product, resulting in a fire or malfunction.
- Do not install this product at a site that is exposed to direct sunlight, or near an air conditioner or heating apparatus. The resultant temperature changes inside the product could cause a malfunction, fire, or electrical shock.
- Do not place the product in a dusty place, or a site exposed to soot or steam, near a kitchen table, bath, or a humidifier. A fire, electrical shock, or breakdown could result.
- Do not place this product on an unstable or tilted bench, or in a location subject to a lot of vibration and shock. It could drop or fall, causing personal injury or mechanical breakdown.
- After installing this product, mount it on a secure base. If the unit moves or falls, it may cause personal injury.
- Do not store toner units and PC drum units near a floppy disk or watch that are susceptible to magnetism. They could cause these products to malfunction.



The inside of this product has areas subject to high temperature, which may cause burns. When checking the inside of the unit for malfunctions such as a paper misfeed, do not touch the locations (around the fusing unit, etc.) which are indicated by a "CAUTION HOT" caution label.



Do not place any objects around the power plug as the power plug may be difficult to pull out when an emergency occurs.



The socket-outlet shall be installed near the machine and shall be easily accessible as the power plug may be difficult to pull out when an emergency occurs.

CAUTION



- Always use this product in a well ventilated location. Operating the product in a poorly ventilated room for an extended period of time could injure your health. Ventilate the room at regular intervals.
- Whenever moving this product, be sure to disconnect the power cord and other cables. Failure to do this could damage the cord or cable, resulting in a fire, electrical shock, or breakdown.
- When moving this product, always hold it by the locations specified in the operator's manual or other documents. If the unit falls it may cause severe personal injury. The product may also be damaged or malfunction.
- Remove the power plug from the outlet more than one time a year and clean the area between the plug terminals. Dust that accumulates between the plug terminals may cause a fire.
- When unplugging the power cord, be sure to hold onto the plug. Pulling on the power cord could damage the cord, resulting in a fire or electrical shock.

Precautions for Routine



- Do not store toner units, PC drum units, and other supplies and consumables in a place subject to direct sunlight and high temperature and humidity, as poor image quality and malfunction could result.
- Do not attempt to replace the toner unit and PC drum unit in a place exposed to direct sunlight. If the PC drum is exposed to intense light, poor image quality could result.
- Do not unpack a toner unit or PC drum unit until the very time of use. Do not leave an unpacked unit standing. Install it immediately or poor image quality could result.
- Do not keep toner units and PC drum units in an upright position or upside down, as poor image quality could result.
- Do not throw or drop a toner unit or PC drum unit as poor image quality could result.
- Do not use this product in an area where ammonia or other gases or chemicals are present. Failure to do so may shorten the service life of the product, cause damage or decrease performance.
- Do not use this product in an environment with a temperature outside the range specified in the operator's manual, as a breakdown or malfunction could result.
- Do not attempt to feed stapled paper, carbon paper or aluminum foil through this product, as a malfunction or fire could result.

SAFETY INFORMATION



Do not touch or scratch the surface of the toner unit developing roller and the PC drum, as poor image quality could result.




Use the supplies and consumables recommended by the dealer. Use of any supply or consumable not recommended could result in poor image quality and breakdown.

Welcome

This User's Guide explains how to operate the unit and replenish its supplies. It also gives some troubleshooting tips as well as general precautions to be observed when operating the unit.

To ensure the best performance and effective use of your unit, read this User's Guide carefully until you familiarize yourself thoroughly with the unit's operation and features.

Please keep this User's Guide and use it as a quick and handy reference tool for immediately clarifying any questions that may arise.

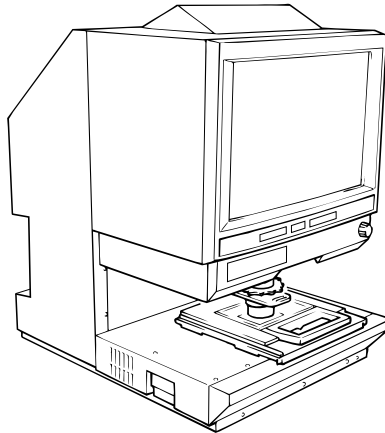

Please follow the instructions given in this User's Guide when handling the system and do not touch any part of the system the User's Guide does not cover.

NEVER attempt to disassemble or remodel the system.

The contents of this User's Guide are subject to change without notice. No part of this User's Guide may be quoted, reproduced, or translated into any other language.

Contents

1 Notes to Operators and Key Operators

1.1 The following safety rules should be observed	1-1
FCC Part 15 - Radio Frequency Devices (For U.S.A. Users).....	1-1
WARNING	1-1
Interference-Causing Equipment Standard (ICES-003 ISSUE 3) (For Canada Users)	1-2
CE Marking (Declaration of Conformity) (For European Users)	1-2
Acoustic Noise	1-2
1.2 Safety Information (MSP 3000 Printer).....	1-3
Laser Safety.....	1-3
Internal Laser Radiation.....	1-3
For United States.....	1-3
Laser Safety.....	1-3
CDRH Regulations	1-3
All other users.....	1-4
For Denmark.....	1-4
For Finland, Sweden.....	1-4
For Norway	1-5
WARNING LABEL	1-6
OZONE RELEASE (For all Users).....	1-7
WARNING LABEL	1-7

2 Precautions

2.1 Installation Precautions.....	2-1
Installation Site	2-1
Power Source	2-2
Grounding	2-2
Space Requirements	2-3
Operating Environment.....	2-4
Using the Printer.....	2-4
Care of Printer Supplies.....	2-5

3 Scanner

3.1 System Overview	3-1
3.2 System Configuration.....	3-2
PR Mode (connected to a printer).....	3-2
PC Mode (connected to a personal computer).....	3-2

3.3	Parts of the Scanner	3-3
3.4	Control Panel Keys and Indicators	3-5
	Control Panel 1 (Basic)	3-5
	Control Panel 1 (Shift Function)	3-9
	Control Panel 2	3-10
	When Misfeed/Call-Tech.-Rep. Indicator Lights up	3-12
3.5	Image Processing Functions	3-14
3.6	Turning the Power On and Off	3-16
	Turning ON	3-16
	Turning OFF	3-17
3.7	Auto Power Save Mode	3-18
3.8	Printing or Scanning Procedure	3-19
3.9	Selecting a Projection Lens	3-20
3.10	Replacing the Projection Lens	3-21
3.11	Positioning the Film Image	3-22
3.12	Zooming, Focusing, and Image Rotation	3-23
	Zooming	3-23
	Focusing	3-23
	Image Rotation	3-23
3.13	Selecting the Film Type	3-25
	Auto	3-25
	Nega (negative film)	3-25
	Posi (positive film)	3-26
3.14	Selecting the Paper Size	3-27
	Selecting the Paper Size	3-27
	Using the Auto Paper Selection Function	3-27
	Using the Auto Film Format Selection Function	3-28
3.15	Selecting the Print Position	3-29
	Center	3-29
	Left	3-29
	Page-by-Page	3-29
3.16	Selecting the Image Density	3-30
	Using Auto Exposure	3-30
	Using Manual Exposure	3-30
3.17	Entering the Number of Prints to be Made	3-32
	1 to 9	3-32
	10 to 99	3-32
	Correcting a Number	3-32
3.18	Using Auto Masking	3-33

Selecting Auto Masking	3-33
Operating Conditions for Auto Masking	3-33
3.19 Manual Masking Panels (Option)	3-34
3.20 Using Manual Masking	3-35
Selecting Trimming	3-35
Defining an Area	3-36
Defining Two Separate Areas	3-36
Defining Page-by-Page Print Area	3-37
Clearing a Defined Print Area	3-37
Selecting Masking	3-38
3.21 Using Centering and Fit	3-39
Centering	3-39
Fit	3-40
3.22 Using the Cycle Print Mode	3-41
Specifying the interval between scanning operations	3-41
Operating in the Cycle Print Mode	3-42
3.23 Selecting the Connection Mode	3-43
3.24 Selecting the Resolution	3-44
3.25 Registering the Job Program	3-45
3.26 Calling the Job Program	3-46
3.27 Using the Electrical Zoom	3-47
Zoom +	3-47
Zoom -	3-47
Skip of magnification	3-48
Clearing the Zoom magnification	3-49
3.28 Adjusting the Illumination of the Screen	3-50
3.29 Replacing the Projection Lamp	3-51

4 System Printer (option)

4.1 Parts of the Printer	4-1
4.2 Paper Specifications	4-3
Use only the following types of paper:	4-3
4.3 Set the Paper	4-4
Loading Paper into the Paper Feeding Tray	4-4
Loading Paper in the Paper Cassette	4-5
4.4 Replacing the Toner Cartridge	4-7
4.5 When the Paper Misfeed Indicator Lights Up	4-10
If the Misfeed Indicator lights up along with a P0 code:	4-10
If the Misfeed Indicator lights up along with a P1, P2 or P3 code:	4-10



Clearing a Misfeed from the Paper Feeding Tray	4-10
Clearing a Misfeed from the Paper Cassette	4-12
Clearing a Misfeed from inside the Printer	4-13
4.6 Solving Irregular Printing Problems	4-15

5 Miscellaneous

5.1 Specifications	5-1
PC Mode	5-2
PR Mode	5-2
5.2 Initial Settings	5-3
System Settings by the dealer	5-12
5.3 System Care	5-14
Cleaning the Scanner Screen	5-14
Outer Covers	5-14
Carrier Glass (Option)	5-15
Cleaning the System Printer (Option)	5-16
5.4 For Key Operator's Use.....	5-17

1 Notes to Operators and Key Operators

1.1 The following safety rules should be observed

1. The unit should be kept free from moisture, dirt, dust and exposure to heat and direct sunlight at all times.
2. Keep hands, hair and clothing away from rollers and other moving parts.
3. Before removing the Projection Lamp Unit, confirm that the machine is turned "OFF".
4. Be sure that the proper voltage is used and that the machine is well grounded.
The use of electrical extension cords is strongly discouraged.
5. For best performance, only our authorized supplies are recommended for use with this unit. Failure to use our authorized supplies may cause damage to the unit, in which case the warranty may be rendered void.
6. Do not attempt to remove any Cover that is secured,

FCC Part 15 - Radio Frequency Devices (For U.S.A. Users)

This device complies with Part 15 of the FCC Rules.

Operation is subject to the following two conditions:

1. This device may not cause harmful interference, and
2. this device must accept any interference received, including interference that may cause undesired operation.

WARNING

This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference in which case the user will be required to correct the interference at his own expense.

The design and production of this unit conforms to FCC regulations, and any changes or modifications must be registered with the FCC and are subject to FCC control. Any changes made by the purchaser or user without first contacting the manufacturer will be subject to penalty under FCC regulations.

Interference-Causing Equipment Standard (ICES-003 ISSUE 3) (For Canada Users)

This Class A digital apparatus complies with Canadian ICES-003.

Cet appareil numérique de la classe A est conforme à la norme NMB-003 du Canada.

CE Marking (Declaration of Conformity) (For European Users)

This product complies with the following EU directives:
89/336/EEC, 73/23/EEC and 93/68/EEC directives.

This declaration is valid for the area of the European Union(EU) only.

This device must be used with shielded interface cable and shielded network cable.

The use of non-shielded cable is likely to result in interference with radio communications and is prohibited under rules.

Acoustic Noise

Machine Noise Regulation 3 GSGV, 18.01.1991: The sound pressure level at the operator position according to EN27779 is equal to or less than 70dB (A).

1.2 Safety Information (MSP 3000 Printer)

Laser Safety

This printer is a page printer which operates by means of a laser. There is no possibility of danger from the laser, provided the printer is operated according to the instructions provided in this manual.

Since radiation emitted by the laser is completely confined within protective housing, the laser beam cannot escape from the machine during any phase of user operation.

Internal Laser Radiation

Maximum Radiation Power: 8.8×10^{-4} (W)

Wave Length: 770-810 (nm)

This is a Class IIIb Laser Diode Assy. that has an invisible laser beam. The print head unit is NOT A FIELD SERVICE ITEM. Therefore, the print head unit should not be opened under any circumstances.

For United States

Laser Safety

This printer is certified as a Class 1 Laser product under the **U.S. Department of Health and Human Service (DHHS)** Radiation Performance Standard according to the Radiation Control for Health and Safety Act of 1968. This means that the printer does not produce hazardous laser radiation.

CDRH Regulations

The **Center for Devices and Radiological Health (CDRH)** of the U.S. Food and Drug Administration implemented regulations for laser products on August 2, 1976. These regulations apply to laser products manufactured from August 1. Compliance is mandatory for products marketed in the United States. The label shown below indicates compliance with the CDRH regulations and must be attached to laser products marketed in the United States.



WARNING

- Use of controls, adjustments or performance of procedures other than those specified in this manual may result in hazardous radiation exposure.
-

All other users**WARNING**

- Use of controls, adjustments of performance or procedures other than those specified in this manual may result in hazardous radiation exposure.

This is a semiconductor laser. The maximum power of the laser diode is $8.8 \times 10^{-4} \text{W}$ and the wavelength is 770-810 nm.

For Denmark**ADVARSEL**

- Usynlig laserstråling ved åbning, når sikkerhedsafbrydere er ude af funktion. Undgå udsttelse for stråling. Klasse 1 laser produkt der opfylder IEC60825 sikkerheds kravene.

For Finland, Sweden**VAROITUS!**

- Laitteen käyttäminen muulla kuin tässä käyttöohjeessa mainitulla tavalla saattaa altistaa käyttäjän turvallisuusluokan 1 ylittävälle näkymättömälle lasersäteilylle

**VARNING**

- Om apparaten används på annat sätt än i denna bruksanvisning specificerats, kan användaren utsattas för osynlig laserstråling, som överskrider gränsen för laserklass 1.

**VARO**

- Avattaessa ja suojalukitus ohitettaessa olet alttiina näkymättömälle lasersäteilylle. Aja katso sateeseen.
-

**VARNING**


- Osynlig laserstråining när denna del är öppnad och spårren är urkopplad. Betrakta ej stråien.
-

For Norway**ADVARSEL**

- Dersum apparatet brukes på annen måte enn spesifisert i denne bruk-sanvisning, kan brukeren utsettes for usynlig laserstråling som overskrider grensen for laser klasse 1.
-

Dette er en halvleder laser. Maksimal effekt til laserdioder er $8.8 \times 10^{-4} \text{W}$ og bølgelengde er 770-810 nm.


WARNING LABEL

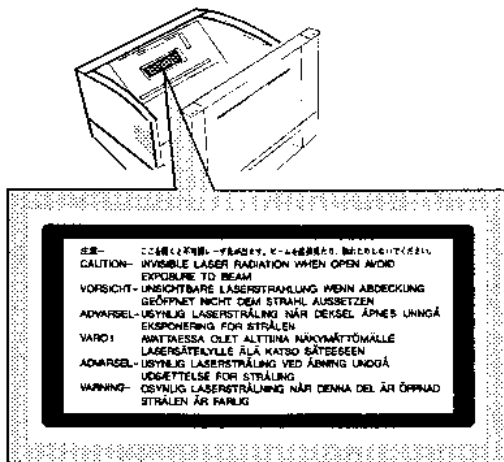

OZONE RELEASE (For all Users)

During printer operation, a small quantity of ozone is released. This amount is not large enough to cause any adverse affects or harm. However, be sure the room where the machine is being used has adequate ventilation, especially if you are printing a high volume of materials, or if the machine is being used continuously over a long period.

WARNING LABEL

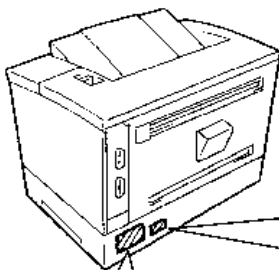

クラス1 レーザ製品
CLASS 1 LASER PRODUCT
LASER KLASSE 1 PRODUKT

MINOLTA CO., LTD
2-1-1, Tsukaguchi, Yamato-cho, Neyagawa-shi
Aichi-ken 462, Japan

MANUFACTURED :

THIS PRODUCT COMPLIES WITH IEC 60825-1
CHAPTER 1, SUBCHAPTER 1.1. CLASS 1

<p>WARNING</p> <p>此製品はレーザー光線を放射する可能性があります。レーザー光線は目や皮膚を傷める可能性があります。レーザー光線を直接目や皮膚に照射しないでください。レーザー光線が反射する表面を避けてください。</p> <p>• Este clasa 1 dispozitiv emită raze de laser care pot răni ochii sau pielea.</p> <p>• Nu direcționați razele de laser în direcția ochilor sau a pielii. Evitați suprafețele reflectante și evitați suprafețele care pot reflecta razele laser.</p>	Model	MSP
	Input	230 V~ 50 Hz
Total	750 W 4.0 A	
<p>UL LISTED 1,2E</p> <p>Serial No. MINOLTA CO., LTD. Made in Japan</p>		

Model	MSP 3030
Input	230 V~ 50 Hz
Total	750 W 4.0 A
<p>CE</p> <p>Serial No. MINOLTA CO., LTD. Made in Japan</p>	

2 Precautions

2.1 Installation Precautions

Installation Site

Placement of the unit in the environment described below will ensure optimal performance throughout the long life of service for which it was designed.

1. A well-ventilated place.
2. An area which is free from ammonia or other organic gases.
3. A place which has easy access to a power outlet so that the unit may be easily plugged in and unplugged.
4. Any area free from direct sunlight.
5. A place which is out of the direct air stream of an air conditioner, heater or ventilator and is not subject to extremely high or low temperatures or humidity.
6. A stable location with a flat surface that is not subject to undue vibration.
7. A place that is free from any object that would block the heat exhaust duct of the printer.
8. A place away from curtains or anything else that is easily flammable.
9. An area that is safe from spilled water or other liquids.
10. A dust-free location.



...

NOTE:

If the Scanner is to be located near a window, do not face the Screen towards the window.

Power Source

The power source voltage requirements are as follows:

1. Use a power source with minimal voltage fluctuation.
Power Source: 50Hz-60Hz
Voltage fluctuation: within $\pm 10\%$
Frequently fluctuation: within $\pm 3\%$
2. Be careful not to exceed the capacity of the outlet, especially when sourcing other appliances from the same outlet.
3. The outlet should be located near the unit and be easily accessible so that the power cord can be unplugged immediately if necessary.
4. NEVER connect any other appliances or machines by means of a multiple socket to the outlet being used for the unit.
5. If an extension cord is needed, use one with a capacity greater than the power consumption of the unit.
6. Make sure that the power cord and extension cord do not become caught in any mechanism of the system. Do not allow either the power or extension cord to become caught underneath the weight of the unit.

Grounding


To prevent electrical shocks caused by electrical leakage, always ground the printer.

1. Connect the grounding wire to:
 - The ground terminal of the outlet.
 - A grounding contact that complies with the local electrical standards.
2. NEVER connect the grounding wire to a gas pipe, the grounding wire for a telephone, or a water pipe.

Space Requirements


Scanner:

There should be a clearance of the following dimensions between the wall and the rear of the unit as well as its right and left sides to provide ample space for the ventilation ports to dissipate heat.

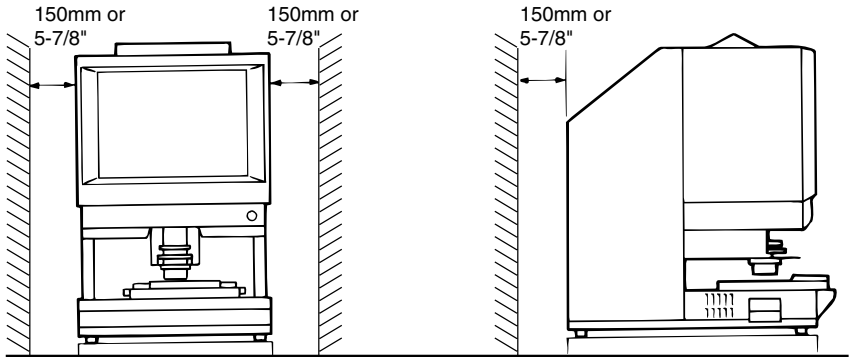

System Printer (MSP 3000):

For ease of operation, maintenance and replenishment of supplies, the minimum clearance diagrammed below is required. Install the unit in an area that allows easy access.

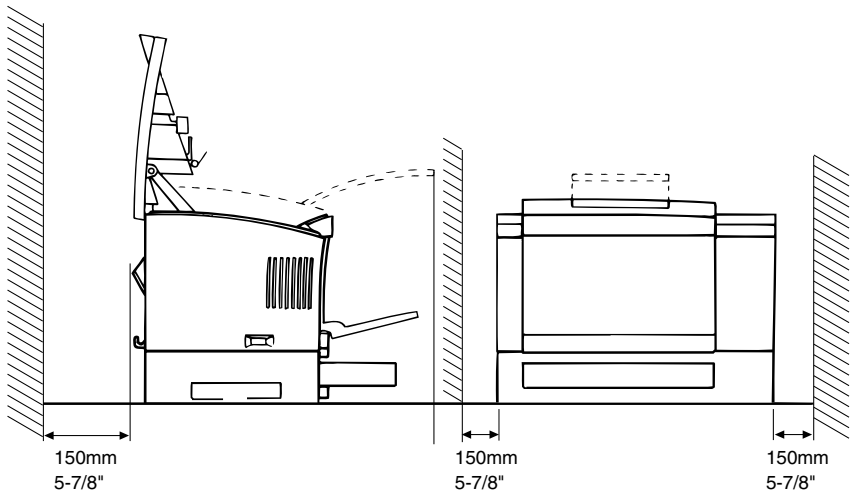

Operating Environment

The environmental requirements for operating the system are as follows:

Temperature: 10°C to 35°C with a fluctuation of 10°C per hour.

Humidity: 15% to 85% with a fluctuation of 20% per hour.

Using the Printer

To ensure the optimum performance of the printer, follow the precautions listed below:

1. NEVER open any Cover, or turn OFF the printer during printing.
2. NEVER bring any magnetized object or flammable gas or liquid close to the printer.
3. ALWAYS insert the Power Plug all the way into the outlet.
4. ALWAYS provide good ventilation when making a large number of continuous prints.



NOTE

Locate the Printer in a Well Ventilated Room

- A minimal amount of ozone is generated during normal operation of the printer. An unpleasant odor may, however, be created in poorly ventilated rooms during extensive printer operations. For a comfortable, healthy, and safe operating environment, it is recommended that the room be well ventilated.
-

Care of Printer Supplies

Use the following precautions when handling the printer supplies (Imaging Cartridge, paper, etc.).

1. Avoid storing the supplies in any of the following places:
 - A place subject to direct sunlight. The Imaging Cartridge should not be exposed to fluorescent light, either.
 - A hot place or near an open flame.
 - A humid place.
 - A dusty place.
2. Store paper, which has been removed from its wrapper but not loaded onto the print tray, in a sealed plastic bag in a cool, dark place.
3. Only use Imaging Cartridges that are exclusively designed for use with this printer.
4. Keep supplies out of the reach of children.
5. If your hands become soiled with toner, wash them with soap and water immediately.




NOTE

- Whenever the Imaging Cartridge is removed from the printer, immediately wrap it in a heavy cloth to protect it from light.
-

3 Scanner

3.1 System Overview

Scanner

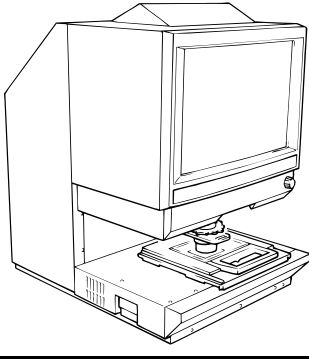

Projection Lenses

Single-Focus Lens



7.5x

Zoom Lenses



7-7.5x



9-16x



13-27x



20-50x

 
- Prism
- Manual Frame Masking Unit
- AF Lens Modification Kit
- Auto Focus Unit
- Foot Switch Kit

Film Carriers


FC-5




RFC-21/22A

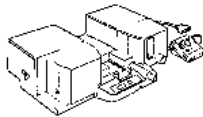


RFC-9B

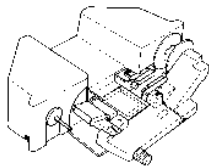


RFC-15A

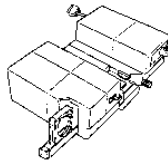

UC-2

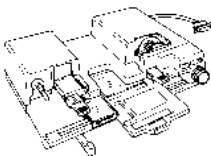


RFC-15M

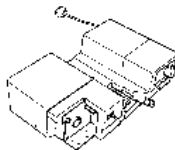


Controllers


MARS C-4

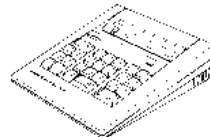

MARS MINI 2

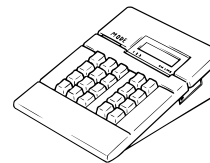

ACF-7

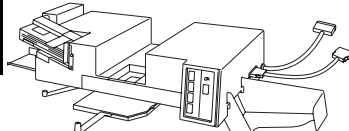


3.2 System Configuration

This Scanner is available in the following configurations.


PR Mode (connected to a printer)

The Scanner is connected to a dedicated printer, allowing scanned images to be printed out directly.

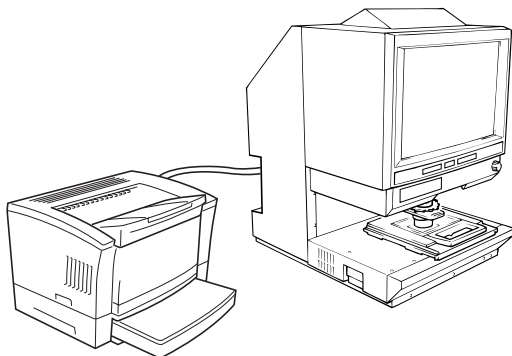

PC Mode (connected to a personal computer)

The Scanner is connected to a personal computer and the scanned images can be uploaded to the computer.

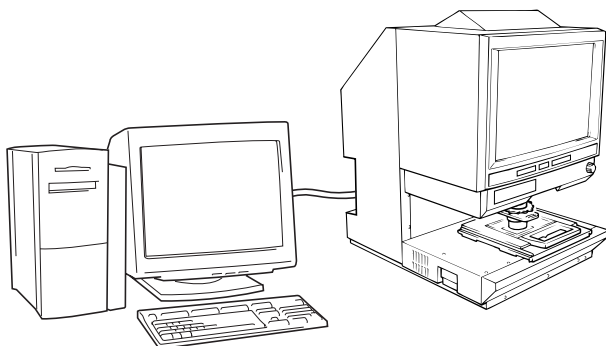


Connection to a personal computer and printer can be switched using Control Panel. Refer to "Selecting the Connection Mode" on page 3-42.


For except USA and Canada area:

An optional PC interface kit is required for connection to a Personal Computer. Contact the authorized dealer for details.

3.3 Parts of the Scanner

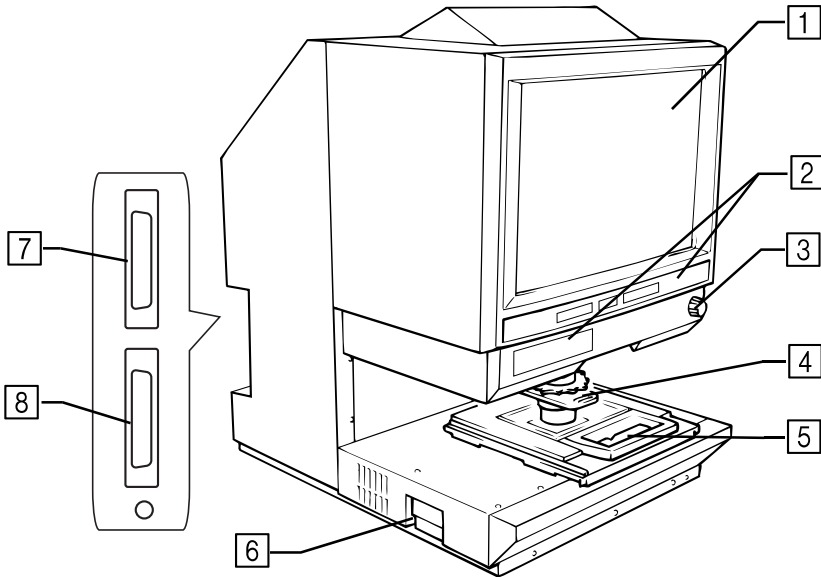


- | | |
|--------------------------------|--|
| 1. Screen: | The image taken from the film is projected here for viewing. The frame on the Screen marks the data reading range. |
| 2. Control Panel: | Many operations are controlled from the keys and indicators provided here. |
| 3. Image Rotation Knob: | Used to turn the Prism Unit built into the Scanner, turning the image on the Screen. |
| 4. Projection Lens (Optional): | Used to change the size of the image on the Screen. |
| 5. Fiche Carrier 5 (Optional): | Supports the viewing of microfiche. |
| 6. Projection Lamp Unit: | Contains a Projection Lamp (halogen lamp) which projects the film image onto the Screen. |
| 7. Printer Connector: | Connects the scanner to the printer through an interface cable. |
| 8. SCSI Connector: | Connects the scanner to the Personal Computer through a SCSI cable.
USA and Canada area: Standard
except USA and Canada area: Option |

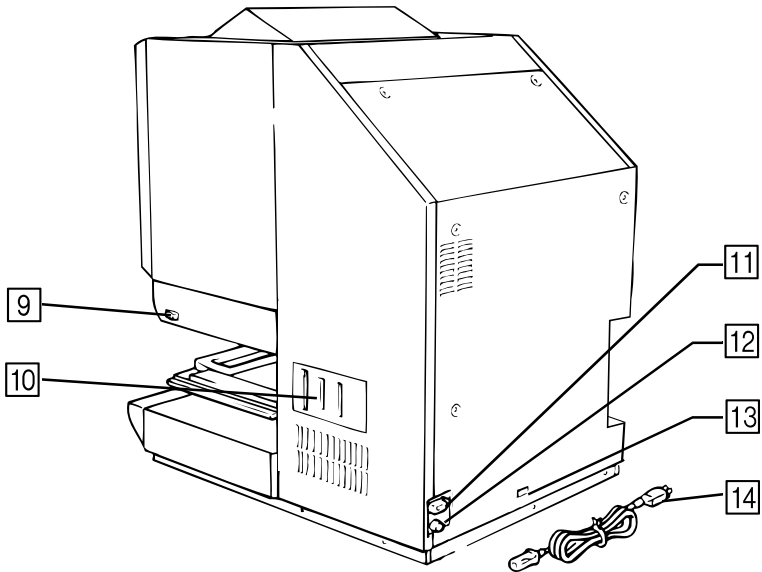

- | | |
|------------------------|---|
| 9. Power Switch: | Used to turn power to the unit ON and OFF. |
| 10. Connectors: | Provides connection points for the various options (Film Carrier and Controller). |
| 11. Power Cord Socket: | Plug the power cord furnished with the Scanner into this socket. |
| 12. Fuse Holder: | Protects the circuit from overloading.
(Ratings : 6A, 250V) |
| 13. Total Counter: | Shows the total number of prints made regardless of paper size. |
| 14. Power Cord: | Connects the Scanner to the power outlet. |

3.4 Control Panel Keys and Indicators

Control Panel 1 (Basic)

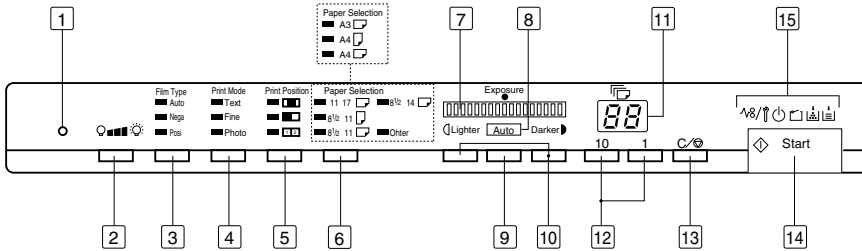

1 Memory Input Key

To store one of the following functions into the memory of the Scanner, first set one of the functions on Control Panels 1 and 2 and then press this button with the head of a pen or other device. The next time the scanner is turned ON, that function will appear as a default setting until a new one is entered. (Maximum three kind of setting can be memorized.)

- 1) Negative or positive
- 2) Print mode
- 3) Print position*
- 4) Paper size*
- 5) Print image density
- 6) Exposure mode
- 7) Centering or Fit
- 8) Manual Masking
- 9) Auto Masking
- 10) Auto Skew Correction
- 11) Horizontal Area setting
- 12) Vertical Area setting
- 13) Electrical Zoom magnification
- 14) Resolution
- 15) Image Distortion Correction

*If the current paper tray or cassette is different from that loaded when the Paper size setting was made, Center Image Print is selected for the print position and the current paper size is selected.



If you do not press the pinhole for at least 60 seconds after a setting has been made with the Auto Reset function set to ON, the previous setting remains valid. → See page 5-3.

2 Lamp Illuminance Key

Use to manually adjust the Projection Lamp illuminance.
When the Projection Lamp is OFF, it can be turned ON again by pressing any key.

3 Film Type Key

Rotates between Auto, Nega, and Posi each time the key is pressed.

Auto: The scanner automatically determines between the film type options of negative or positive for print production.

Nega: Select when using negative film. Dark and light values of the print will be reversed.

Posi: Select when using positive film. Dark and light values of the print will be consistent with the image on film.

4 Print Mode Key

Allows you to fine tune the image quality of the print according to the original being used. Rotate between Text, Fine and Photo with every press of this key.


Text: For use with text images.


Fine: For use with lower grades of film.

 
 

Photo: For use with photo images.


5 Print Position Key

Selects the portion of the screen image to be printed.

 Center: The image in the center of the screen is printed.

 Left: The image on the left half of the screen is printed.

  Page-by-Page*: The images on both the left and right sides of the screen are printed consecutively on 8-1/2" x 11" (A4)  sheets of paper.

* Page-by-Page printing is only available when 8-1/2" x 11" (A4)  paper is selected.

6 Paper Selection Key



PC mode:



Select the scanning size.



When scanning the film image except standard size, the Other lamp is lit.

PR mode:

Selects the size of paper to be used for printing. When the printer's Paper Feeding Tray is loaded with 8-1/2" x 11" (A4)  paper and the paper loaded into the Paper Cassette is 11" x 17" (A3) , pressing this key will rotate the Auto, Paper Feeding Tray and Paper Cassette options.

* Both the 8-1/2" x 11" (A4)  and 11" x 17"(A3)  indicators will light up when Auto is selected.

7 Exposure Display

Indicates the current density level of the printed image.

8 Exposure Mode Indicator

Auto Exposure mode is indicated when the green Auto light is on. The green Auto light turns off when the Scanner is in the Manual Exposure mode.

9 Exposure Mode Key

Press to select between the Auto or Manual Exposure mode.

10 Exposure Adjustment Keys

Use this key to adjust the image density of the image to be printed during the Auto or Manual Exposure mode.

The Darker key supports darker image density and the Lighter key supports lighter image density.

11 Multi-Print Display

Shows the number of prints set to be made. Also displays corresponding codes in the event of a malfunction or paper misfeed. The blinking number in this display indicates a print cycle in progress.

12 Multi-Print Keys

Use these keys to input the desired number of prints to be made.

10: Pressing this key increases the number of prints to be made in increments of ten (10, 20, 30 ... 90, etc.)

1: Pressing this key increases the number of prints to be made in increments of one (1, 2, 3 ... 9, etc.)

* This function is only available on the PR mode.

13 Clear/Stop Key

Press to clear the setting on the Multi-Print Display, resetting it to "1" or to stop a multi-print cycle.

* This function is only available on the PR mode.

14 Start Key

Press to make a print (scan) of the image shown on the Screen.

15 Indicators



Misfeed/Call-Tech.-Rep. Indicator:

Lights up when a paper misfeed or malfunction occurs in the system.



Wait Indicator:

Lights up when the Scanner is initializing.
Lights up when the Printer is warming up.



Closure Failure Indicator:

Lights up if the Printer cover is open.




Add Toner Indicator: Blinks when the Imaging Cartridge of the Printer is running out of toner and lights up when the cartridge has completely run out of toner.



Add Paper Indicator: Lights up when the Printer is not loaded with the paper size selected for use, or when either the Paper Feeding Tray or Paper Cassette has run out of paper with Auto (auto paper selection) selected.

Control Panel 1 (Shift Function)

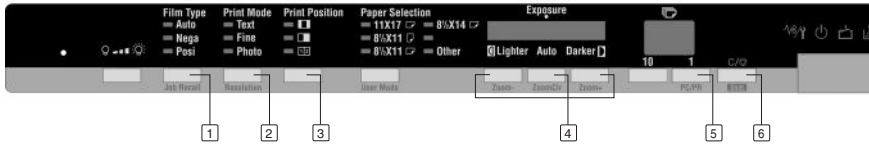

1 Job Recall Key

When this key is pressed together with the Shift Key, the program registration locations (1J, 2J and 3J) are called. Each time this key is pressed while the Shift Key is held down, the display is switched in order of 1J → 2J → 3J.

2 Resolution Key

When this key is pressed together with the Shift Key, the resolution of the Scanner is set.

When the Scanner is connected to the Printer: 4H and 6H

When the Scanner is connected to the PC: 2H, 3H, 4H, 6H and 8H

* 4H represents 400dpi and 6H represents 600dpi.

3 User Mode Key

Pressing this key together with the Shift Key enters the unit into the User Mode. See p. 5-4 User Mode.

4 Zoom Key

When this key is pressed together with the Shift Key, the electrical zoom magnification is set.

Zoom+: When this key is pressed together with the Shift Key, the magnification is increased by an increment of 0.01X (up to 2.00X).

Zoom clr: When this key is held down together with the Shift Key for one second, the standard magnification is resumed.

Zoom-: When this key is pressed together with the Shift Key, the magnification is decreased by a decrement of 0.01X (down to 0.50X).


5 PC/PR Key

When this key is pressed together with the Shift Key, the connection to the PC or to the Printer is selected.

6 Shift Key

Executes an expansion function when being pressed together with the intended function key.


Control Panel 2

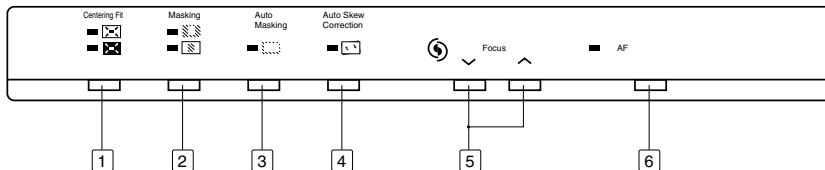


1 Centering/Fit Key

When this key is pressed, the setting rotates from OFF to the Centering and Fit functions. Auto Masking* is automatically enabled when the Centering function is selected.

* Auto Masking is not enabled if Trimming is selected.


 Centering: The system centers all masked images onto the printed page.

 
 Fit: The system enlarges the image on the screen to fill the page when printed. Enlargement is only to the full length or width of the paper, whichever is achieved first.

Centering and Fit are not disabled when Auto Masking is selected.

2 Masking Key

When pressed, this key rotates from OFF to the Trimming or Masking functions if the system is equipped with an optional Manual Masking Kit.

 Masking: Prints only the image outside of the area that is defined on the Screen.

 Trimming: Prints only the area of the image that is defined on the Screen.

- If Trimming is selected from the OFF state, the previously entered settings for Centering/Fit and Manual Masking are applied.
- From Trimming, when Masking is selected, the Centering/Fit setting is disabled and the previous settings for the Masking area are applied.
- The manual masking area will be cancelled whenever OFF is selected from the Masking state.

* Neither Trimming nor Masking are available through the Auto Masking function.

3 Auto Masking Key

This key is used to turn the Auto Masking function ON or OFF. The Auto Masking function will omit the frame (non-image area) of a printed film image.

- The previous Centering/Fit setting is applied whenever ON is selected from the OFF state.
- If OFF is selected from the ON state, Centering/Fit is disabled.
- * Auto Masking is not applicable with the Masking or Trimming settings.
- * This function is only available on the PR mode.

4 Auto Skew Correction Key

This key is used to turn the Auto Skew Correction function ON or OFF. When this function is applied, the Auto Skew Correction LED will turn on and the system will correct any skew of the image during printing.

- * After printing, the skew can be reset or retained. Contact your Technical Representative for more information.

5 Manual Focus Keys

Press repeatedly to manually adjust the focus of the image on the Screen.

6 AF (Auto Focus) Key

When this key is pressed, the Auto Focus LED will turn on and the system will automatically find the optimum focus for the image on the Screen. Once the image is in focus, the Auto Focus LED will turn off.

 


In the event that an image is not properly centered on the Screen or the contrast and density of the image is such that it causes the Auto Focus to error, the Auto Focus LED will blink. The LED will turn off when the Manual Focus keys or the Auto Focus key is pressed.


When Misfeed/Call-Tech.-Rep. Indicator Lights up

This indicates that a paper misfeed or malfunction has occurred in the system. Check the code shown on the Multi-Print Display and perform the misfeed clearing procedure or the Call-Tech.-Rep. procedure.

- **Misfeed Clearing Procedure**
Locate the misfeed using the code and perform the misfeed clearing procedure. (Refer to page 4-10.)



Display	Code	Description
	P0	The wrong size paper has been loaded in the Paper Feeding Tray. Load the set size paper in the set direction. This code also appears when two or more sheets of paper are taken up at the same time.
	P1	A misfeed near the paper take-up section.or more sheets of paper are taken up at the same time.
	P2	A misfeed near the Imaging Cartridge.
	P3	A misfeed near the Fusing Unit
	J0	An aperture card misfeed has occurred in ACF-7. Remove the card that has been misfed in ACF-7.

 - **Call-Tech.-Rep. Procedure**
A malfunction has occurred in the system.







Display	Location	Code	Description
	Scanner	C1	Optical path switching failure
		C2	A Scanner malfunction
		C3	A Condenser Lens Motor malfunction Shading Correction malfunction
		C4	A Fan Motor malfunction
		C5	Imperfect auto focusing
	Printer	C6	A Fusing Unit malfunction
		C7	An LED malfunction
		C8	A Polygon Motor malfunction
		C9	A Main Drive Motor malfunction
		CA	A Fan Motor malfunction
	Scanner Printer	Cb	A Communication malfunction (Printer)
		CL	A Printer Clock malfunction
	Scanner PC	CC	A Communication malfunction (PC)
		Cd	A Communication malfunction (ACF-7)





After turning the power to the system OFF and unplugging its power cord from the electrical outlet, contact your Technical Representative, being sure to provide him or her with the currently displayed code (Above code).

● Other Malfunctions

Display	Code	Description
—	E1	The power to the printer is off or there is a problem with the connection of the interface cable to the printer. Turn on the printer or make sure that the interface cable is securely connected.
	E2	The upper cover of the printer is not closed. Make sure that it is completely closed.
	PE	Paper Empty Indicator Lights up when the Printer is not loaded with the paper size selected for use, or when either the Paper Feeding Tray or Paper Cassette has run out of paper with Auto (auto paper selection) selected.
—	PC	The Scanner is connected to the PC and ready for scanning by pressing the Start Key. This display is blinking when the Scanner is in operation.
	Pc	The Scanner is not connected to the PC. Turn ON the PC or connect the Scanner to the PC with the interface cable.
	L1	The Lens is not mounted or is loose. Check the Lens for correct installation and reinstall it as necessary.
	L2	The Projection Lamp is burned out. Replace the lamp. *If the lamp goes out during a print cycle, a blank print may be output.
	01	Magnification warning display Did the modification of the magnification by an electronic zoom. Lights up when setting besides the standard magnification.

     3.5 Image Processing Functions

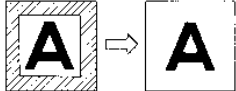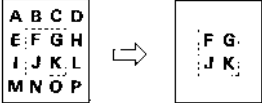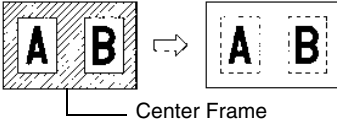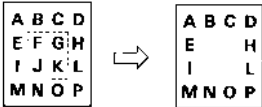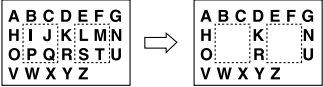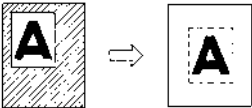Screen Image → Print Image	Description
<p>Auto Masking (1 Frame)</p> 	<p>The system masks the black bands that run along the edges of the image.</p>
<p>Trimming (1 Frame)</p> 	<p>The system masks everything but the center of the image.</p>
<p>Trimming (2 Frames)</p> <p>*When 11" x 17" (A3) is selected</p> 	<p>The system masks the frames surrounding the center of both images. *The Manual Frame Masking Kit (option) is required.</p>
<p>Masking (1 Frame)</p> 	<p>The system masks the center of the image appearing on the screen through the Manual Masking Panel function. *The Manual Frame Masking Kit (option) is required.</p>
<p>Masking (2 Frames)</p> <p>*When 11" x 17" (A3) is selected</p> 	<p>The system masks two areas of the center of the image appearing on the screen through the Manual Masking Panel function. *The Manual Frame Masking Kit (option) is required.</p>
<p>Auto Centering</p> 	<p>The system generates an image that is centered on the printed page, from an image on the screen with a masked frame.</p>

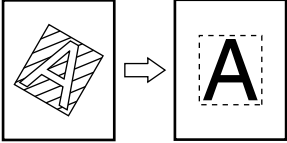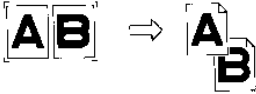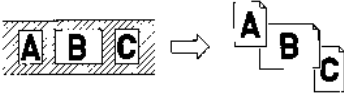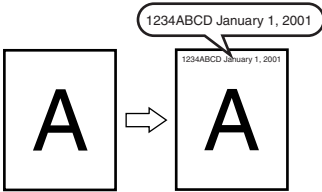  Screen Image → Print Image	Description
<p>Auto Skew Correction</p> 	<p>The unit automatically correct any skew of the image when printed.</p>
<p>Page-by-Page Print</p> 	<p>The system takes two film images that appear side-by-side on the screen and prints them on separate 8-1/2" x 11" (A4) sheets of paper.</p>
<p>Auto Paper Select Print</p> 	<p>The system automatically detects either half-size or full-size film to determine the size of paper for printing (half-size film is printed on 8-1/2" x 11" (A4) paper, full-size film is printed on 11" x 17" (A3) paper).</p>
<p>Imprint</p> 	<p>Time, date, and messages can be included on printout. If you would like to use this function, ask the authorized Technical Representative.</p>


3.6 Turning the Power On and Off

Turning ON


1 Press the Power Switch of the scanner to the | (ON) position.

2 PR Mode:
Press the Power Switch of the printer to the | (ON) position.

PC Mode:
Turn on the Personal Computer.

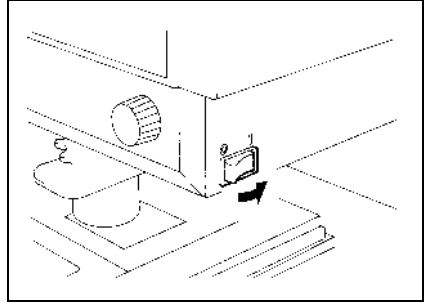


3 The indicators on Control Panel 1 light up and the system starts the initialization operation. When the Wait Indicator goes out, the system is ready for printing.

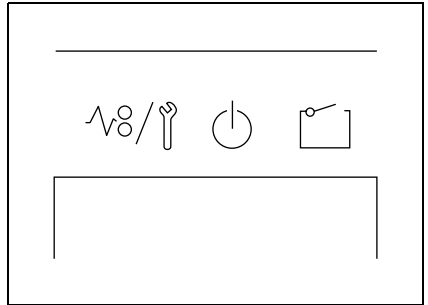

If you load the film in the film carrier and press the start button while the printer is warming up, you can scan and memorize the film image of about 9 pages (Letter or A4 size/400dpi) into this system.

And then, printer allows that print process to be started as soon as the printer completes warming up.

 
At this time, both ends of Exposure Display blink.

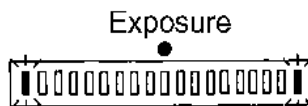

If you want to disable this function, ask the authorized Technical Representative to make change the system setting.

Turning OFF

- 1 Press the Power Switch of the scanner to the ○ (OFF) position.

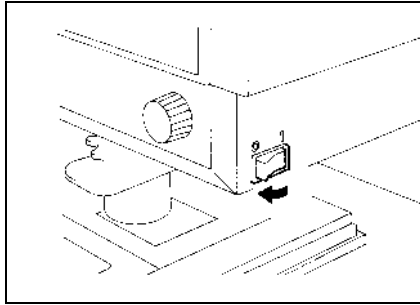

3.7 Auto Power Save Mode

The unit enters the Auto Power Save mode if it is left to stand idle for a predetermined period of time. When the unit enters the Auto Power Save mode, power to the Scanner projection lamp and the printer heater is automatically shut down to save power consumption.

A User Mode function is available that allows the user to set the time it takes the unit to enter the Auto Power Save mode. The setting options are as follows:

- Auto Power Save (15 min.)
- Auto Power Save (30 min.)
- Auto Power Save (60 min.)

* Only the setting of “Auto Power Save (15 min.)” complies with the Energy Star standard.



NOTE:

The Auto Power Save Mode can also be disabled. Ask the authorized Technical Representative if you want to disable this function.

Segments of the Multi-Print Display light up and go out sequentially in the clockwise direction when the unit is in the Auto Power Save mode.

To let the unit leave the Auto Power Save mode, press any key on the control panel. At this time, the Scanner projection lamp lights up steadily and the printer is set into the warm-up condition.



NOTE:

**For the USA and Canada only:
The Auto Power Save function becomes available for setting only if the Energy Star kit is mounted on the Scanner.**

3.8 Printing or Scanning Procedure

Here is an outline of the printing or scanning procedure:

1. Load the film

The procedure for loading film is determined by the type of Film Carrier (optional) that is being used. Review the Operator's Manual that came with your Film Carrier for more information.

2. Select and replace the Lens → See page 3-20, 3-21.

Select the appropriate lens for the type of film being used and install it in the Scanner.

3. Select the Connection Mode → See page 3-43.

Select either PC connection mode or PR connection mode.

4. Zooming, focusing and image rotation → See page 3-23.

Use the Zooming Ring Dial to frame a desired range of the image on the screen for printing.
Use the Focus keys to sharpen the clarity of the image on the screen.
Use the Image Rotation Knob to orient the image on the screen.
*Press the Auto Skew Correction key to have the skew of the image automatically corrected.

5. Select the paper size → See page 3-27.

Select the appropriate paper size. If both A4 and A3 are loaded, the system can select the correct size automatically.
Use Auto (auto paper selection). → See page 3-28.

6. Select the print position → See page 3-29.

Use the Print Position key to select between Left, Center or Page-by-Page.

7. Select the image density → See page 3-30.

Use Auto Exposure to automatically determine the optimum image density for the application.
The image density can also be set manually by using the Exposure Adjustment keys (Darker or Lighter).

 
8. Enter the number of prints to be made → See page 3-32.

Using the Multi-Print keys (10, 1), enter the number of prints to be made.

9. If required, adjust the image processing functions.

Auto Masking → See page 3-33.
Manual Masking → See page 3-35.
Image Centering → See page 3-39.

10. Press the Start key.

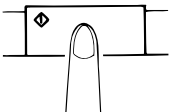

The printing of the image appearing on the screen is initiated after the Start key is pressed.

3.9 Selecting a Projection Lens

Projection Lenses come in the following five types. Select the one that corresponds to the film being used.

Projection Lens Types 1 TYPE1: 7.5x, 7-7.5x

2 TYPE 2: 9-16x

3 TYPE 3: 13-27x

4 TYPE 4: 20-50x

Film		Scanning Size			
		11" 17" (A3)	8-1/2" 11" (A4)	B4	3-2/3" 8-1/2"
35mm	Half	<input type="checkbox"/> 2 or <input type="checkbox"/> 3	<input type="checkbox"/> 2	<input type="checkbox"/> 2	<input type="checkbox"/> 2
	Full	<input type="checkbox"/> 2	<input type="checkbox"/> 1	<input type="checkbox"/> 1	-
16mm	Half	<input type="checkbox"/> 4	<input type="checkbox"/> 3	<input type="checkbox"/> 3	<input type="checkbox"/> 3 or <input type="checkbox"/> 4
	Full	<input type="checkbox"/> 3 or <input type="checkbox"/> 4	<input type="checkbox"/> 2	<input type="checkbox"/> 2	<input type="checkbox"/> 2 or <input type="checkbox"/> 3
Source Document	60	<input type="checkbox"/> 3 or <input type="checkbox"/> 4	<input type="checkbox"/> 3	<input type="checkbox"/> 3	<input type="checkbox"/> 3 or <input type="checkbox"/> 4
	98	<input type="checkbox"/> 4	<input type="checkbox"/> 3 or <input type="checkbox"/> 4	<input type="checkbox"/> 3 or <input type="checkbox"/> 4	<input type="checkbox"/> 4
	325	-	<input type="checkbox"/> 4	<input type="checkbox"/> 4	<input type="checkbox"/> 4
	420	-	<input type="checkbox"/> 4	<input type="checkbox"/> 4	-
COM	63	<input type="checkbox"/> 3 or <input type="checkbox"/> 4	<input type="checkbox"/> 3	<input type="checkbox"/> 3	<input type="checkbox"/> 3 or <input type="checkbox"/> 4
	70	<input type="checkbox"/> 3 or <input type="checkbox"/> 4	<input type="checkbox"/> 3	<input type="checkbox"/> 3	<input type="checkbox"/> 3 or <input type="checkbox"/> 4
	80	<input type="checkbox"/> 4	<input type="checkbox"/> 3 or <input type="checkbox"/> 4	<input type="checkbox"/> 3 or <input type="checkbox"/> 4	<input type="checkbox"/> 4
	84	<input type="checkbox"/> 4	<input type="checkbox"/> 3 or <input type="checkbox"/> 4	<input type="checkbox"/> 3 or <input type="checkbox"/> 4	<input type="checkbox"/> 4
	120	<input type="checkbox"/> 4	<input type="checkbox"/> 3 or <input type="checkbox"/> 4	<input type="checkbox"/> 3 or <input type="checkbox"/> 4	<input type="checkbox"/> 4
	208	<input type="checkbox"/> 4	<input type="checkbox"/> 4	<input type="checkbox"/> 4	<input type="checkbox"/> 4
	270	-	<input type="checkbox"/> 4	<input type="checkbox"/> 4	<input type="checkbox"/> 4


This list shows the standard types of film and the recommended zoom ratios of lenses to be used with the system printer.

The size and format of one frame of film may vary depending on the shooting conditions.


Zoom the lens in and out to find the optimum ratio that will fit the scanning size.

3.10 Replacing the Projection Lens


- 1 Take hold of the Prism Holder Lever and push it up to raise the Prism Holder.

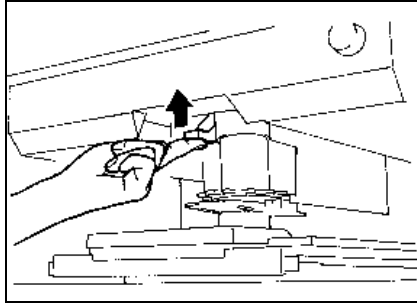

- 2 Pull out the Projection Lens Unit towards the front of the Scanner.

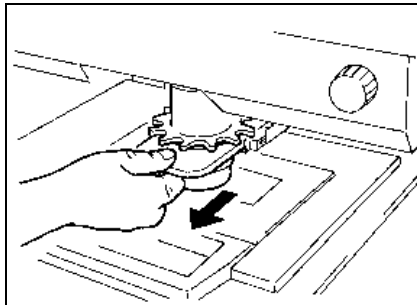


- 3 Slide the new Projection Lens Unit all the way into the Scanner along the Lens Holder Guide.




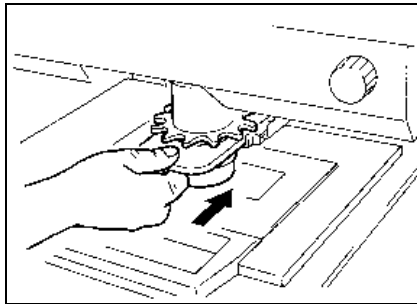


When the Projection Lens Unit is slid into position, the Scanner automatically selects the optimum screen brightness according to the type of lens being used.

3.11 Positioning the Film Image

Marked on the Screen are the size frame markers that correspond to the scanning size. Through zooming and image rotation, and by operating the Film Carrier mounted on the system, position the image on the Screen so that the image fits in the scanning size.

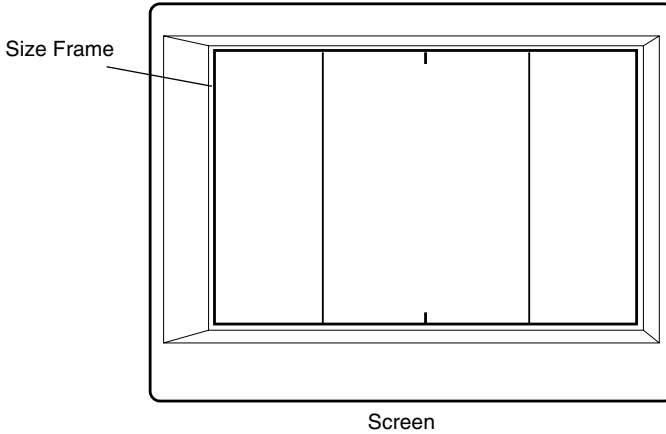

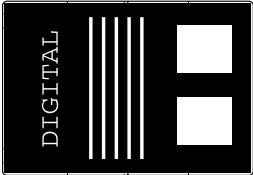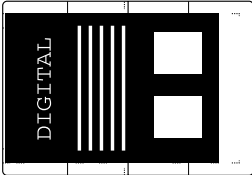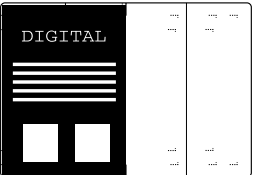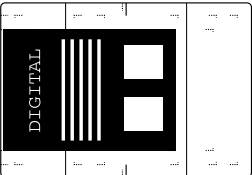
<p>11" x 17" or A3 size</p> 	<p>8-1/2" x 14" size</p> 
<p>8-1/2" x 11" or A4 size</p> <p style="text-align: center;">Vertical</p> 	<p style="text-align: center;">Horizontal</p> 

3.12 Zooming, Focusing, and Image Rotation

Zooming

- 1 Turn the Zooming Ring Dial (blue) to bring the image on the Screen into the print size frame.

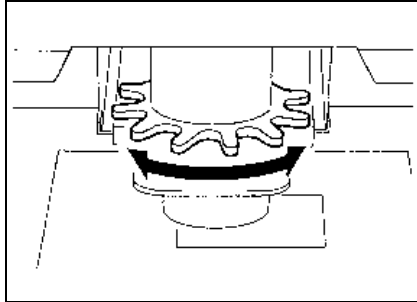

Focusing

- 1 Center the image on the Screen and then press the AF (Auto Focus) Key to let the Scanner automatically bring the image into focus.
 - * You can use the Focus (Manual Focus) Keys to manually adjust the focus of the image on the Screen. → See page 3-11.



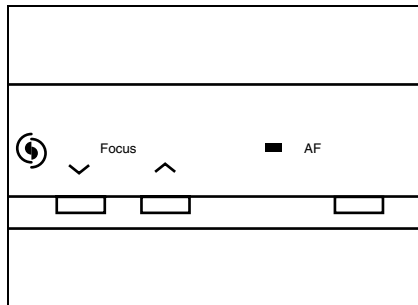


Image Rotation

- 1 Turn the Image Rotation Knob as necessary to turn or correct the skew of the image on the Screen.
 - * When the Image Rotation Knob is turned while holding down the Shift Key, the image quickly rotates by 90°.

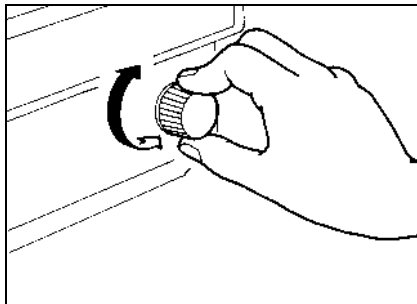


- * If the Auto Skew Correction Key is turned ON, the system will automatically correct any skew of the image when printed.

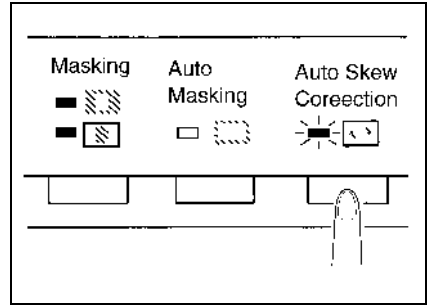

3.13 Selecting the Film Type

Auto


- 1 The system will automatically determine the polarity of the film being used when Auto is selected with the Film Type key.

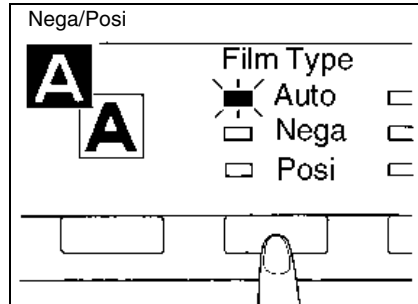

The system cannot determine the polarity of certain types of film. Should this occur, the film type should be selected manually. The system does not detect exterior conditions such as when the glass surface of the Carrier is dirty or scratched.


Nega (negative film)

- 1 If negative film is to be used, press the Film Type Key to select Nega.

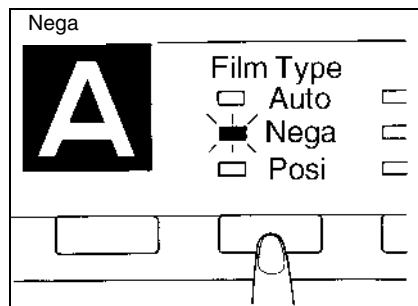

Posi (positive film)


- 1 If positive film is to be used, press the Film Type Key to select Posi.

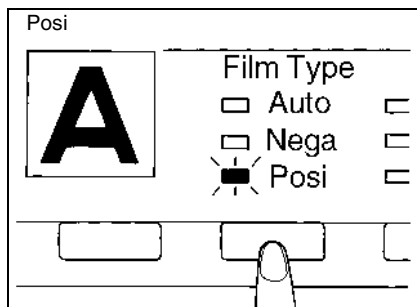

3.14 Selecting the Paper Size

Selecting the Paper Size


- 1 Press the Paper Selection key to select the desired print size. Each time the key is pressed, the system selects a new paper size from the currently available sizes. If the Printer is not loaded with a desired size of paper, to load paper into the printer.

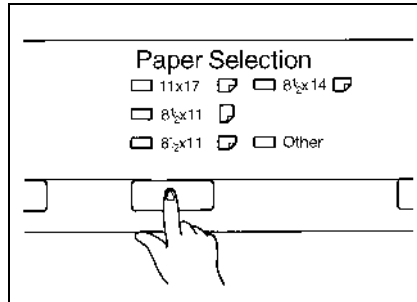


Using the Auto Paper Selection Function

When the Paper Feeding Tray is loaded with 8-1/2" x 11" (A4) paper and the Paper Cassette is loaded with 11" x 17" (A3) paper, this function can be used to automatically select the appropriate size of paper for the current print job.



- 1 Press the Paper Selection key so that both the 11" x 17" (A3) and 8-1/2" x 11" (A4) LEDs light up.

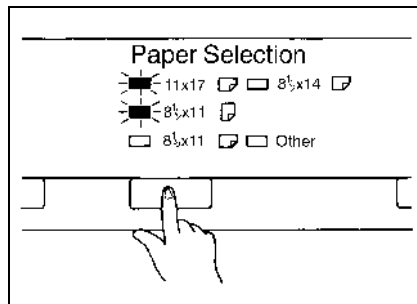

 - 2 The system automatically detects the image area and prints on 8-1/2" x 11" (A4) paper for half-size film and on 11" x 17" (A3) paper for full-size film.

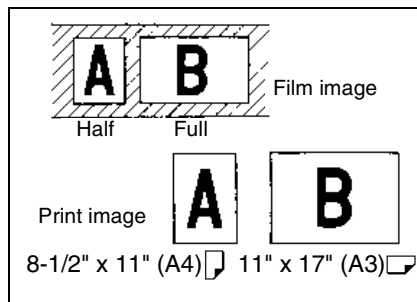







The Auto Paper Selection function can be used only for a combination of 11" x 17" (A3)  and 8-1/2" x 11" (A4) . The Page-by-Page function cannot be selected when the Auto Paper Selection capability is being used.


When a 7.5x or 7-7.5x lens is being used, the Auto Paper Selection function cannot use 11" x 17" (A3) size paper because of the size of the image area.



When Masking or Trimming has previously been selected, the system selects 8-1/2" x 11" (A4) if the defined area is less than 8-1/2" x 11" (A4) size and 11" x 17" (A3) for all other print jobs.

 
Using the Auto Film Format Selection Function

When the Paper Feeding Tray is loaded with 8-1/2" x 11" (A4)  paper and the Paper Cassette is loaded with 8-1/2" x 11" (A4)  paper, this function can be used to automatically select the appropriate size of paper for the current print job.

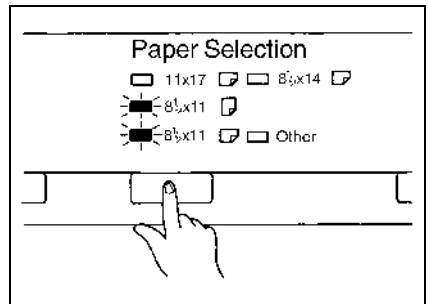- 1 Press the Paper Selection key so that both the 8-1/2" x 11" (A4)  and 8-1/2" x 11" (A4)  LEDs light up.




- 2 When the Start key is the system automatically detects the image area and prints on 8-1/2" x 11" (A4)  paper for portrait film and on 8-1/2" x 11" (A4)  paper for landscape film.

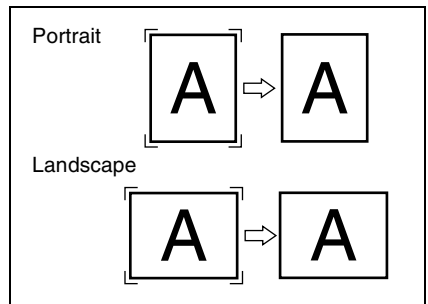

3.15 Selecting the Print Position


Center

- 1 The system prints the image that appears in the center of the screen.

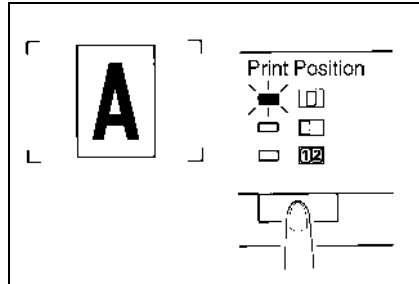


Left

- 1 The system makes a print of the image that appears on the left side of the screen.

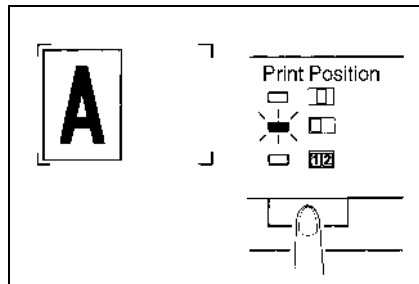

Page-by-Page

- 1 The system prints the images that appear on both the left and right sides of the screen on separate sheets of 8-1/2" x 11" (A4) paper.

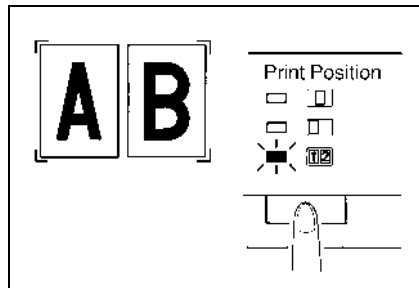


Only 8-1/2" x 11" (A4) paper can be selected for Page-by-Page.

3.16 Selecting the Image Density


Using Auto Exposure

- 1 Press the Exposure Mode key to select the Auto Exposure mode.

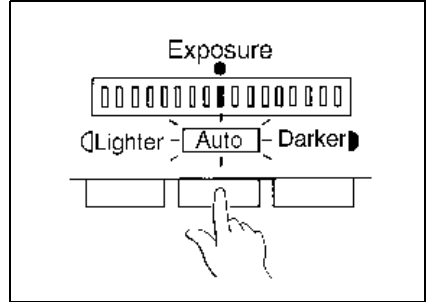


- 2 If the Auto Exposure setting is not satisfactory, press the appropriate Exposure Adjustment key, either Lighter or Darker, to set the desired image density.

Press Lighter ◀
: to make the image lighter.
Press Darker ▶
: to make the image darker.

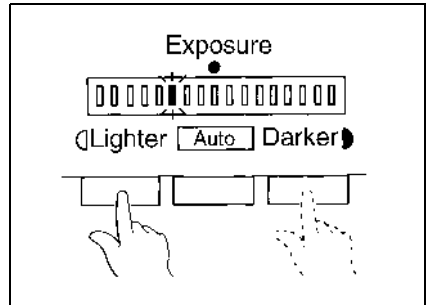


Using Manual Exposure

- 1 Press the Exposure Mode key and select the Manual Exposure mode.

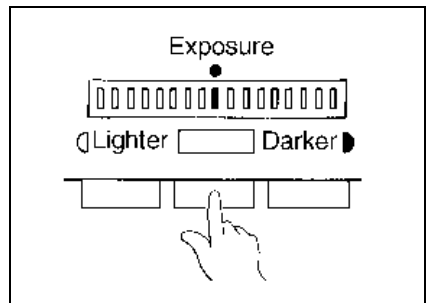

- 2 Press the appropriate Exposure Adjustment key, either Lighter or Darker, to set the desired image density.


Press Lighter ◁
: to make the image lighter.
Press Darker ▶
: to make the image darker.

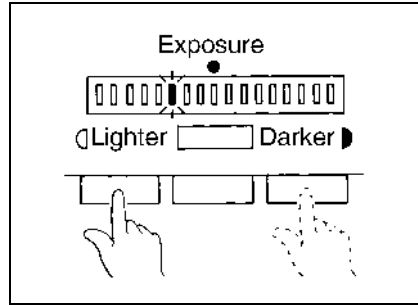

3.17 Entering the Number of Prints to be Made

1 to 9

- 1 Enter the desired number of prints using the Multiprint Key "1".

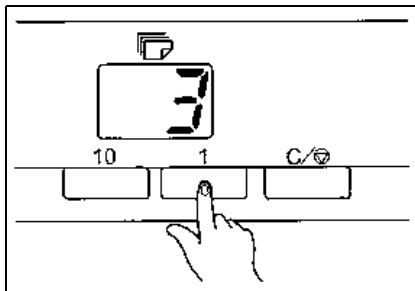


If the "1" key is pressed when "9" is shown on the Multi-Print Display, the number on the display is incremented by one: 10 → 11 → 12 ...

10 to 99


- 1 Set the tens digit using the "10" key.
- 2 Set the units digit using the "1" key.

To set "25," press the "10" key twice and press the "1" key four times.

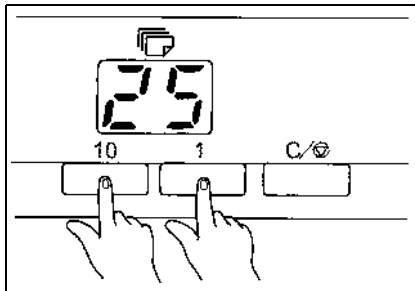

Correcting a Number

- 1 To reset an entry, press the Clear/Stop key, which resets the number on the Multi-Print Display to "1."

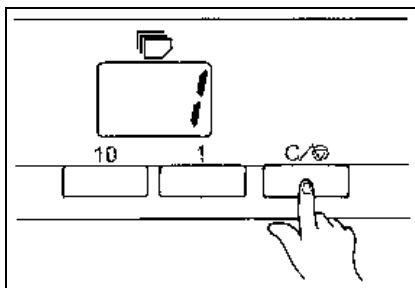


3.18 Using Auto Masking

The Auto Masking function prevents the frame (non-image area) of a film image from appearing on the print.


Selecting Auto Masking

- 1 Press the Auto Masking key to turn ON this function.

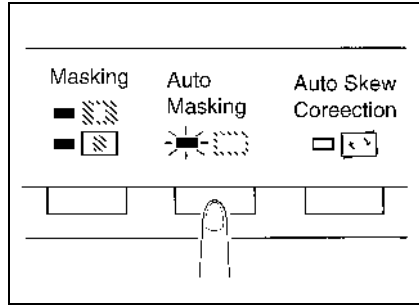


Operating Conditions for Auto Masking


- The image area of the screen must provide at least 45mm horizontally and vertically.
- The width of the frame to be masked must be at least 10mm.

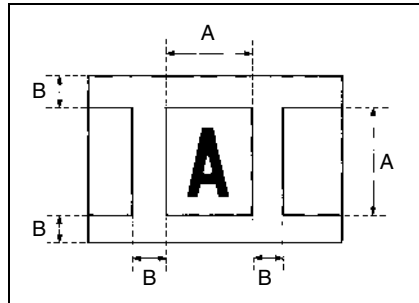

If the film image on the screen does not meet the above requirements, the Auto Masking function will not work properly. Auto Masking is a frame erasing feature. It cannot remove an image from in between two separate frames.

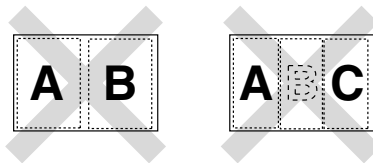

3.19 Manual Masking Panels (Option)

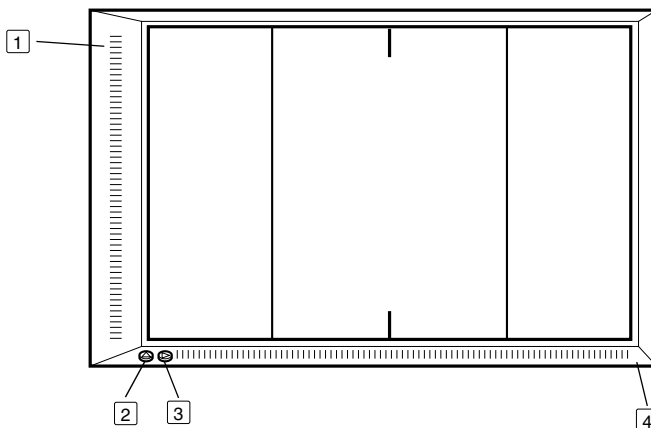

1 Lengthwise Area Indication Panel

Use to specify the print area in the vertical direction of the image on the Screen. The system makes a print of the image corresponding to the Area Keys lit up green. A total of 42 Area Keys are placed at 7-mm intervals.

2 Lengthwise Area Clear Key


Press to clear any print area previously defined in the vertical direction.

3 Crosswise Area Clear Key

Press to clear any print area previously defined in the horizontal direction.

4 Crosswise Area Indication Panel


Use to specify the print area in the horizontal direction of the image on the Screen. The system makes a print of the image corresponding to the Area Keys lit up green. A total of 61 Area Keys are placed at 7-mm intervals.


* When 11" x 17" (A3)  and Page-by-Page are selected, all Keys light up except those on the right and left ends. For your information, the keys on the right and left ends are invalid for the Manual Masking Panels intended for use in the metric areas.

3.20 Using Manual Masking


The optional Manual Masking Kit allows you to specify an area for printing of the displayed image through two separate features, Trimming and Masking.

Selecting Trimming

- 1 Press the Masking key to select  (Trimming).

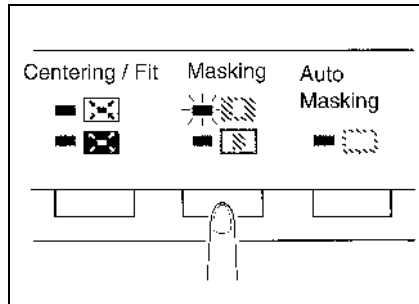


- 2 The lights on the panel light up according to the currently selected paper size and print position.

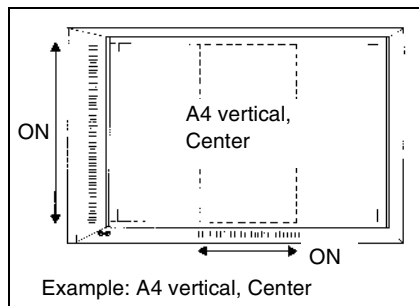

It is possible to print the area specified by the green lights.

Defining an Area

- 1 Define the end points for both the vertical and horizontal areas of the image on the screen using the green lights on the area indication panels.

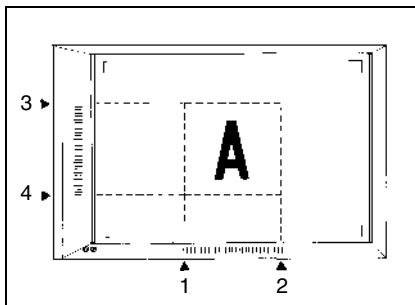


The points defining the vertical and horizontal area can be selected in any order.

Blinking lights on the indication panels indicate an improper entry of the specified area. Specify the area again.

Defining Two Separate Areas

- 1 Define the areas to print by specifying the vertical and horizontal areas as follows:
2 end points for vertical
4 end points for horizontal

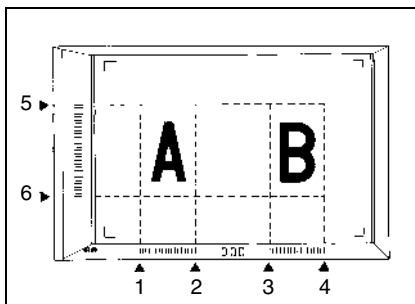


When defining the areas, vertical and horizontal indicators 1, 2, 3, 4, 5, and 6 can be pressed in any order.

If the lights start blinking when the Start key is pressed, it indicates that the print area defined is not available. Specify the area again.

Defining Page-by-Page Print Area

- Using the vertical and horizontal points on the Area Indication Panels, define the print areas of the image on the Screen.

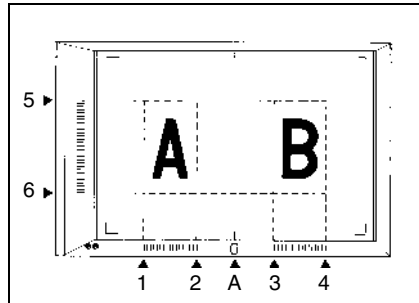

The horizontal indicator marked A does not light up and cannot be used for defining an area.

Four different areas cannot be defined on a single page.

If the Area Keys start blinking when the Print key is pressed, it indicates that the print area defined is not available. Specify the area again.


Paper size must be 11" x 17" (A3) when defining two areas and 8-1/2" x 11" (A4) when defining Page-by-Page print areas.

Paper can be of any size when defining one area.

 
The print area once defined is stored in memory for each paper size and print position. Press the Area Clear Key to clear the area setting.

Clearing a Defined Print Area

- Press the Vertical and Horizontal Area Clear keys to clear the defined print area.
 - Vertical Area Clear Key
 - Horizontal Area Clear Key

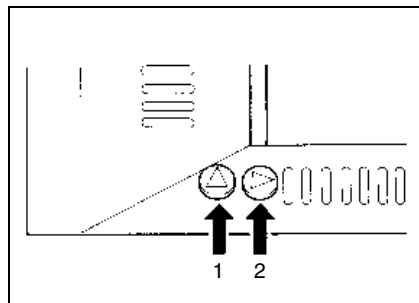


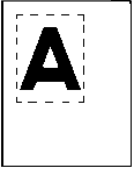






Selecting Masking

Press the Masking key to select  (Masking) when you want to mask a given area of the image.

The basic operation for manual Masking is similar to Trimming. Please refer to the previous procedures on Trimming and defining areas for instructions on performing manual Masking.


3.21 Using Centering and Fit

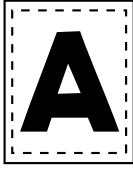Once the image on the Screen has been either "manually trimmed" or "auto masked", the Image Centering function moves the image to the center of the print. The Fit function however, fits the image on the Screen onto the entire surface of the print.

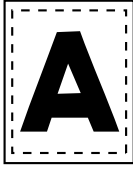	Screen Image	Print Image	
Centering		Centering: OFF 	Centering: ON 
		Fit: OFF 	Fit: ON 
Fit		Fit: OFF 	Fit: ON 

Centering


- 1 Press the Centering/Fit key to turn ON Centering.

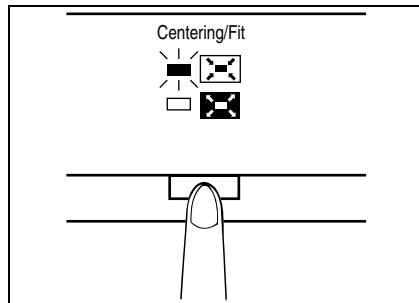

Centering/Fit mode cannot be used if  (Masking) is selected.

Fit

- 1 Press the Centering/Fit key to turn ON Fit.

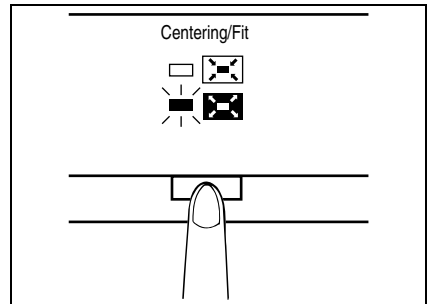

Fit mode cannot be used when the Scanner is connected the PC.

3.22 Using the Cycle Print Mode


This function automatically scans the next image following a preset period of time. Images are manually loaded onto the Carrier Glass in between cycles.

This is a system setting that must be entered by an authorized Technical Representative.


If you want to use the Cycle Print Mode, ask your Tech. Rep. to make the necessary system setting. Then you can perform the following operations.

Specifying the interval between scanning operations


- 1 Press the "10" key to change the value to "A". This enables the Cycle Print Mode.

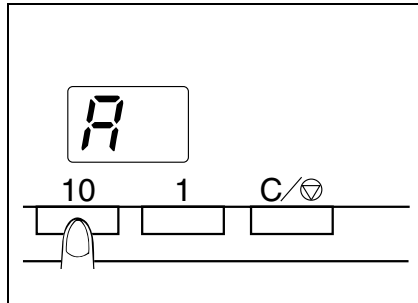

- 2 Press the "1" key to change values. Each value corresponds to an interval between scanning operations as shown below.

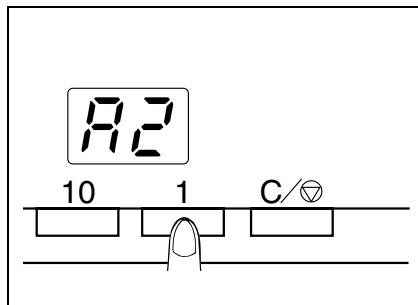

- 3 Press the Memory Input key to store the currently selected interval setting of the Cycle Print Mode into the memory.

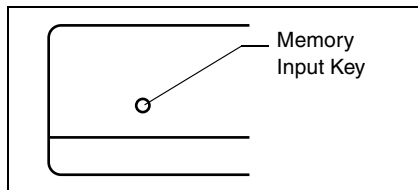

Value	1	2	3	4	5	6	7	8	9	0
Period (sec.)	0.5	1.0	1.5	2.0	2.5	3.0	3.5	4.0	4.5	5.0


Operating in the Cycle Print Mode

- 1 After entering the Cycle Print Mode, press the Start key to start.


After the first scanning operation has finished, the system will automatically scan the next image following a preset period of time. The system will continue to operate until the Cycle Print Mode is canceled.

The "No. of Copies" value flashes during the "scanning" and "waiting" operations.


The next scanning job can be started manually by pressing the Start key before the system automatically initiates the same job.

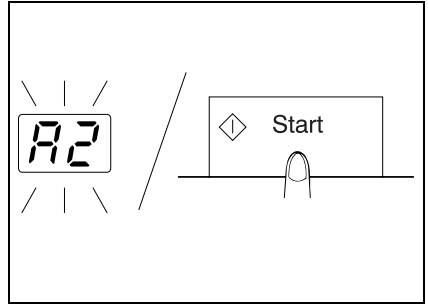

- 2 To pause an operation during the Cycle Print Mode, press the Clear/Stop key (the "No. of Copies" value will switch from a flashing display to a constant display).

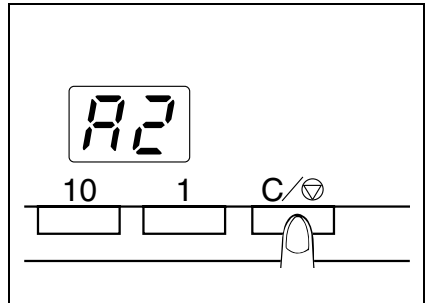


- 3 While the pause function is enabled, it is possible to exit the Cycle Print Mode by pressing the Clear/Stop key a second time (the value displayed in the "No. of Copies" display will change to a "1").

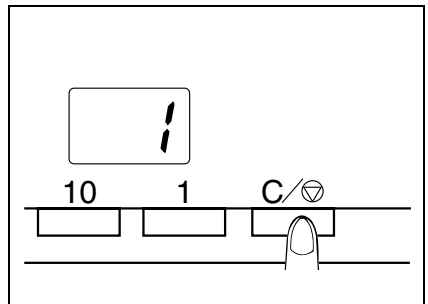

3.23 Selecting the Connection Mode

The Scanner connection can be selected between PR (connection to the Printer) and PC (connection to the Personal Computer).

- 1 Hold down the Shift Key and the PC/PR Key together for over one second.

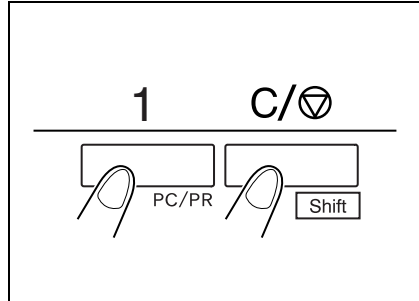

PC mode:

When the display is switched from Multi-Print to PC, the connection to the PC is valid.


PR mode:

When the display is switched from PC to Multi-Print, the connection to the Printer is valid.

3.24 Selecting the Resolution

The resolution for scanning (printing) can be selected.

- 1 Press the Shift Key and the Resolution Key together. The present resolution is displayed.

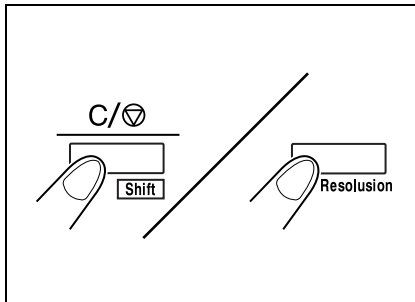

- 2 Press the Resolution Key while holding down the Shift Key to set the resolution.

Connection mode	Resolution	Display
PR mode	400 dpi	4H
	600 dpi	6H
PC mode	200 dpi	2H
	300 dpi	3H
	400 dpi	4H
	600 dpi	6H
	800 dpi *	8H *


* 800 dpi can only be selected when the width of scan area is less than 220mm.

3.25 Registering the Job Program

The present setting state can be registered in up to 3 program registration locations (1J, 2J and 3J).

- 1 Press the Memory Input Key in the Setting mode. 1J starts blinking.

To change the program registration location, press the 1 Key. The display is switched in order of 1J → 2J → 3J → 1J.

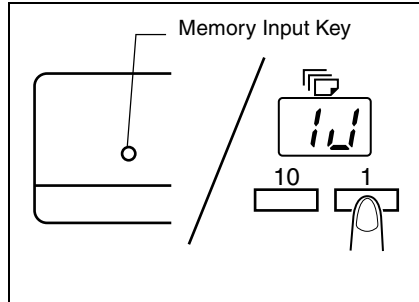

- 2 Select the program registration location (1J, 2J or 3J), and press the Memory Input Key again.
- 3 When all LEDs on the control panel light up and then the normal display is resumed, the program registration is over.




The program can be registered up to 3 programs for the PR connection and up to 3 programs for the PC connection.

3.26 Calling the Job Program

The registered Job program can be called.

- 1 Press the Shift Key and the Job Recall Key together.

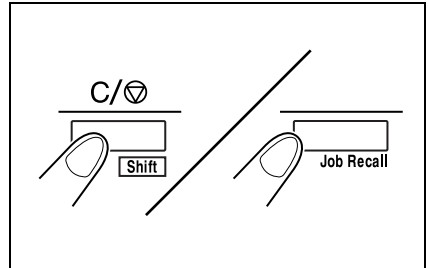

- 2 Each time the Job Recall Key is pressed while the Shift Key is held down, the display is switched in order of 1J → 2J → 3J.
- 3 When the desired setting is displayed, unhand the keys.

3.27 Using the Electrical Zoom

In addition to the zooming by the Lens, the Electrical Zoom function has been provided for magnifying the image when it is printed.




NOTE:

This function is only available on the RP mode.


Zoom +

When the Zoom+ key is pressed together with the Shift Key, the magnification is increased by an increment of 0.01X (up to 2.00X).

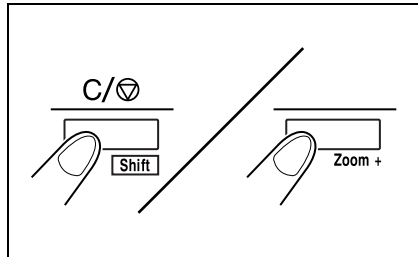

Zoom -

When the Zoom- key is pressed together with the Shift Key, the magnification is decreased by a decrement of 0.01X (down to 0.50X).

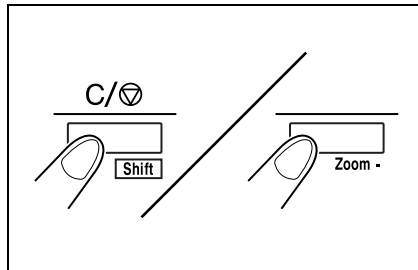




The Zoom magnification is displayed in the Multi-Print Display to 2 decimal places.

The Zoom magnification level is displayed in the Exposure Display.

Example:When the magnification is 0.50x, it is displayed as 50.

When the magnification is 1.50x, it is displayed as 50 also.

 When the Zoom magnification is changed, the display is made in the Multi-Print Display as follows.

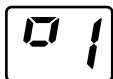


When it is returned to the standard magnification, this display goes off.

When the Zoom function is used, the Multi-Print can be set only up to 9.

Skip of magnification


Hold down the 10 Key and the Zoom+ Key or the Zoom- Key together, the magnification skips as follows.

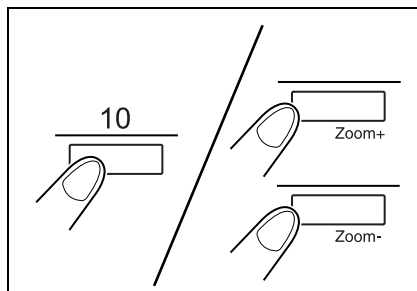

Inch Area		Metric Area	
Magnification	Size	Magnification	Size
0.50	minimum	0.50	minimum
0.65	11" x 17" → 8-1/2" x 11"	0.71	A3 → A4
0.77	11" x 17" → 8-1/2" x 11"	0.82	B4 → A4
0.79	8-1/2" x 14" → 8-1/2" x 11"	0.86	A3 → B4
1.00	full	1.00	full
1.27	8-1/2" x 11" → 8-1/2" x 14"	1.15	B4 → A3
1.29	8-1/2" x 11" → 11" x 17"	1.22	A4 → B4
1.55	8-1/2" x 11" → 11" x 17"	1.41	A4 → A3
2.00	maximum	2.00	maximum

Clearing the Zoom magnification

When the Zoom clr key is held down together with the Shift Key for over one second, the standard magnification is resumed.

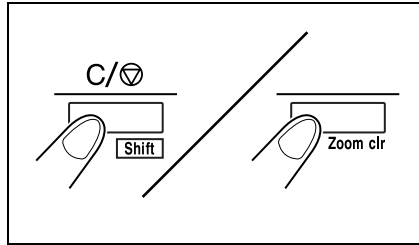

The standard magnification is fixed according to the selected paper size.


Paper size	A3	B4	A4	B5	11" x 17"	8-1/2" x 14"	8-1/2" x 11"
Standard magnification	1.41x	1.22x	1.00x	1.00x	1.55x	1.27x	1.00x

3.28 Adjusting the Illumination of the Screen

The illumination of the screen can be adjusted.


- 1 Press the Illumination Key to adjust the illumination of the screen.

The screen is gradually darkened until it is turned OFF. When any key is pressed, the illumination returns to the maximum level.

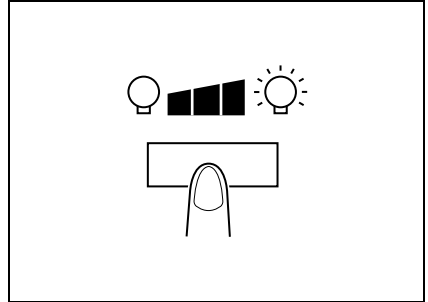

- 2 When the illuminance of the screen is dark, hold down the Shift Key and the Illuminance Key together.

The illuminance of the screen is gradually lightened until maximum level.

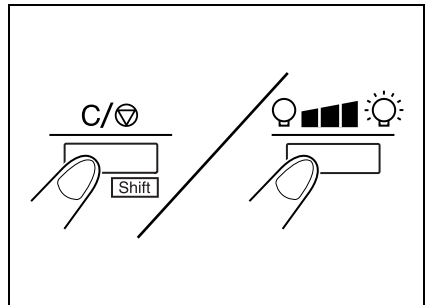


3.29 Replacing the Projection Lamp

Use the following procedure to replace the Projection Lamp whenever a reduction in brightness on the screen is detected or whenever the lamp burns out. Make sure that the replacement lamp is specified for use with this scanner.

If the Projection Lamp should burn out during a print operation, an L2 code will appear and the print job will stop (a blank piece of paper may be output depending upon the stage of the job).

Once the system detects that the Projection Lamp has burnt out, the scan job will be cancelled. If the system is operating in the Cycle Print Mode, the scanning operation will stop.


- 1 Turn the Power Switch OFF.

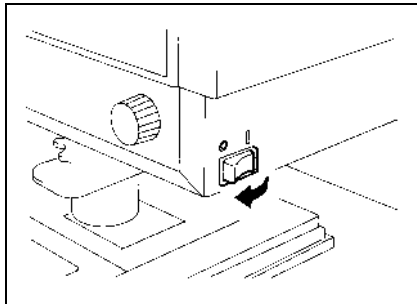


CAUTION

- NEVER touch the lamp with bare hands just after operation or immediately after turning it OFF.
Wait for at least 10 minutes after shutting the power OFF to allow the lamp to cool down as it becomes very hot during use.


- 2 Slide out the Projection Lamp Unit.

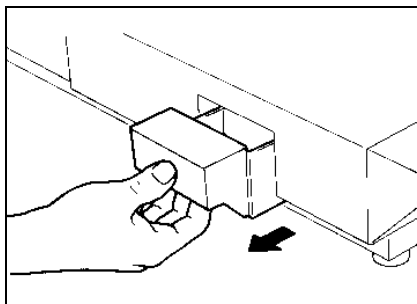


- 3** Remove the Projection Lamp, together with the Lamp Socket, from the Projection Lamp Unit.

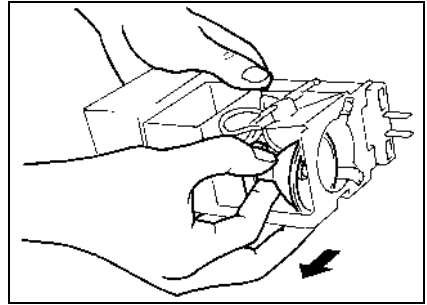

- 4** Unplug the Projection Lamp from the Lamp Socket.

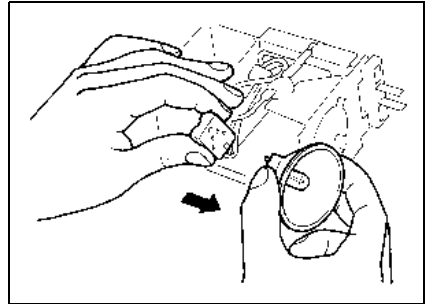


- 5** Insert a new Projection Lamp so that the mark on its base is facing upwards. Make sure that the new Projection Lamp is inserted securely so that there is no gap between the Projection Lamp and the Lamp Socket.

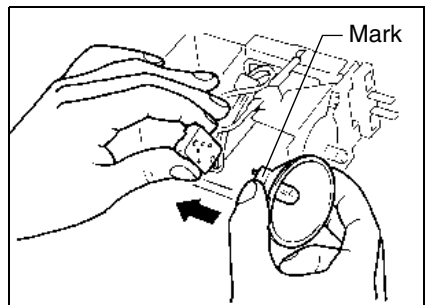


CAUTION

- Do not touch the reflector mirror surface of the Projection Lamp. Fingerprints, smudges or debris should be wiped clean with a soft, dry cloth.

- 6 Insert the Projection Lamp all the way into the Lamp Holder of the Projection Lamp Unit.

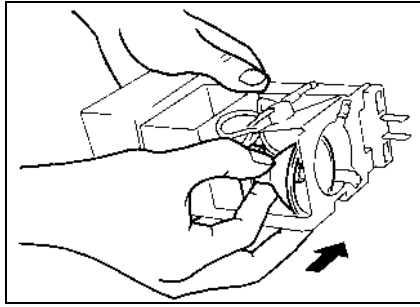




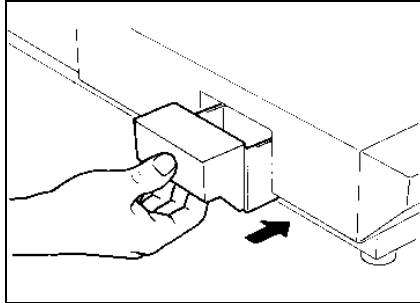



- 7 Slide the Projection Lamp Unit securely back into place.

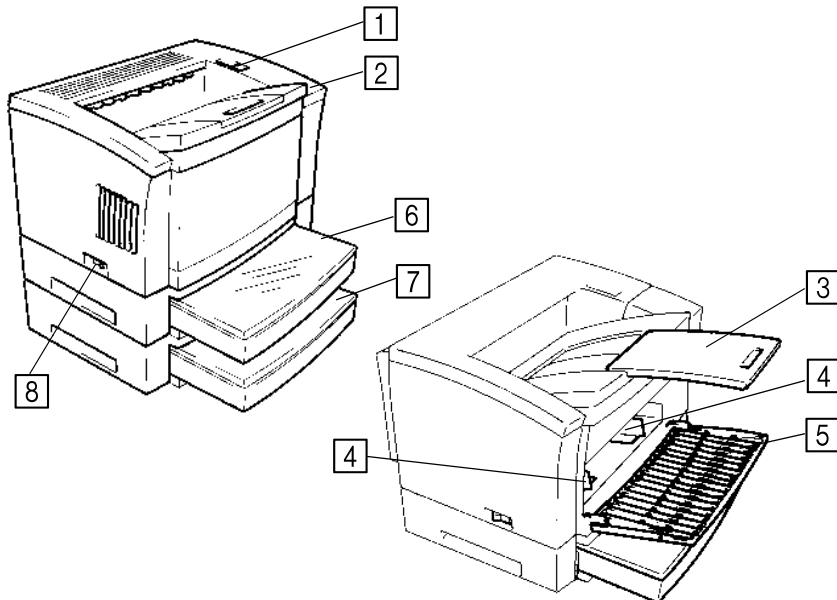


4 System Printer (option)

4.1 Parts of the Printer



- | | | |
|---|--------------------------------|---|
| 1 | Upper Unit Lock Release Lever: | Use to open the Upper Unit. |
| 2 | Power Indicator: | Light indicates when the Printer is turned ON. |
| 3 | Print Tray: | Prints are output from the Printer, face down onto this tray which can hold up to 500 sheets of standard paper. |
| 4 | Paper Guides: | Slide the guides to secure the paper stack. |
| 5 | Paper Feeding Tray: | Capable of holding up to 150 sheets of standard-size paper ranging from 5-1/2" × 8-1/2" (B5)  to 11" × 17" (A3)  paper. |
| 6 | Cassette 1: | Capable of holding up to 250 sheets of standard-size paper ranging from 5-1/2" × 8-1/2" (B5)  to 11" × 17" (A3)  paper. |
| 7 | Cassette 2:
(Option) | Capable of holding up to 250 sheets of standard-size paper ranging from 5-1/2" × 8-1/2" (B5)  to 11" × 17" (A3)  paper. |
| 8 | Power Switch: | Use to turn the Printer ON and OFF. |

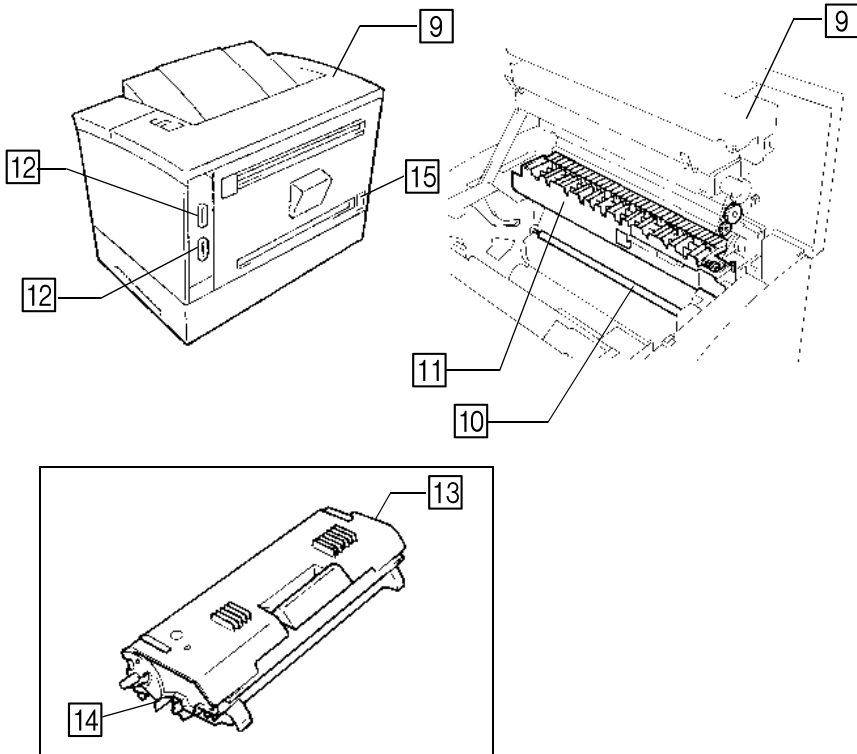

- 9 Upper Unit: Open to replace the Imaging Cartridge and to clear misfed sheets of paper.
- 10 Image Transfer Roller: Transfers the image onto the sheet of paper. Be careful to avoid touching it with your bare hands.
- 11 Fusing Unit: Permanently fixes the image onto the sheet of paper.
- 12 Interface Connectors: Facilitates connections for the Scanner. The Printer has two connectors to facilitate connection with two separate Scanner units.
- 13 Imaging Cartridge: Where the image is generated for transfer onto the sheet of paper. Be careful to avoid touching it with your bare hands.
- 14 Seal: Remove the seal before installing the new cartridge.
- 15 Power Cord Socket: The power cord is plugged into this socket.

4.2 Paper Specifications

Use only the following types of paper:

Type

Plain and recycled paper (weight 16 to 24 lbs. / 60 to 90 g/m²)

Size

Standard sizes: 11" x 17", 8-1/2" x 11", 5-1/2" x 8-1/2", A3, A4, B4, B5.

Capacity


Paper Feeding Tray: 5-1/2" x 8-1/2" (B5) to 11" x 17" (A3) plain and recycled paper: Up to 150 sheets

Paper Cassette: 5-1/2" x 8-1/2" (B5) to 11" x 17" (A3) plain and recycled paper: Up to 250 sheets


4.3 Set the Paper

Loading Paper into the Paper Feeding Tray


- 1 Swing down the Paper Feeding Tray.

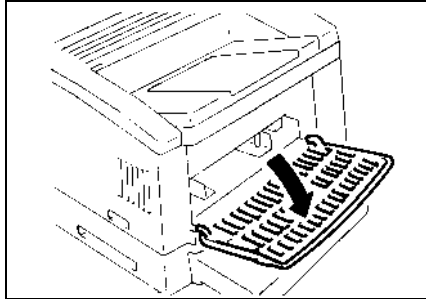


- 2 Fan the paper stack thoroughly and align the edges.

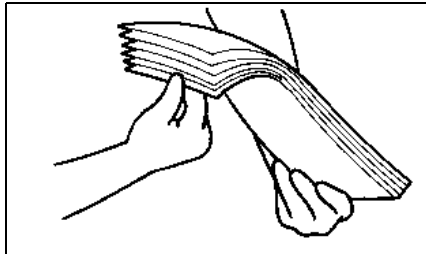

- 3 Load the paper stack face up in the tray and adjust the Paper Guides to secure the paper stack.

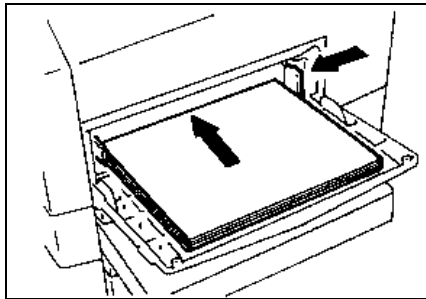


- Make sure that the paper stack does not exceed the Maximum Level Indicator.
- Load a new paper stack only after the old one has run out.

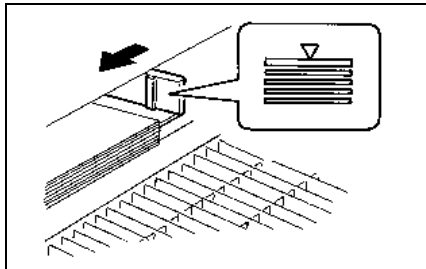


- 4 Close the Paper Feeding Tray.

Loading Paper in the Paper Cassette


- 1 Pull the cassette out of the Printer and open the Cover.

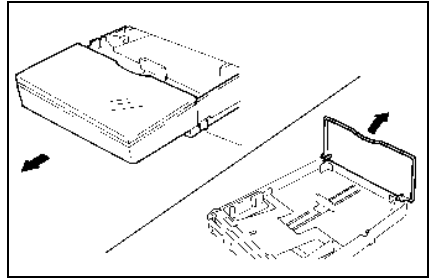


- 2 Press down the Paper Lifting Plate until it locks. Fan the paper stack thoroughly, align the edges, and place the paper in the cassette.

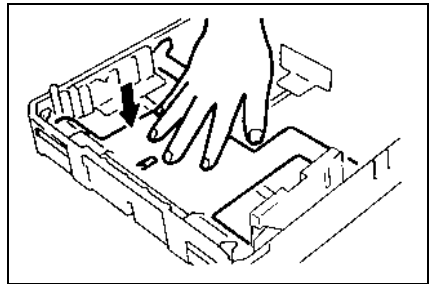


- 3 Secure the paper stack in the Paper Cassette with the Paper Guides.

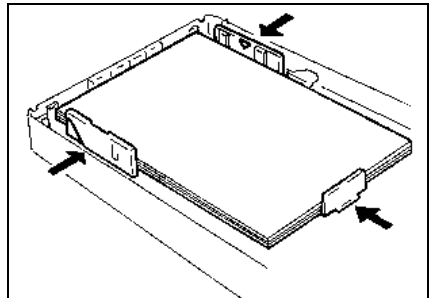

- Make sure that the paper stack does not exceed the Maximum Level Indicator.
- Load a new paper stack only after the old one has run out.

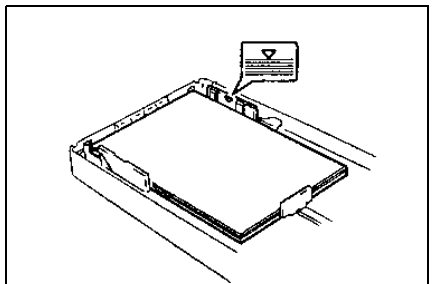


- 4 Close the Cover and insert the cassette into the Printer.

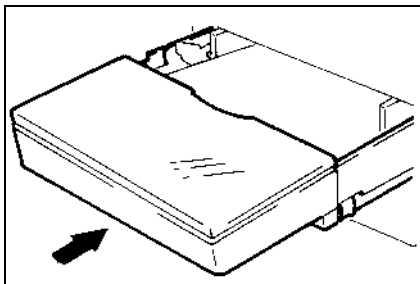


4.4 Replacing the Toner Cartridge


- 1 Open the Upper Unit by pulling the Upper Unit Lock Release Lever forward.

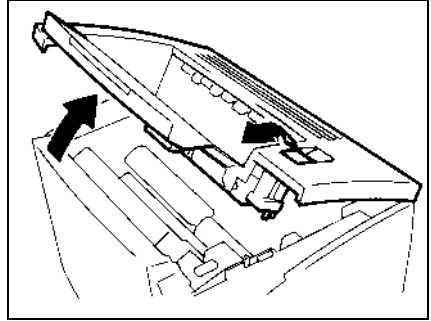


- Push the Print Tray in before opening the Upper Unit.

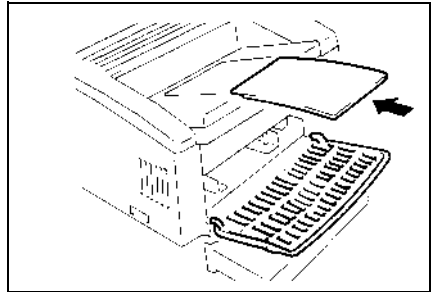


- 2 Remove the old Imaging Cartridge from the printer.

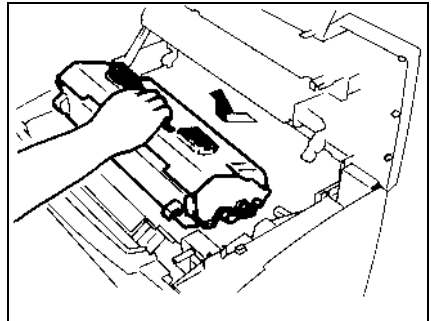


- 3** Take a new Imaging Cartridge out of the box. Holding it with both hands, shake it well in the directions indicated by the arrows.

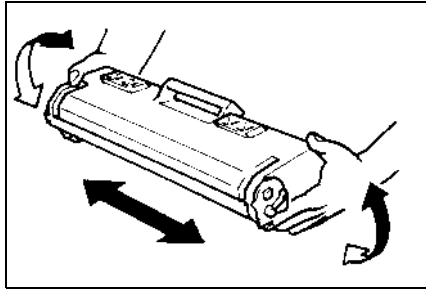


- 4** Remove the seal from the Imaging Cartridge by pulling it steadily straight out.

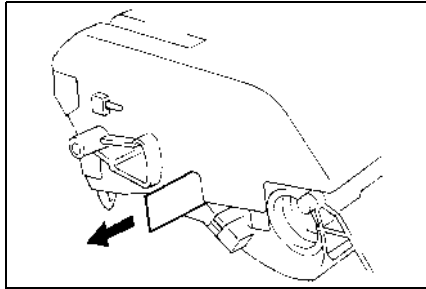


- 5** Shake the Imaging Cartridge four or five more times as shown to evenly distribute the toner inside.

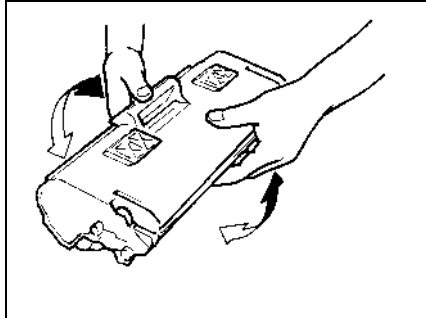

- 6** Slide the pins located on both sides of the Imaging Cartridge into the grooves of the printer as shown and gently push the Imaging Cartridge securely into place.

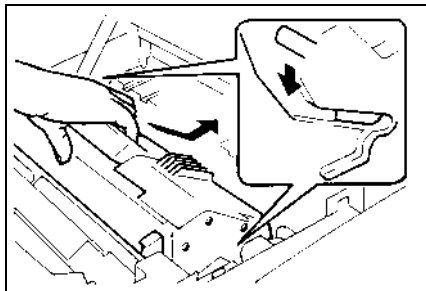

7 Close the Upper Unit.

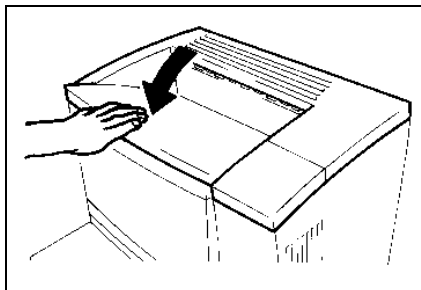

4.5 When the Paper Misfeed Indicator Lights Up

If the Misfeed Indicator lights up along with a P0 code:

The size or the direction of the paper loaded in the paper tray does not match that set for the tray.

Load the paper of the set size in the set direction and then open and close the Upper Unit.

If the Misfeed Indicator lights up along with a P1, P2 or P3 code:

A misfeed has occurred in the Printer. Clear the sheet of misfed paper by following the procedure given below.




CAUTION


- The Fusing Unit inside the printer becomes very hot during operation. To avoid a burn, be very careful not to touch it.

Clearing a Misfeed from the Paper Feeding Tray


- 1 Open the Upper Unit by pulling the Upper Unit Lock Release Lever forward.
 - Push the Print Tray in before opening the Upper Unit.

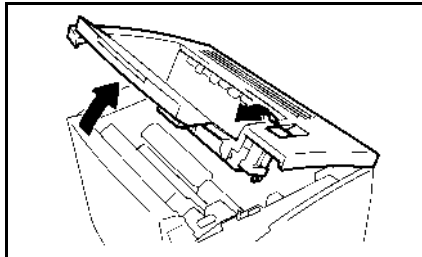


- 2 Remove the Imaging Cartridge.
 - Be sure to cover the Imaging Cartridge with a heavy cloth to protect it from light when it is removed from the Printer.

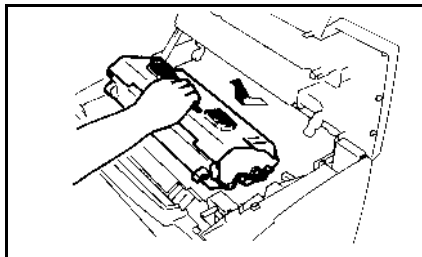


- 3** Remove the sheet(s) of paper that caused the misfeed from the Paper Feeding Tray.

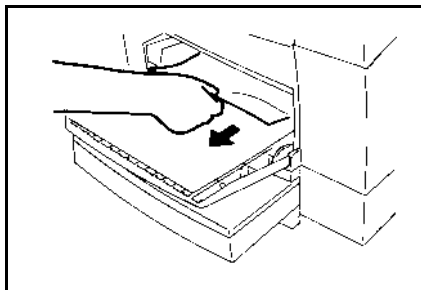

- 4** Check that no misfed paper is left in the Printer and then reinstall the Imaging Cartridge.

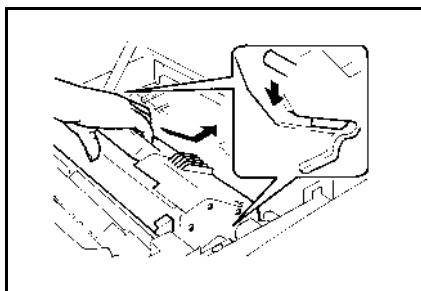


- 5** Close the Upper Unit.

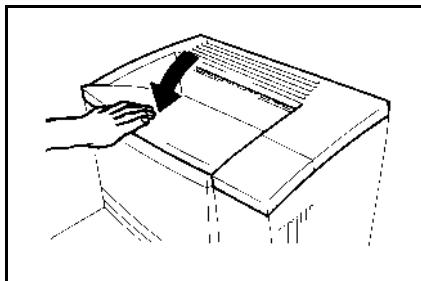


Clearing a Misfeed from the Paper Cassette


- 1 Open the Upper Unit by pulling the Upper Unit Lock Release Lever forward.
→ Push the Print Tray in before opening the Upper Unit.

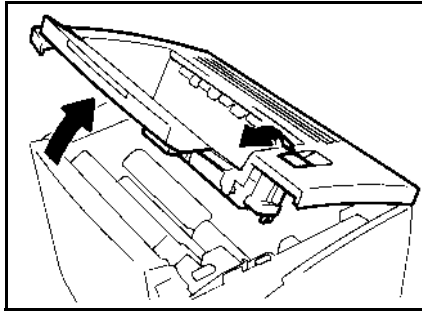


- 2 Remove the Imaging Cartridge.
→ Be sure to cover the Imaging Cartridge with a heavy cloth to protect it from light when it is removed from the Printer.

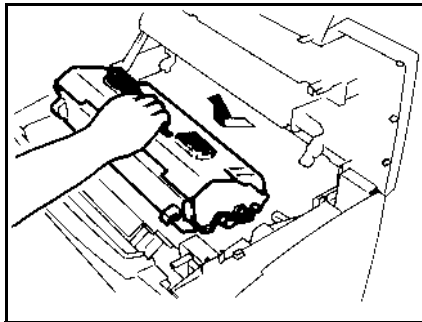


- 3 Pull out the cassette and remove the sheet(s) of paper that caused the misfeed as shown.

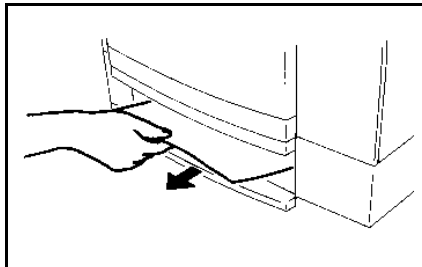

- 4 Check that no misfed paper is left in the Printer and then reinstall the Imaging Cartridge.

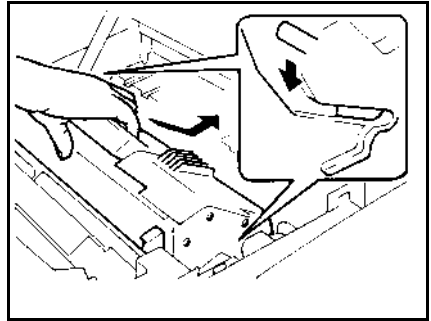


- 5 Close the Upper Unit.

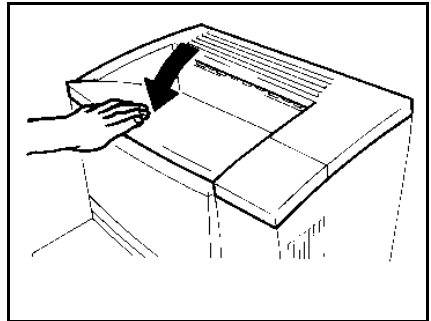


Clearing a Misfeed from inside the Printer


- 1 Open the Upper Unit by pulling the Upper Unit Lock Release Lever forward.
- Push the Print Tray in before opening the Upper Unit.

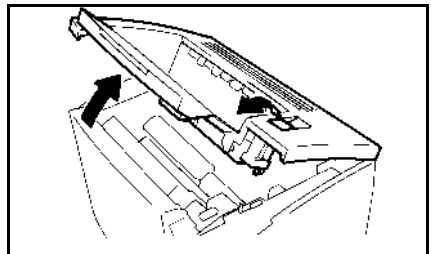


- 2 Remove the Imaging Cartridge.
- Be sure to cover the Imaging Cartridge with a heavy cloth to protect it from light when it is removed from the Printer.

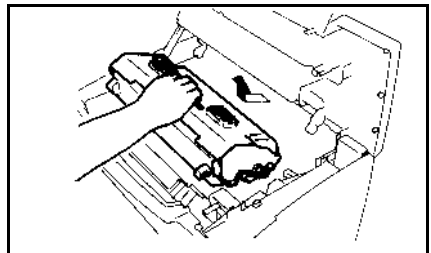


- 3** If the misfeed occurred before the sheet of paper entered the Fusing Unit, gently pull the misfed sheet up and out as shown.

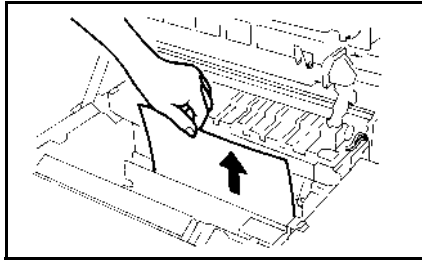


- 4** If the misfeed occurred after the sheet of paper entered the Fusing Unit, gently pull the misfed sheet toward you and out as shown.

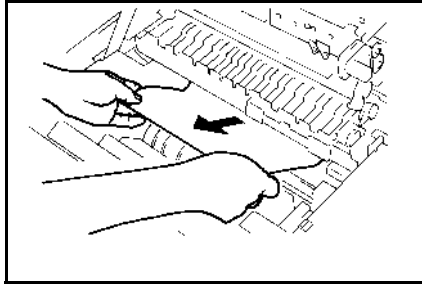

- Since the toner has not yet been fixed onto the sheet of paper, be careful not to soil your hands or clothes when pulling out the misfed sheet.
- Do not remove the misfeed by pulling on the sheet of paper toward the output end of the Fusing Unit as shown.




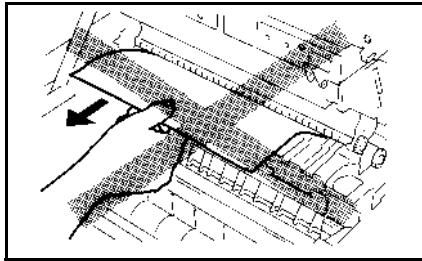



- 5** Reinstall the Imaging Unit and close the Upper Unit.

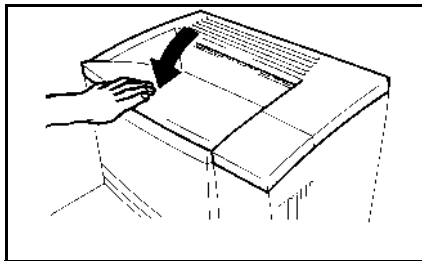

4.6 Solving Irregular Printing Problems

Use the following procedures to fix minor printing problems. If print quality does not improve after implementing the procedures below, contact your Technical Representative.

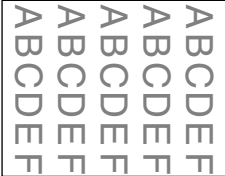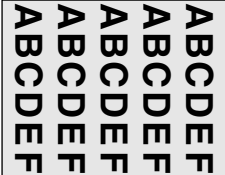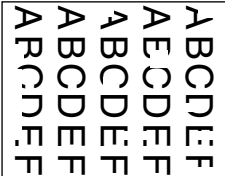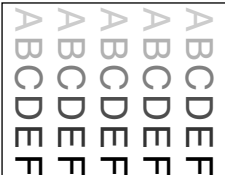Symptom	Cause	Action
Light image 	Print density is not properly set. Toner in the Imaging Cartridge is running out.	Change the print density setting as necessary. Replace the Imaging Cartridge with a new one.
Dark image 	Print density is not properly set.	Change the print density setting as necessary.
Partial void image 	The paper in the tray is damp.	Replace the damp paper with fresh, dry paper.
Uneven image density 	Toner in the Imaging Cartridge is not evenly distributed.	Remove the Imaging Cartridge, shake it several times and replace.
Blank print 	The Printer has malfunctioned.	Contact your Technical Representative.

5 Miscellaneous

This chapter details the system specifications and initial settings as well as provides some useful tips for caring for the unit.


 













 

5.1 Specifications

Specifications	
Type:	Desk-Top Type Microfilm Scanner
Type of Film:	Microfiche, Jackets, Aperture Cards, 16mm & 35mm Roll Film, 16mm Film Cartridges.
Magnification:	7.5x, 7x-7.5x, 9x-16x, 13x-27x, 20x-50x
Screen:	12" x 17-1/4" (303mm x 440mm)
Image Rotation:	Prism Rotation, Carrier Rotation (Fiche Carrier)
Scanning Method:	Scanning/Scanning direction: CCD scanning Scanning/Feeding direction: Mirror scanning
Exposure Control:	Automatic & Manual
Light Source:	Halogen Lamp (DC20V 150W DDL Type)
Power Requirement:	120VAC (60Hz) or 220-240VAC (50-60Hz)
Power Consumption:	Less than 350W Auto Power Save Mode: Less than 6W (120V areas) Less than 8W (220V areas)
Dimensions	22"(W) x 30"(D) x 33-1/2"(H) or 560(W) x 760(D) x 853(H) mm
Weight	143-1/4 lbs. (65kg)
Standard Accessories:	Power Cord, Printer cable, Prism Unit, User's Guide (this manual)
Options:	Projection Lenses, ACF-7, Fiche Carrier 5, Universal Carrier UC-2, Roll Film Carrier 22A (For USA and Canada), Roll Film Carrier 9B, Roll Film Carrier 15A/15M, Roll Film Carrier 21, MARS Controller 4, MARS Mini Controller 2, Manual Frame Masking Unit, Auto Focus Unit, AF Lens Modification Kit, Foot Switch Kit, Grayscale Memory Board, PC Interface Kit (for except USA/Canada area)

PC Mode

Specifications	
Resolution:	200, 300, 400, 600, 800 dpi
Output Scale:	Binary, Grayscale (Option)
PC Interface:	SCSI-2 Standard: USA and Canada area Option: except USA and Canada area
Scanning Speed:	5 sec./1 frame scanning (8-1/2" x 11" or A4 Vertical/400 dpi/AE) 4 sec./Multi-frame scanning (8-1/2" x 11" or A4 Vertical/400 dpi/AE)

PR Mode

Specifications	
Resolution:	400, 600 dpi
Output Scale:	Binary
Printing Method:	Laser Electrostatic
Developing System:	Fine Micro-Toning (Fine-MT) System
Print Size:	11" x 17"  , 11" x 8-1/2"  , 8-1/2" x 11"  , 8-1/2" x 14"  or A3  , A4  , A4  , B4  , B5 
Warm-up Time:	Less than 70 seconds
First Print Time:	15.2 seconds (11" x 17"  or A3  , 400dpi, AE) 13 seconds (8-1/2" x 11"  or A4  , 400dpi, AE)
Print Speed:	15 sheets per minute (11" x 17"  or A3  , 400dpi) 20 sheets per minute (8-1/2" x 11"  or A4  , 400dpi)
Multiple Printing:	1-99 sheets (LED countdown identification)
Paper Supply:	Automatic Feeding Supply Multi-purpose Tray (150 sheets max.) Paper Cassette 1 (250 sheets max.) Paper Cassette 2 (250 sheets max.): Option
Printer's Power Consumption:	Less than 750W
Printer's Dimensions	22"(W) x 20-1/2"(D) x 16"(H) or 561(W) x 521(D) x 409(H) mm
Printer's Weight	61-3/4 lbs. (28kg) <Including Imaging Cartridge>

* Specifications subject to change without notice.

5.2 Initial Settings

This system offers three types of settings: the user settings that are made by the user on the control panel, the settings that are made by the user using with the User Mode, and the system settings that are made by the authorized dealer.

User Settings on the Control Panel

User Settings	Initial Setting	Remark
Exposure mode	Auto	
Print image density	Center	
Output Selection	A4 (Letter) crosswise	See page 4-8, U4: Paper Feeding Tray Size.
	Rotation OFF	
Film type	Auto	
Auto Skew Correction	OFF	
Auto Masking	OFF	
Manual Masking	-	Enabled only when the Manual Frame Masking Kit (option) is mounted.
Centering/Fit	OFF	

* When any of these functions has been changed and you want to store that new setting in the system's memory, press the Memory Input Key.

User Mode

User mode allows the default values of various functions to be set or changed as necessary.

Setting these default values according to the need of the user saves labor in making settings again each time the power is turned ON or Panel Reset is activated.


Display	Function Name	Description
U1	Special Print Mode	Not available.
U2	Engineering Enhancement Mode	Corrects slight image distortion occurring in the scan direction.
U3	Auto Power Save	Used to set the time it takes the unit to be automatically set into the Auto Power Save mode.
U4	Paper Feeding Tray Size	Used to set the size and direction of the paper loaded in the Paper Feeding Tray.
U5	Imprint Position Setting	Used to turn ON or OFF the Date Print and Character Overlay functions, and to set the date print position for the Date Print function.
U6	Year, Month and Date Set Mode	Used to set the print pattern for the Date Print function.
U7	Imprint Mode Set	Used to correct the time-of-day for the Date Print function when it becomes wrong.
U8	Total Scan Counter	Used to display the number of scan sequences carried out by the Scanner


Entering and Leaving the User Mode

- 1 Hold down the Shift key and Output Selection key at the same time for 0.5 sec.
The Multi-Print Display displays a "U."

 


- 2 Press the Exposure Adjustment key (Darker or Lighter) to select the specific function.


Darker  Pressing the Darker key selects the function in the following order: U → U1 → U2 → U3 .. → U8.


Lighter  Pressing the Lighter key selects the function in the following order: U8 → U7 → U6 → U5 .. → U.

- 3 Press the Exposure Mode key to display d(*).
*: Current setting value

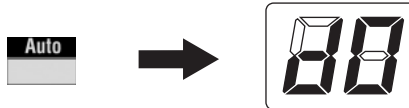

- 4 Press the Exposure Adjustment key (Darker or Lighter) to select the specific setting value.

Darker  Pressing the Darker key selects the setting value in the following order: d0 → d1 ..

Lighter  Pressing the Lighter key selects the setting value in the following order: d5 → d4d0

- 5 Press the Start key to validate the setting value.

 Start



If the Exposure Mode key is pressed, the setting value is not validated and the User mode initial screen (U) appears.

If a new function is to be set, start the procedure over beginning with step 2.

- 6 Press the Clear key.
This lets you leave the User mode, returning back to the ordinary mode.


Settings in Each User Mode Function

U1: Special Print Mode

This function is not available.

U2: Engineering Enhancement Mode

Slight image distortion occurring in the scan direction can be corrected with this function.

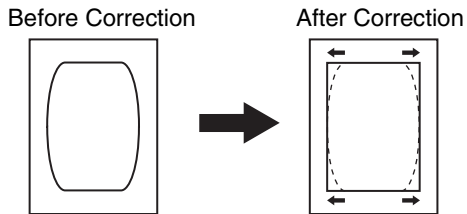

- 1 Select U2 in the User mode.
- 2 Press the Exposure Mode key to display d*.
- 3 Press the Exposure Adjustment key (Darker or Lighter) to select the desired setting value.
- 4 Press the Start key to validate the setting value.



NOTE:

This setting returns to the default value when the Power Switch is turned OFF.

You can register the setting value using with the Job Program. 
See p. 3-45.

Code	Setting Value	Initial Setting
d0	0mm	
d1	0.5mm	
d2	1.0mm	
d3	1.5mm	*
d4	2.0mm	
d5	2.5mm	
d6	3.0mm	
d7	3.5mm	
d8	4.0mm	

U3: Auto Power Save

Time it takes the unit to be automatically set into the Power Save mode can be set.

- 1 Select U3 in the User mode.
- 2 Press the Exposure Mode key to display d*.
- 3 Press the Exposure Adjustment key (Darker or Lighter) to select the desired setting value.
- 4 Press the Start key to validate the setting value.

Code	Setting Value	Initial Setting
d1	Auto Power Save (15 min.)	*
d2	Auto Power Save (30 min.)	
d3	Auto Power Save (60 min.)	

Only the setting of "d1: Auto Power Save (15 min.)" complies with the Energy Star standard.



NOTE:

For the USA and Canada only:

The Auto Power Save function becomes available for setting only if the Energy Star Kit is mounted on the Scanner.

U4: Paper Feeding Tray Size

The size and direction of the paper loaded in the Paper Feeding Tray can be set with this function.

- 1 Select U4 in the User mode.
- 2 Press the Exposure Mode key to display d*.
- 3 Press the Exposure Adjustment key (Darker or Lighter) to select the desired setting value.
- 4 Press the Start key to validate the setting value.


Code	Setting Value	Initial Setting
d0	Letter (A4) crosswise	*
d1	Letter (A4) lengthwise	
d2	Ledger (A3) lengthwise	
d3	Legal lengthwise	

d3: USA and Canada only

U5: Imprint Position Setting

The Date Print and Character Overlay functions can be set to turn ON or OFF, and the date print position of the Date Print function can be set with this function.

The date print position of Date Print is that set on the screen, regardless of the paper feeding direction in the printer.

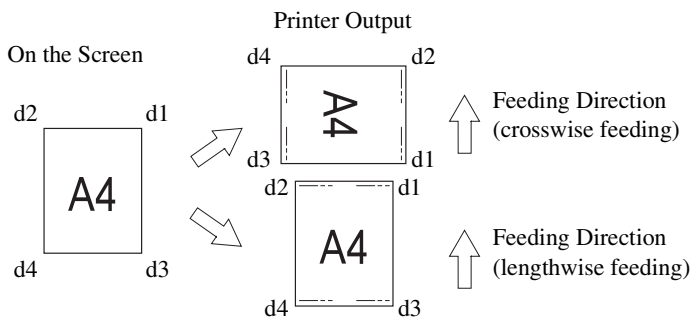

- 1 Select U5 in the User mode.
- 2 Press the Exposure Mode key to display d*.
- 3 Press the Exposure Adjustment key (Darker or Lighter) to select the

desired setting value.

4 Press the Start key to validate the setting value.

Code	Setting Value	Initial Setting
d0	Turns OFF Date Print and Character Overlay functions	*
d1	Date Print function (upper right)	
d2	Date Print function (lower right)	
d3	Date Print function (upper left)	
d4	Date Print function (lower left)	
d5	Character Overlay function (*)	

(*)A personal computer and an I/F kit are necessary only when the overlay data is transmitted to the scanner.

U6: Year, Month and Date Set Mode

The print pattern for the Date Print function can be set with this function.

- 1 Select U6 in the User mode.
- 2 Press the Exposure Mode key to display d*.
- 3 Press the Exposure Adjustment key (Darker or Lighter) to select the desired setting value.
- 4 Press the Start key to validate the setting value.

Code	Print Pattern	Initial Setting
d0	Year, month, day (2004.05.15)	*
d1	Month day year (05 15 2004)	
d2	Day month year (15 05 2004)	
d3	Month, day Hours:minutes (05.15 13:45)	

Year: 4 digits of dominical year

Month: 2 digits

Day: 2 digits

Hour: 2 digits (24-hour system)

Minutes: 2 digits

U7: Imprint Mode Set


Time-of-day can be corrected for the Date Print function when it becomes wrong.

- 1 Select U7 in the User mode.
- 2 When the Exposure Mode key is pressed, both the Exposure Display and Multi-Print Display light up steadily.

In the initial condition, the year default setting is displayed.

Each time the Darker key is pressed, the lit Exposure Display moves upward to select the currently validated setting mode in the following order: month → day → hours → minutes.

Each time the Lighter key is pressed, on the other hand, the lit Exposure Display moves downward to select a setting mode.

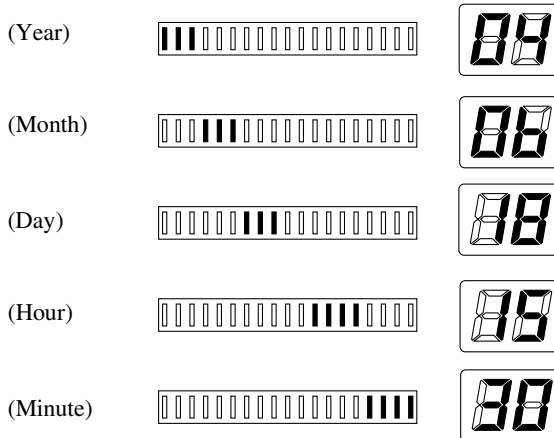

- 3 In each setting mode, press the Multi-Print key to enter the setting value. Each press of the Multi-Print key increases the setting value. When the value exceeds the maximum setting of the selected mode, it returns to "00" or "01" (month, day).
- 4 When the settings of all modes are completed, press the Start key to validate the time-of-day setting.

U8: Total Scan Counter

 
 
The number of scan sequences carried out by the Scanner can be displayed with this function.

- 1 Select U8 in the User mode.
- 2 Press the Start key.
The number of scan sequences so far carried out by the Scanner is displayed.

The following display represents that the scan count is 24,612.



System Settings by the dealer

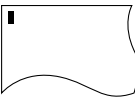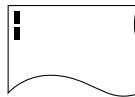System Settings	Description	Selection	Initial Setting
Auto reset	Setting changes made to the control panel that are not used within 60 seconds of being input are automatically cancelled and the system reverts back to the original settings.	Enabled	* (200V)
		Disabled	* (120V)
Auto power save ON/OFF	Sets the unit to enable or disable the Auto Power Save mode.	Enabled	* (200V)
		Disabled	* (120V)
Auto power save (PR mode only)	Turns the Printer's fuser OFF if the system is left idle for a specific period of time. * Priority is given to the Power Save mode, if Power Save has been set.	Disabled	
		30 min.	*
		60 min.	
Auto Projection Lamp OFF	Turns the Scanner's Projection Lamp OFF if the system is left idle for a specified period of time. * Priority is given to the Power Save mode, if Power Save has been set.	Disabled	*
		30 min.	
		60 min.	
Fine mode contrast select	Applies the following functions as required: Contrast Emphasis: applied when film contains text that is poorly contrasted against its background making it difficult to read. Outline Emphasis: applied when film contains blurred black and white images.	Contrast Emphasis	*
		Outline Emphasis	
Auto Skew Correction Retain	Determines whether or not to retain the original (uncorrected) skew of a screen image after the print has been made.	Retained	
		Not retained	*
Machine ID Printing (PR mode only)	When two scanners are connected to one printer, this function leaves an identification marker on the print so that the scanner used for the job can be determined after printing. <div style="display: flex; justify-content: space-around; align-items: center;"> <div style="text-align: center;"> <p>Pattern 1</p>  <p>Paper</p> </div> <div style="text-align: center;"> <p>Pattern 2</p>  <p>Paper</p> </div> </div>	Disabled	*
		Pattern 1	
		Pattern 2	
Cycle print mode\ (PR mode only)	This function automatically scans the next image following a preset period of time (the period can be set by an authorized Technical Representative). Images are set by the user onto the Carrier Glass in between cycles.	Enabled	
		Disabled	*
Paper Size of Paper Feeding Tray (PR mode only)	Determines the desired paper size and the orientation from the Paper Feeding Tray of the printer.	Same as the setting for U4 of the User Mode. See page 5-7.	

System Settings	Description	Selection	Initial Setting
Contrast setting	To view subtle images with standard ranges of density clearly: Light (-1 ~ -7) To bring out the darker and lighter ranges of an image: Dark (+1 ~ +7)	Lighter	
		Normal	*
		Darker	
The print function at the time of Toner Empty detection (PR mode only)	After a toner empty condition is detected, this function allows you to select either to stop printing or continue printing	Disable Print	*
		Enable Print	
Auto Film Format Select print function (PR mode only)	The Auto Format Select Print Function is enable or disable through the control panel.	Enable	*(200V)
		Disable	*(120V)
90 degree rotation setting	Enables the prism to rotate the screen image 90 degrees.	Enable	
		Disable	*
Automatic paper source switching	Allows you to specify the paper source when Letter or A4 size paper is loaded in Lengthwise or Crosswise orientations into the both paper feeding tray and paper feeding cassette. Auto switching: Printing continues by automatically switching to the remaining paper source after paper in the specified paper source runs out. Disabling Auto Switching: A paper empty mode occurs and printing ceases after paper in the specified paper source runs out. The paper source must be refilled or the paper source must be switched by pressing the Output Selection Key in order to resume printing.	Auto switching	*
		Disabling Auto Switching	


* To change any of the system settings described above, contact the authorized dealer.

5.3 System Care

The system should be cleaned on a daily basis for optimal operating conditions.

Cleaning the Scanner Screen

- 1 With a damp cloth, clean and remove any dust or debris from the surface of the Screen.

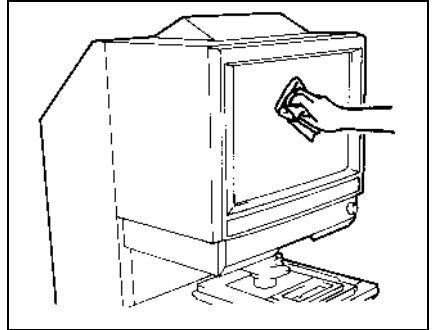


CAUTION

- NEVER use alcohol or any other solvent when cleaning to avoid causing damage to the Screen or erasing the frame size markers.


Outer Covers

- 1 Dust the exterior panels of the Scanner with a soft, dry cloth.

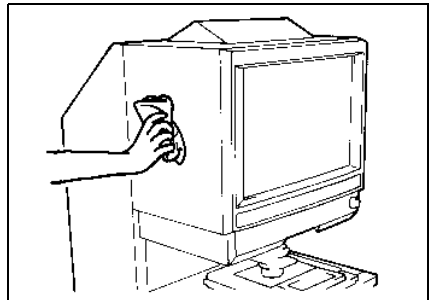


Carrier Glass (Option)

- 1 With a damp cloth, clean and remove any dust or debris from the surface of the Carrier Glass.
- Before cleaning the Carrier Glass, be sure to remove the Projection Lens from the Scanner.

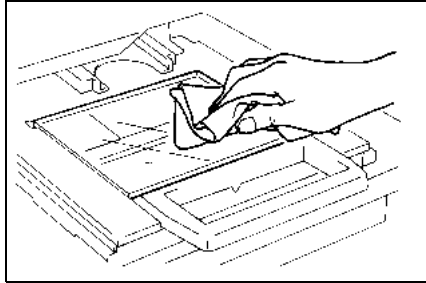

- 2 To open the Carrier Glass, pull the handle of the Microfiche Holder. Following the same procedure described in Step 1, wipe the inner surfaces of the Carrier Glass.

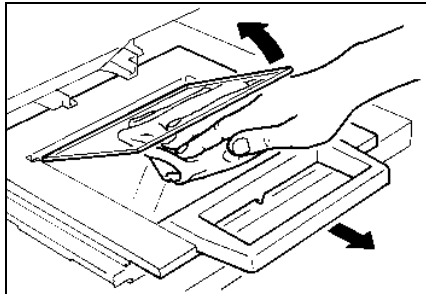

Cleaning the System Printer (Option)


Clean the Printer at regular intervals.



CAUTION

→ Use a soft cloth and NEVER use abrasives or corrosive detergents.

- 1 Before cleaning the Printer, turn OFF the power and unplug the cord from the power outlet.
- 2 Clean the exterior panels with a soft, dry cloth.
 - A damp cloth and a mild home detergent can be used for heavier cleaning.

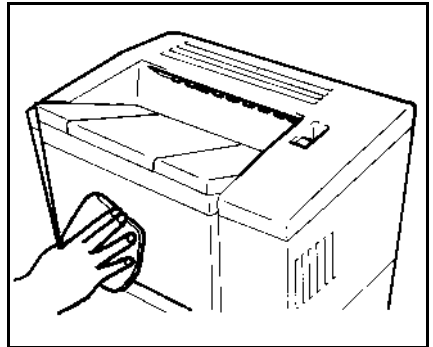

5.4 For Key Operator's Use

When you need to call for service, the Key Operator should be prepared to provide the following information to the authorized Dealer.

1. Your Company Name, Address, Telephone Number, Department Name, Floor Number, Machine Location, etc.
2. Model Name, Serial Number, Condition or System(s) Indication(s) on the Display, etc.

For your reference purpose.

Model Name	MS7000 MKII Serial No. _____
	System Printer (MSP 3000) Serial No. _____
Attached Accessories	Serial No. _____
	Serial No. _____
	Serial No. _____
	Serial No. _____
	Serial No. _____
Installation Date	
Authorized Dealer's Name TEL. No. Address	



KONICA MINOLTA

konicaminolta.com