

300 Spectrum Center Drive, Ste 400 | Irvine CA 92618 Office 949 754 4040 | Fax 949-627-2757 info@mochasolutions.com | mochalighting.com

HERO UNDERCABINET LIGHT USER

POWER ON

Press the On/Off button once



DIMMING

- HOLD the dimming button and RELEASE when the desired light output level is achieved.



OCCUPANCY SENSOR AND TIMER USAGE

 The Hero Light is specified and designed to save energy while providing the most amount of light at lowest power consumption. Meaning very energy efficient. By Default, the light will stay on for 30 min, but will continue turn back on immediately after detecting motion by the sensor.

INSTALLATION PROCEDURE FOR PLUG-IN UNIT

Carefully plan out your installation prior to actually securing your Hero light fixture to the mounting surface making sure that your 6 ft. line cord will reach the nearest electrical outlet.

1. Consult a local licensed electrician or electrical contractor if you are not sure about the installation

2. DO NOT ATTEMPT TO INSTALL THE FIXTURE WHILE PLUGGED IN.

3. Select a suitable dry mounting location (for indoors only). Make sure mounting surface is completely capable of supporting the fixture.

4. While resting the fixture on a flat surface...

5. Place the fixture in a location where you want it mounted and mark the center of each end with a pencil. Make sure the power cable can be easily plugged in when mounted. The fixture can be mounted horizontally or vertically.

6. Place the each of the mounting brackets inward (1.5") of the pencil marks and mark the center of the bracket hole.

7. It is recommended that a pilot hole be drilled in the mounting surface for wood screws. Pre-drill holed in the mounting surface with a 1/16" (1.6mm) drill bit for soft woods and a 3/32" (2.4mm) drill bit for hard woods.

8. Center the bracket over each pilot hole and drive the screws provided with the mounting hardware into the mounting surface by hand. Do not use power drill as this can strip the wood. Hand tighten until snug and the bracket is secure. DO NOT OVER TIGHTEN.

9. With both hands, align the slot (furthest away from you) of the Hero light fixture with the each bracket and tilt until the slot closest to you snaps in.

10. Connect daisy chain cable between fixtures tightly. Fixture can be damaged if failure to do so. Daisy chain cable can be connected either side of fixture.

11. Insert power cable on to the fixture tightly. The plug can be either side of fixture. Then plug fixture into a 120VAC 60Hz outlet. Fixture can be damaged if failure to do so.

TO PREVENT ELECTRIC SHOCK, MATCH WIDE BLADE OF PLUG TO WIDE SLOT POUR EVITER LES CHOCS ELECTRIQUES, INTRODUIRE LA LAME LA PLUS LARGE DE LA FICHE DANS LA FENTE LA PLUS LARGE



300 Spectrum Center Drive, Ste 400 | Irvine CA 92618 Office 949 754 4040 | Fax 949-627-2757 info@mochasolutions.com | mochalighting.com

INSTALLATION PROCEDURE - Suitable for STEEL under-cabinet mounting

7. Connect daisy chain cable between fixtures tightly. Fixture can be damaged if failure to do so. Daisy chain cable can be connected either side of fixture.

1. Consult a local licensed electrician or electrical contractor if you are not sure about the installation

2. DO NOT ATTEMPT TO INSTALL THE FIXTURE WHILE PLUGGED IN.

3. Select a suitable dry mounting location (for indoors only). Make sure mounting surface is completely capable of supporting the fixture.

4. While resting the fixture on a flat surface...

5. Attach the magnets bracket provided with the mounting hardware snapping onto the fixture. Use 2 brackets for 12" and 22" length. 3 brackets for 31" and 40"; 4 brackets for 40" and 49" length.

6. Place the fixture in a location where you want it mounted. Make sure the power cable can be easily plugged in when mounted. The fixture can be mounted horizontally or vertically. 8. Insert power cable on to the fixture tightly. The plug can be either side of fixture. Then plug fixture into a 120VAC 60Hz outlet. Fixture can be damaged if failure to do so.

CLEANING INSTRUCTIONS

Your fixture is made from quality materials that will last many years with minimal care. When cleaning, make sure you have unplugged your fixture and have allowed sufficient time for the unit to cool to room temperature. You should clean the housing and lens using a damp soft cloth. You should plug your fixture back in only after the fixture has thoroughly dried.

DISPOSAL

Follow local disposal laws. See <u>WWW.LAMPRECYCLE.ORG</u>