



# EFFICIENT TRENCH HEATER WITH A FAN










- · body made from high quality stainless steel
- · high forced convection output
- · rapid room heating
- heating also when the fan is off
- low electricity consumption
- safe 12V DC voltage
- contains own microprocessor-controlled unit
- also suitable for heat pump
- electronically commutated (EC) motor

#### **DIMENSIONS**


width - with standard frame	164 mm
width - with covering frame	190 mm
height	125 mm
length	900 - 3000 mm
connection *	G1/2"

<sup>\*</sup> internal thread on the heat-exchanger, without water connection accessories

## **CROSS SECTION**

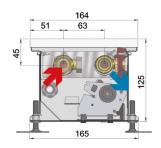

#### LONGITUDINAL SECTION

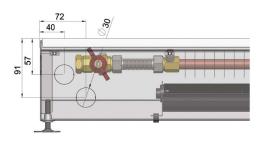

#### **FRAMES**

• Standard frame (AL-aluminium)



Covering frame (AL-aluminium)




## **GRILLES** - materials




(shades of the grilles are only illustrative)

## **GRILLES** - profile


wood-rolling-sparse

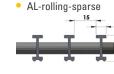

st.steel-rolling-sparse<sup>1)</sup>

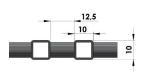

Al-segmented-sparse-high

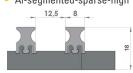

1) the grille must be ordered with the convector due to the modification of the convector construction

Standard grilles are transverse, if you are interested in LONGITUDINAL GRILLES, please contact your sales representative.

Convectors are designed to the CONCRETE FLOOR, in case of HOLLOW FLOOR installation, please consult with your sales representative.

The standard delivery includes convector and anchoring accessories. All other accessories (grille, connection accessories, control elements, etc.) must be ordered and specified separately.

As a part of the product development, MINIB, a.s. reserves the right of construction and price adjustments.

MINIB®


+420 731 152 133

export@minib.cz

www.minib.com



#### ORIENTATION AND CONNECTION OF THE CONVECTOR

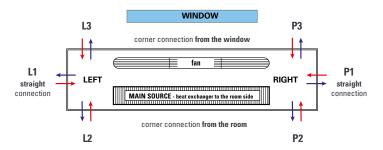

If the convector is used as an additional heat source which prevents the condensation of the window (exchanger position at the window side), please consult with your sales representative. Combination of the exchanger position (room side/window side), convector type (left/ right) and water connection (straight/corner) must be specified with the order of the convector.

#### **HEATING OUTPUT**

heating output Q [W]					
		speed			
length L [mm]	input / output water tempe-	speed 0	speed 1	speed 2	speed 3
	rature [°C]	air temperature tA = 20°C			
	85/75	107	545	581	661
09 = 900	75/65	86	439	467	532
	65/55 45/40	66 33	337 170	359 181	408 206
	45/40 85/75	125	636	677	771
	75/65	101	512	545	621
10 = 1000	65/55	77	393	418	476
	45/40	39	198	211	240
	85/75	170	864	919	1046
	75/65	137	695	740	842
12 = 1250	65/55	105	533	568	646
	45/40	53	269	287	326
	85/75	214	1091	1161	1321
15 = 1500	75/65	173	878	935	1064
15 = 1500	65/55	132	674	717	816
	45/40	67	340	362	412
	85/75	259	1318	1403	1597
17 = 1750	75/65	208	1061	1130	1286
17 – 1730	65/55	160	814	867	986
	45/40	81	411	437	498
	85/75	304	1545	1645	1872
20 = 2000	75/65	244	1244	1325	1507
	65/55	187	954	1016	1156
	45/40	95	482	513	583
	85/75	348	1773	1887	2147
22 = 2250	75/65 65/55	280 215	1427 1095	1519 1165	1729 1326
	45/40	108	552	588	669
	85/75	393	2000	2129	2423
25 = 2500	75/65	316	1610	1714	1951
	65/55	243	1235	1315	1496
	45/40	122	623	663	755
	85/75	437	2227	2371	2698
27 = 2750	75/65	352	1793	1909	2172
	65/55	270	1375	1464	1666
	45/40	136	694	739	841
30 = 3000	85/75	482	2454	2613	2973
	75/65	388	1976	2104	2394
	65/55	298	1516	1614	1836
	45/40	150	765	814	927


The technical parameters are set according to the relevant standards. In fact, they may vary depending on the location of the convector, the cover grille, the connection type.

#### **CONNECTION OPTIONS AND ACCESSORIES**

- connection WITHOUT HEAD
- connection WITH ELECTROTHERMAL HEAD
- connection WITH CUSTOMER HEAD (after consultation)

The type of connection accessories varies according to the type and purpose of the convector. Connection accessories are packed separately and are not included in the standard convector delivery. Information on request from your sales representative or on our website.

## **REGULATION OPTIONS**

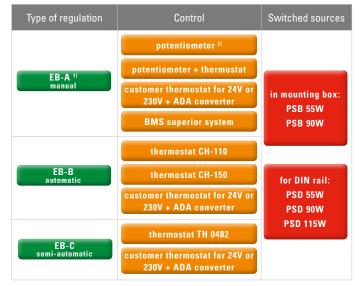

IT IS POSSIBLE TO USE YOUR OWN REGULATION.

1) it is necessary to reset the control unit-EB-block (by default it is set to EB-B / EB-C)

2) external potential-free switching, e.g. via a boiler

## **EXAMPLE OF ORDER CODE**



Orientation: L = left connection / P = right connection

\*orientation and length complete according to the specification of the convector

#### **ACOUSTIC PRESSURE**

	Speed			
length L [mm]	speed 1	speed 2	speed 3	
	Equivalent acoustic pressure level LAeq,2m [dB]			
900	21,3	23,6	34,9	
1000	21,6	23,9	35,2	
1250	22,4	24,7	36,0	
1500	23,1	25,4	36,7	
1750	23,7	26,0	37,3	
2000	24,3	26,6	37,9	
2250	24,8	27,1	38,4	
2500	25,3	27,6	38,9	
2750	25,8	28,1	39,4	
3000	26,3	28,6	39,9	

measurement at a distance of 2m from the noise source at 1m height

## **INPUT POWER**

length [mm]	power [W]  EC  MOTOR
900	6
1000	6
1250	10
1500	11
1750	12
2000	16
2250	17
2500	17
2750	22
3000	22

INDIVIDUAL CALCULATION of technical data you can find on our website.

