

 
DRG No
BL/E1100/53 INST

USED ON

THIRD ANGLE PROJECTION

REMOVE ALL SHARP EDGES UNLESS SPECIFIED


DO NOT SCALE - ASK



OPERATING NOTES :-

- 1) Power up the NEPS.
- 2) Ensure no nozzles are blocked or covered.
- 3) Attach Dewpoint Function Checker to GAS OUT nozzle.
- 4) Press Gas Test button on the membrane panel.
- 5) Operate the squeeze bulb on the Dewpoint Function Checker.
After 2-3 minutes you should see a change in the dewpoint value displayed.
- 6) If no change in the dewpoint value is displayed then the sensor needs to be changed.

THIS DRAWING IS THE PROPERTY OF BROWNELL LTD. AND MAY NOT BE COPIED OR REPRODUCED WITHOUT THEIR PRIOR WRITTEN PERMISSION

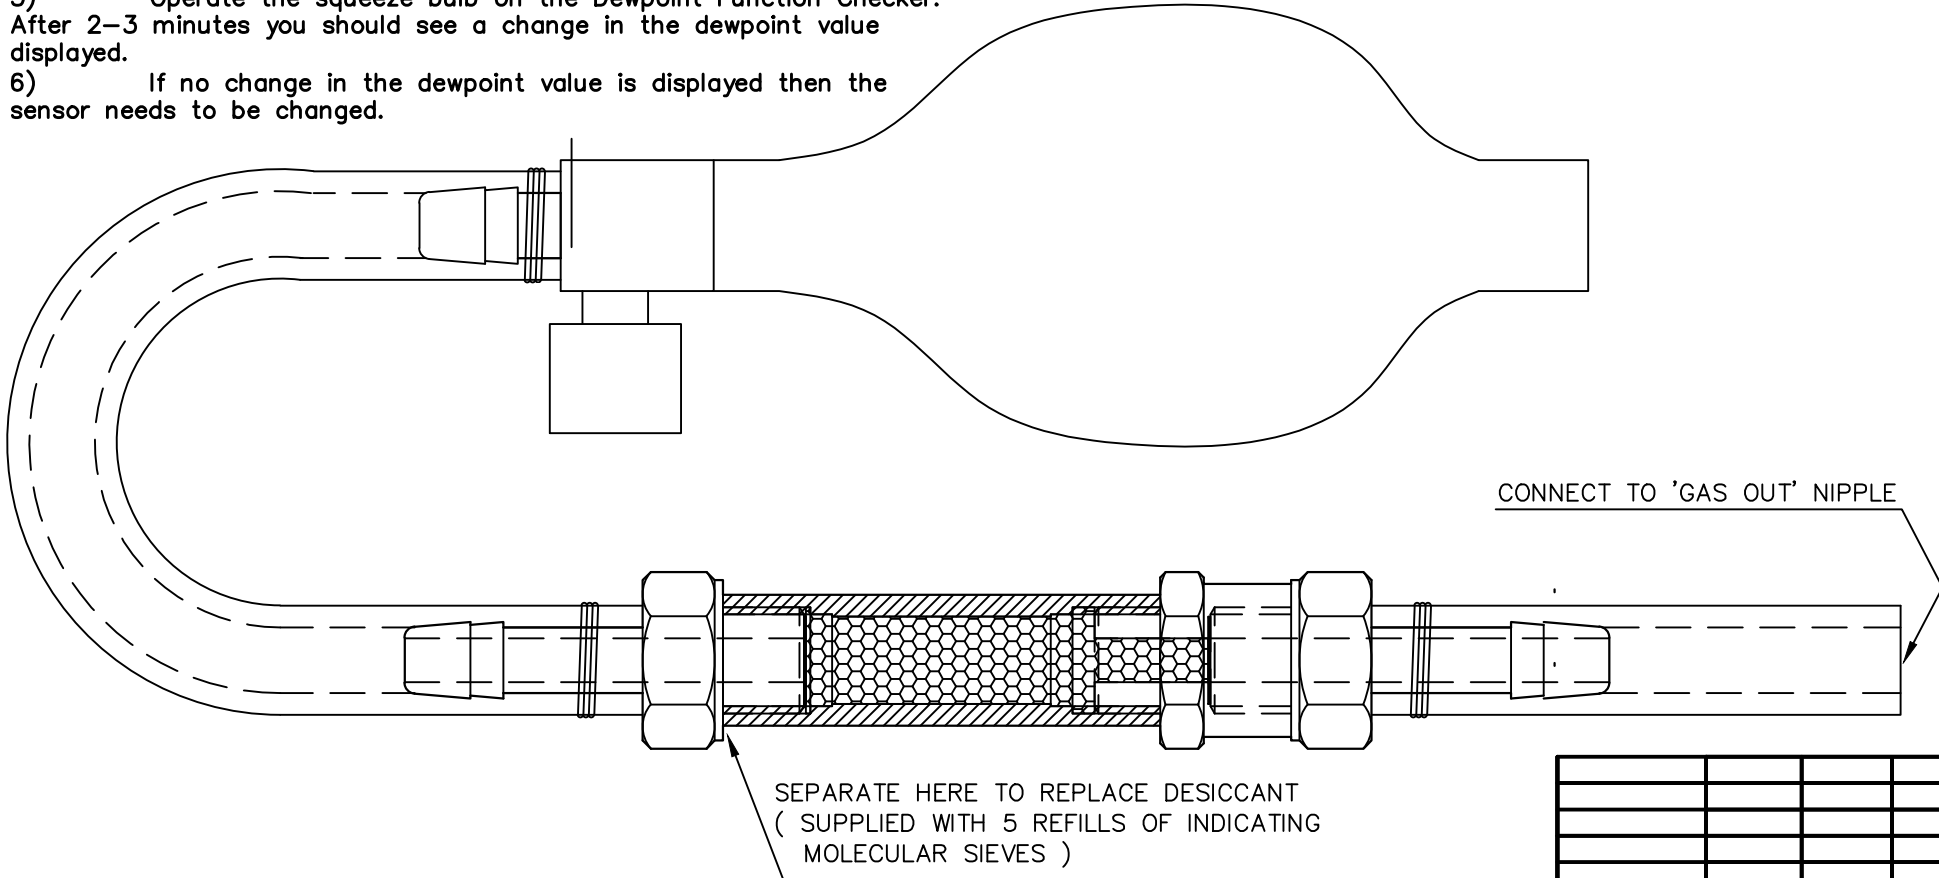

NOTES ADDED	6872	2	28-09-16
ORIGINAL		1	09-01-07
CHANGE	MOD No	ISSUE	DATE

MATERIAL		PROTECTIVE FINISH		TOLERANCES		BROWNELL Ltd. LONDON NW10 7XF		RED DOT-ORIGINAL BLACK DOT-COPY	DRAWN JP	CHECKED <i>NP</i>
EST. WT.				DIMENSIONS IN in/mm MM SURFACE ROUGHNESS — SCALE (ORIGINAL) 2:1		TITLE DEWPOINT SENSOR FUNCTION CHECKER				