

DVT LIGHT

A1D – PJ/MB Update guide

V0.0.5


This document is a guide for updating PJ-series and the MB-series with the DVT Light A1D.

DISCLAIMER:


If you only see Bootloader and no version in the startup, then contact DVT Light.

This Guide can only be used with Lamps that have bootloader v.0.2.0 and up to v.0.3.3.

It cannot update a Lamp with just the Bootloader present at startup

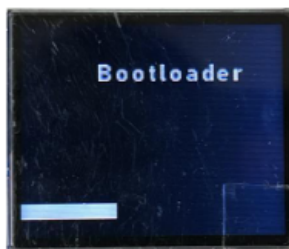

NOT OK

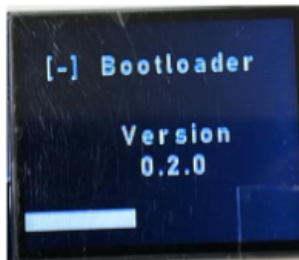

OK



OK

Update PJMB from website

Equipment needed:

1. Windows PC
2. USB-C cable
3. DMX Cable

1. Connect A1D via USB-C to a Windows PC

Connect the A1D to a Windows PC, via a USB-C cable:




2. Open Browser on your PC

Open a preferred browser on your computer. A1D works with Chrome, Firefox and Edge.


3. Go to 2.2.2.2 in your browser

Navigate to the URL-bar and type **2.2.2.2** and press **ENTER**. You will be presented with a website like this:

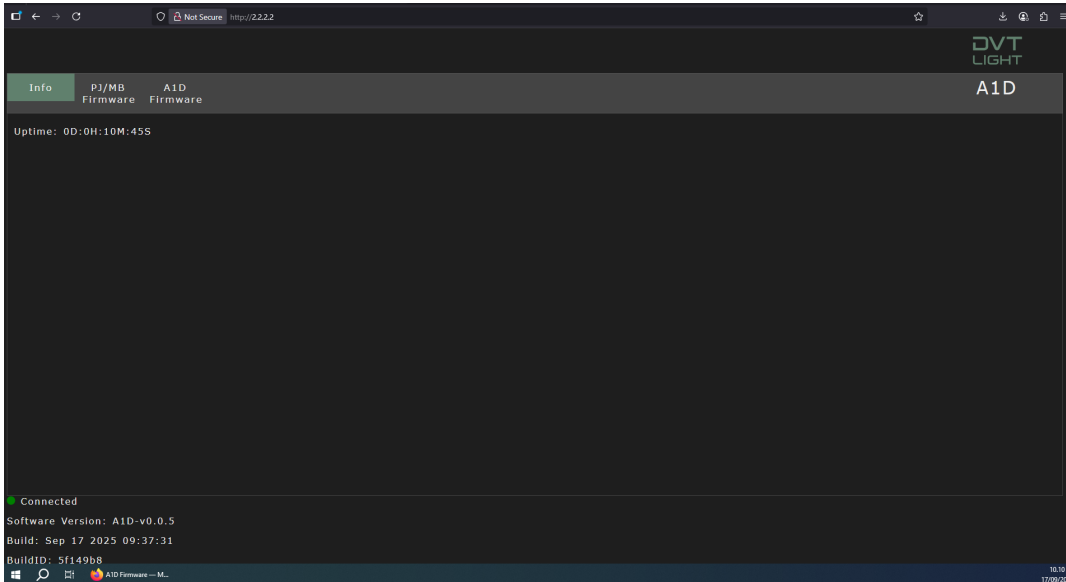


4. Navigate to PJ/MB Firmware

Now press the PJ/MB Firmware tab, as shown below:

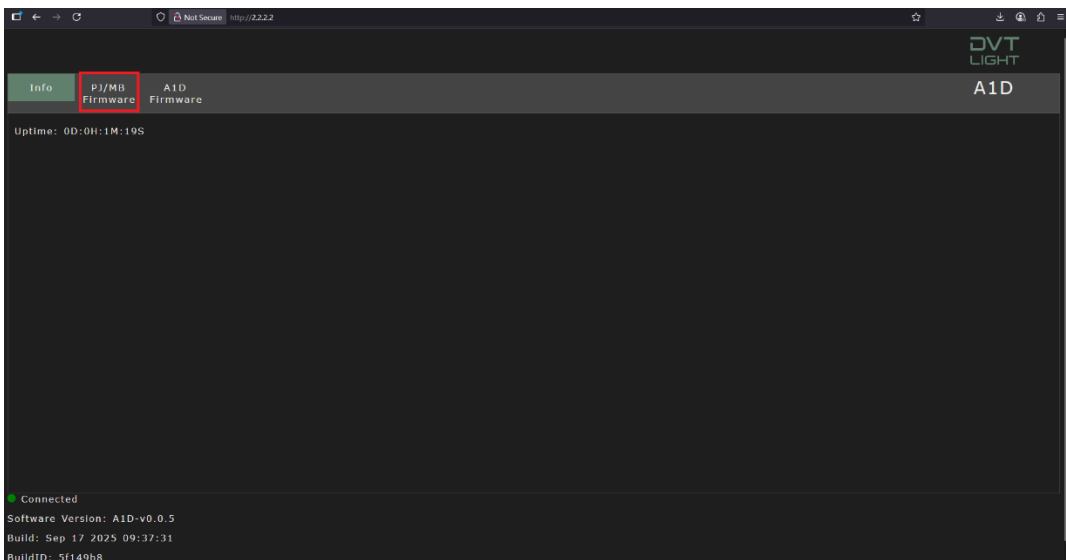

5. Select desired firmware to upload using dropdown menu

Select the desired firmware in dropdown menu like shown below:

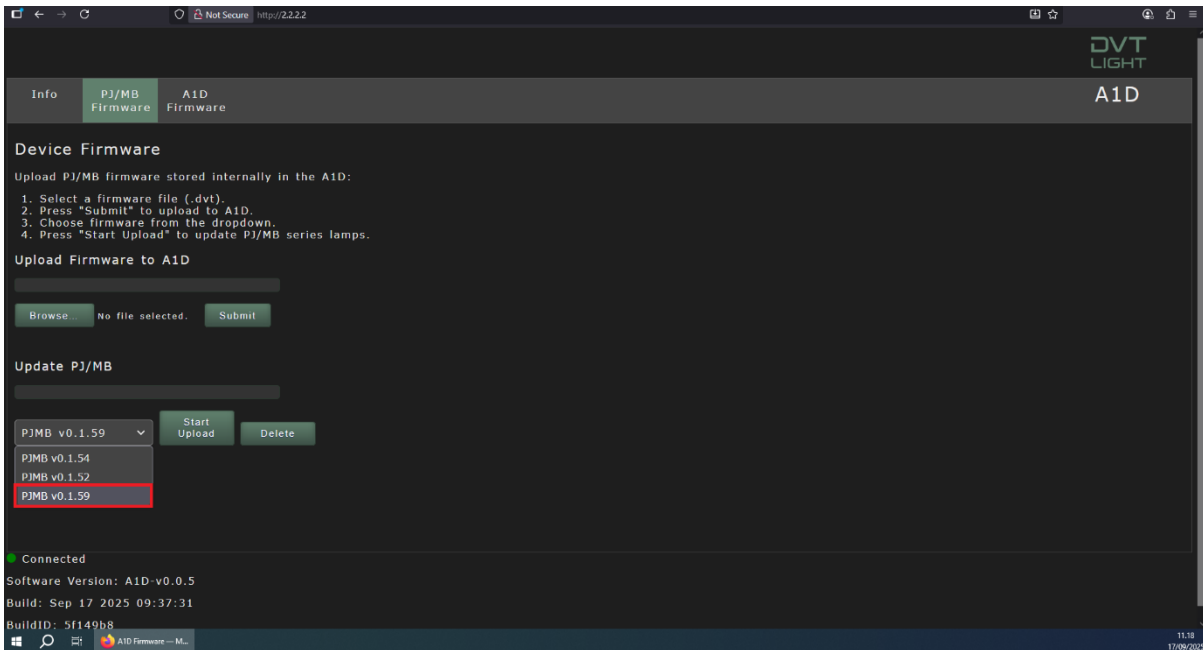


If you have firmware you would like to upload to the A1D, please press the browse button and find the desired firmware. Then click on the submit button to upload and add it to the dropdown menu.

If the desired firmware is in the list, select it and go to next step.


6. Connect PJ/MB via DMX and Start upload

After choosing the desired firmware from the dropdown menu, remember to have your PJ/MB lamp connected via DMX and then press **Start Upload**.

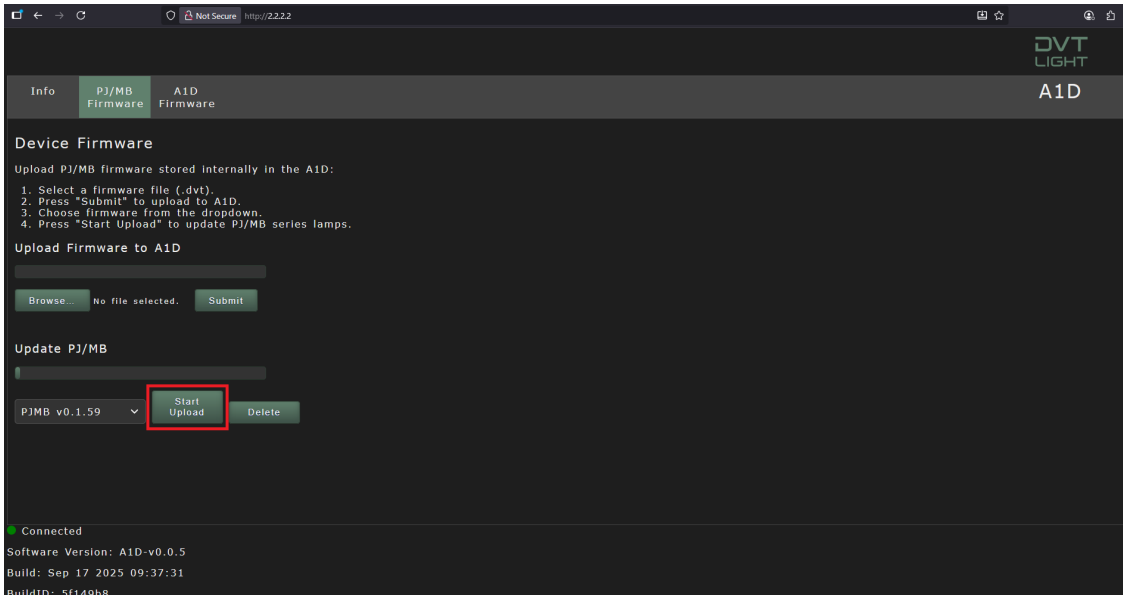

This will take some time but wait until the progress bar and the lamp has reset.

Update progress with lamp with Bootloader V.0.2.0

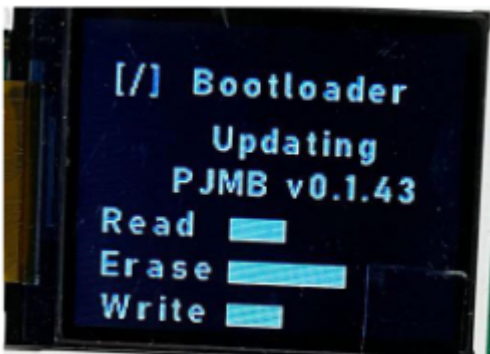

Update progress with lamp with Bootloader V.0.3.3

