

## Sparkular Cold Spark Fontän



Button "1": DMX address 01 machine star/stop, press button "1", machine start, press button "1" again, machine stop.

Button "2": DMX address 02 machine star/stop, press button "2", machine start, press button "2" again, machine stop.

Button "3": DMX address 03 machine star/stop, press button "3", machine start, press button "3" again, machine stop.

Button "4": DMX address 04 machine star/stop, press button "4", machine start, press button "4" again, machine stop.

Button "5": DMX address 05 machine star/stop, press button "5", machine start, press button "5" again, machine stop.

Button "6": DMX address 06 machine star/stop, press button "6", machine start, press button "6" again, machine stop.

Button "7": DMX address 01~06 machines sparkle from left to right.

Button "8": DMX address 01~06 machines sparkle from right to left.

Button "9": emergency stop, all machines stop working.

Button "10": low sparks

Button "11": medium sparks

Button "12": high sparks





10键低档, 11号键中档, 12号键高档, 9号键停止和预热



This key is for preheating the temperature or emergency stopping.

make this key to top, the sparkler height will be highest