

Sonicboom X Remote Manual

» Progo remote control adopts integrated antenna and multiple code technology ensure stable communication.

» Progo adopts low power consumption technology guarantee long standby time even the remote keeps at ON status, Progo use 9V 6F22 battery. It is necessary to change the battery when LED turns dark, blinks or machine not work when press the function key.

» Two ways to match the remote control with machine.

1. Turn on the machine , switch to Wireless Control interface as below, set it at ON status and press ENTER to confirm the setup. Press “A” button on remote control to match the machine.

2. Press “A” button in the first 5s when turn on the machine . The remote control will match with the machine automatically.



» Disconnect DMX communication cable when use remote control, otherwise wireless function disabled



A	Off;
B	On ; (White LED on together)
C	On; (without LED)
D	On ;Custom LED color: Set through device Menu “Color Options”. Ex: set red, press this button will be red LED on

» setup communication code: please setup the communication code manually to avoid the interference by other similar remote control. Progo remote control have 5 different communication code corresponding to 5 colors: red, green, blue, yellow, white. Long press “A/OFF” for 3s, LED blinks, release the button and press “A” to switch communication code by

change between different colors, then press “B” to save the change. After change the communication code, please match the remote control with the machine again.