

# Sparkular BT01 Remote Control



1	No.1 START	2	No.2 START
3	No.1 STOP	4	No.2 STOP
5	Firing Duration -0.1S	6	Firing Duration +0.1S
7	FountainHeight -1	8	Fountain Height +1
9	Pre-heat Off	10	Pre-heat On
11	All Stop	12	All Start

## >> Note

1.If the remote Control cannot be operated, the Wireless function may not be enabled. Open the Sparkular machine, press the **MENU** key for 3 seconds to ENTER advanced Settings, then switch to the Wireless Control MENU through the MENU key, set it to ON, and press **ENTER**.

Wireless Control  
ON

2.When using remote control, needs to unplug DMX cable,When receiving the DMX control signal, the wireless control will be invalid.

3.Press then Menu key to access the Fountain Height,can change the default height (Default setting).

4. Button function : All keys are triggered at one time, do not hold down.Key 5 and 6 can be pressed continuously to quickly adjust the setting delay; if **Firing Duration** setting 55 ( means the delay is 5.5 seconds),If Press **All Start(Number 12)**, Fountain start, After 5.5 seconds ,Fountain Stop.

Firing Duration  
55

5.DMX Address:

Sparkular No.	1	2
DMX Address	1	3