



User manual

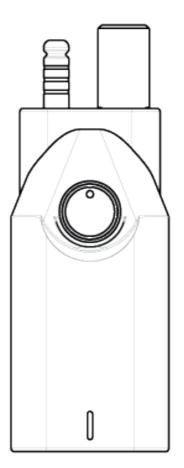

Active Splitter

CONGRATULATIONS ON YOUR NEW PRODUCT FROM IRIDIUM WATERPROOF COMMUNICATION SYSTEMS

 Active Splitter



IWCS HOPE YOU WILL ENJOY THE BENEFITS OF TROUBLE FREE HIGH QUALITY INTERCOM. PLEASE READ THESE INSTRUCTIONS CAREFULLY BEFORE FIRST USE.

IF INSTALLED, OPERATED AND MAINTAINED ACCORDING TO THIS MANUAL, ACTIVE SPLITTER WILL BE A RELIABLE PARTNER IN MANY YEARS TO COME.

> THOMAS B SVENNINGSEN CO-FOUNDER OF IWCS



Content 3

1. Introduction

| | 1.1 Disclaimer1.2 Copyright1.3 Trademark acknowledgements1.4 Safety warning | Page: Page: Page: Page: | 4 4 5 |
|------------|--|----------------------------------|-------------|
| 2. Unbox | ing | | |
| | 2.1 In the box | Page: | 6 |
| 3. Funkti | on | | |
| | 3.1 Top Connector3.2 Bottom Connectors3.3 Volume Controls | Page: Page: Page: | 7 7 7 |
| 4. How To | o Use | | |
| | 4.1 Usage | Page: | 8 |
| 5. Config | uration | | |
| | 5.1 Configured 5.2 Part number 5.2 Serial Number | Page: Page: Page: | 9 9 9 |
| 6. Technie | cal Drawings and Data | | |
| | 6.1 Measurements6.2 Specifications | Page: Page: | 10 10 |
| 7. Servic | e And Maintenance | | |
| | 7.1 Maintenance 7.2 Troubleshoot | Page: Page: | 11 11 |





1.1 Disclaimer

Any responsibility or liability for loss or damage in connection with the use of this product and the accompanying documentation is disclaimed by IWCS.

The information in this manual is provided for informational purposes only, is subject to change without notice and may contain errors or inaccuracies.

Manuals issued by IWCS are periodically revised and updated. It is recommended that anyone relying on this information acquires the most current version by requesting it at info@iwcs.eu.

IWCS is not responsible for the content or accuracy of any translations or reproductions, in whole or in part, of this manual from any other source.

1.2 Copyright

2023 Iridium Waterproof Communication Systems ApS. All right reserved. Printed in Denmark.

1.3 Trademark acknowledgements

Active Splitter is a Trademark by Iridium Waterproof Communication Systems ApS.

| Revision | Date | Description |
|----------|---|--|
| 1.0 | 06-07-2023 | |
| | Porthusvej 7A 3490 Kvistgaard Denmark | +45 43 43 26 26 info@iwcs.eu www.iwcs.eu |

The following general safety precautions must be observed during all phases of operation, service and repair of this equipment. Failure to comply with these precautions or with specific warnings elsewhere in this manual violates safety standards of design, manufacture and intended use of the equipment. IWCS assumes no liability for the customer's failure to comply with these requirements.

FIRE

In case of fire, harmful gases and fumes may occur. One should immediately leave the area and seek help. In case of suspected smoke in the lungs, a doctor should be consulted.

POWER LOSS

In the event of a power outage, Active Splitter will turn off and will automatically restart when power is restored. Power interruptions limited to the Active Splitter will not affect other users communication. IWCS is not responsible for any power outages or consequences thereof, of any kind.

WARRANTY LIMITATIONS

This unit is NOT a user serviceable unit and under no circumstances should the unit be opened except by authorized personnel. Unauthorized opening of the unit will invalidate the warranty.

DISPOSAL

When disposing of the Active Splitter and related equipment, it must happen in accordance with applicable national law.



 







2.1 In the box

1 x Active Splitter



1 x User Manual

 







3.1 Top Connector



 3.2 Bottom Connectors



3.3 Volume Controls

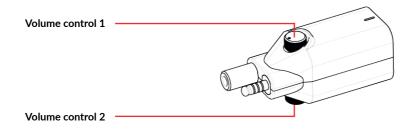



Porthusvej 7A +45 43 43 26 26 3490 Kvistgaard info@iwcs.eu Denmark www.iwcs.eu



4.1 Usage

Insert the Active Splitter into the downlead cable from your CAP (Communication Access Panel).

Insert your headsets into the designated ports at the bottom of the Active Splitter. Ensure that you connect the headsets according to your specific configurations.

Adjust the volume controls on the Active Splitter for each connected headset individually.

Π

Ń

Ń

N

(

Please note that the master volume is controlled on your CAP (Communication Access Panel). The volume settings on the Active Splitter are dependent on the volume level set on your CAP. Adjusting the volume on the CAP will directly affect the maximum volume output of the Active Splitter. Make sure to set the desired volume level on your CAP for optimal audio experience.

The onboard ICS (Intercom System) must provide full sidetone to enable duplex intercom between port 1 and port 2 on the Active Splitter.



Porthusvej 7A +45 43 43 26 26 3490 Kvistgaard info@iwcs.eu Denmark www.iwcs.eu

Configuration 9

5.1 Configuration

| Config. | |
|-------------|--|
| Peltor | |
| NATO | |
| David Clark | |
| High Gain | |
| Low Gain | |

| Config. | |
|-------------------|--|
| Peltor | |
| NATO | |
| David Clark | |
| High Gain | |
| Low Gain | |
| Phantom Power | |
| | |
| Config. | |
| Peltor | |

NATO David Clark High Gain Low Gain Phantom Power

5.2 Part Number

IR-46-TX108-01-???

5.3 Serial Number





Denmark

Porthusvej 7A +45 43 43 26 26 3490 Kvistgaard info@iwcs.eu www.iwcs.eu

10 Technical Drawings and Data

6.1 Measurements

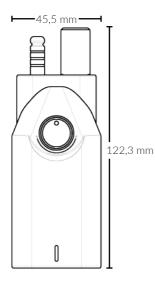

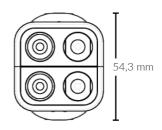

6.2 Specifications

| Specifications | Active Splitter | |
|-------------------|-----------------------------|--|
| Weight | 195 g | |
| Temperature Range | -15 to + 55 degrees Celsius | |
| Supply Voltage | 28 VDC nominal | |
| Power Consumption | 1W (excl. headsets) | |
| Gain Range | x - y dB | |
| Connectors | TP108 / TJ108 | |



Service And Maintenance **11**

7.1 Maintenance

Please refrain from using chemicals or solvents to clean your Active Splitter.

To clean the Active Splitter, use a small brush or a toothbrush to gently remove any dust or debris around the volume adjusters and connectors. Regular cleaning will help maintain optimal performance and ensure longevity.

Avoid applying excessive pressure, friction or using sharp objects on the product, as these can cause damage and potentially void the warranty. Additionally, if the Active Splitter remains unused for an extended period, it is advisable to disconnect it from other equipment.

7.2 Troubleshoot

| Problem | Cause | Action |
|------------------------|---|---|
| No sound in headset. | Wrong slot input. | Make sure your headset is put into the correct input. |
| No sound from headset. | Wrong slot input. | Make sure your headset is put into the correct input. |
| No sound from headset. | Wrong config. No power supplyed to Active Splitter. | Check config. |
| | | |
| | | |
| | | |



Active Splitter is developed, designed and manufactured by



Porthusvej 7A 3470 Kvistgaard Denmark

+45 4343 2626

Info@iwcs.eu www.iwcs.eu

