



By mriisj Kreidler.dk

- | | |
|---|--|
| <p>1 = Headlight, (1a = LED Novsight H4 12V 30 Watt).
 2 = Turn signal front.
 (2a = Front left, 2b = Front right, LED BA15S 12V 2.5W).
 3 = Speedometer, Koso D55, 160 km/h, Type BB551B35.
 4 = Tahcometer, Koso D55, 16.000 RPM with temp sensor.
 Type BA551B20.
 5 = Horn 12V DC.
 6 = Lamps for turn signal and high beam, LED BA7S 12V 1W.
 7 = Light and horn switch.
 (7b = Low/High beam, 7c = Horn button, 7d = Flash).
 8 = Turn signal switch and engine off switch.
 9 = HPI Light Ignition 201C130A-2CF.
 10 = Ignition Coil HPI 210 V186.
 11 = Speed sensor.</p> | <p>12 = Ignition and light on switch.
 13 = Brake light switch, 13a = Front, 13b = Rear.
 14 = Odometer switch.
 15 = Turn signal relay.
 16 = Battery Motobatt MB7U 12V 6.5 Amp.
 17 = Generator system, HPI 210K012A-2CF, 12V 65W.
 18 = Turn signal rear.
 (18a = Rear left, 18b Rear right, BA15S LED 12V 2.5W).
 19 = Brake and tail light.
 (LED: BA15S 12V 1W Rear light and 12V 2.5W Brake light)
 20 = Electronic charging unit.
 21 = Ignition curve switch.
 22 = Motor temperature sensor.</p> |
|---|--|

Lfd. No.
D 1.26X

Revision
1.00

Circuit Diagram 87.84.23

Florett RS-GS 12V HPI Ignition



Valid
From frame No. ALL