

PRODUCT MANUAL

Model:

- ☐ K021
- ☐ K022
- ☐ K023
- ☐ K025
- ☐ K029



K021

PICTURES:

SIZE:



K022



K023



K025



K029

Model Size:

K021: 1000*900*2150mm


K022: 1450*900*2150mm

K023: 1000*1000*2150mm

K025: 1000*1000*2150mm

K029: 950*950*2150mm

Content

Dear Users,
Thanks for purchasing our products.In order to use these products safety and effectively, please read this manual carefully before use.
We reserve the right to improve our products.
This is a currenty manual,with standard as 

 
Content

Content	01
Preparation	02
Part list	02
Waterway drawing	03~04
Water&electricity install drawing	05
Parts drawing	06~10
Installation drawing	11~20
Operation instruction	21~24
Aftersales service	
Warning	25
Usage Notice	25
Reminder	26
Maintainance	26
Trouble Shooting	27


Preparation Parameter

Preparation


Tool



17# Spanner

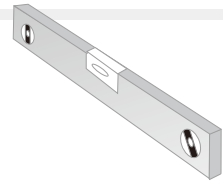


Spirit level

 


Screwdriver

 Suggest using power screwdriver



3m

 Tape Measure



4/2.5mm

Hexagon Wrench

1. Check the Qty of components according to packing list or parts list.
 2. Check the Qty of materials according to parts list.
 3. Check if there is damage on the surface of product components or not.
 4. A grounded outlet needed as recommended to use at least 16A with a fuse of the leakage protection switch.
 5. A professional personnel or electricians is needed when installing electrical components.
- If can not satisfy above conditions, please stop installing immediately and contact the dealer.

Technology parameters

Rated Voltage: AC230V

Rated Power: 3020W

Rated Current: 13.2A

Rated frequency : 50~60HZ

Insulated Resistance: >20MΩ

Waterproof grade: IPX4

Safety grade: I

Load parameter

Up heater : AC230V/200W

Down heater : AC230V/250W



Fan: DC12V/5W

Color Light: DC12V/5W

Speaker: 8Ω/10W

Waterway drawing

K021/K022

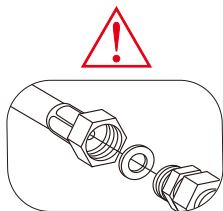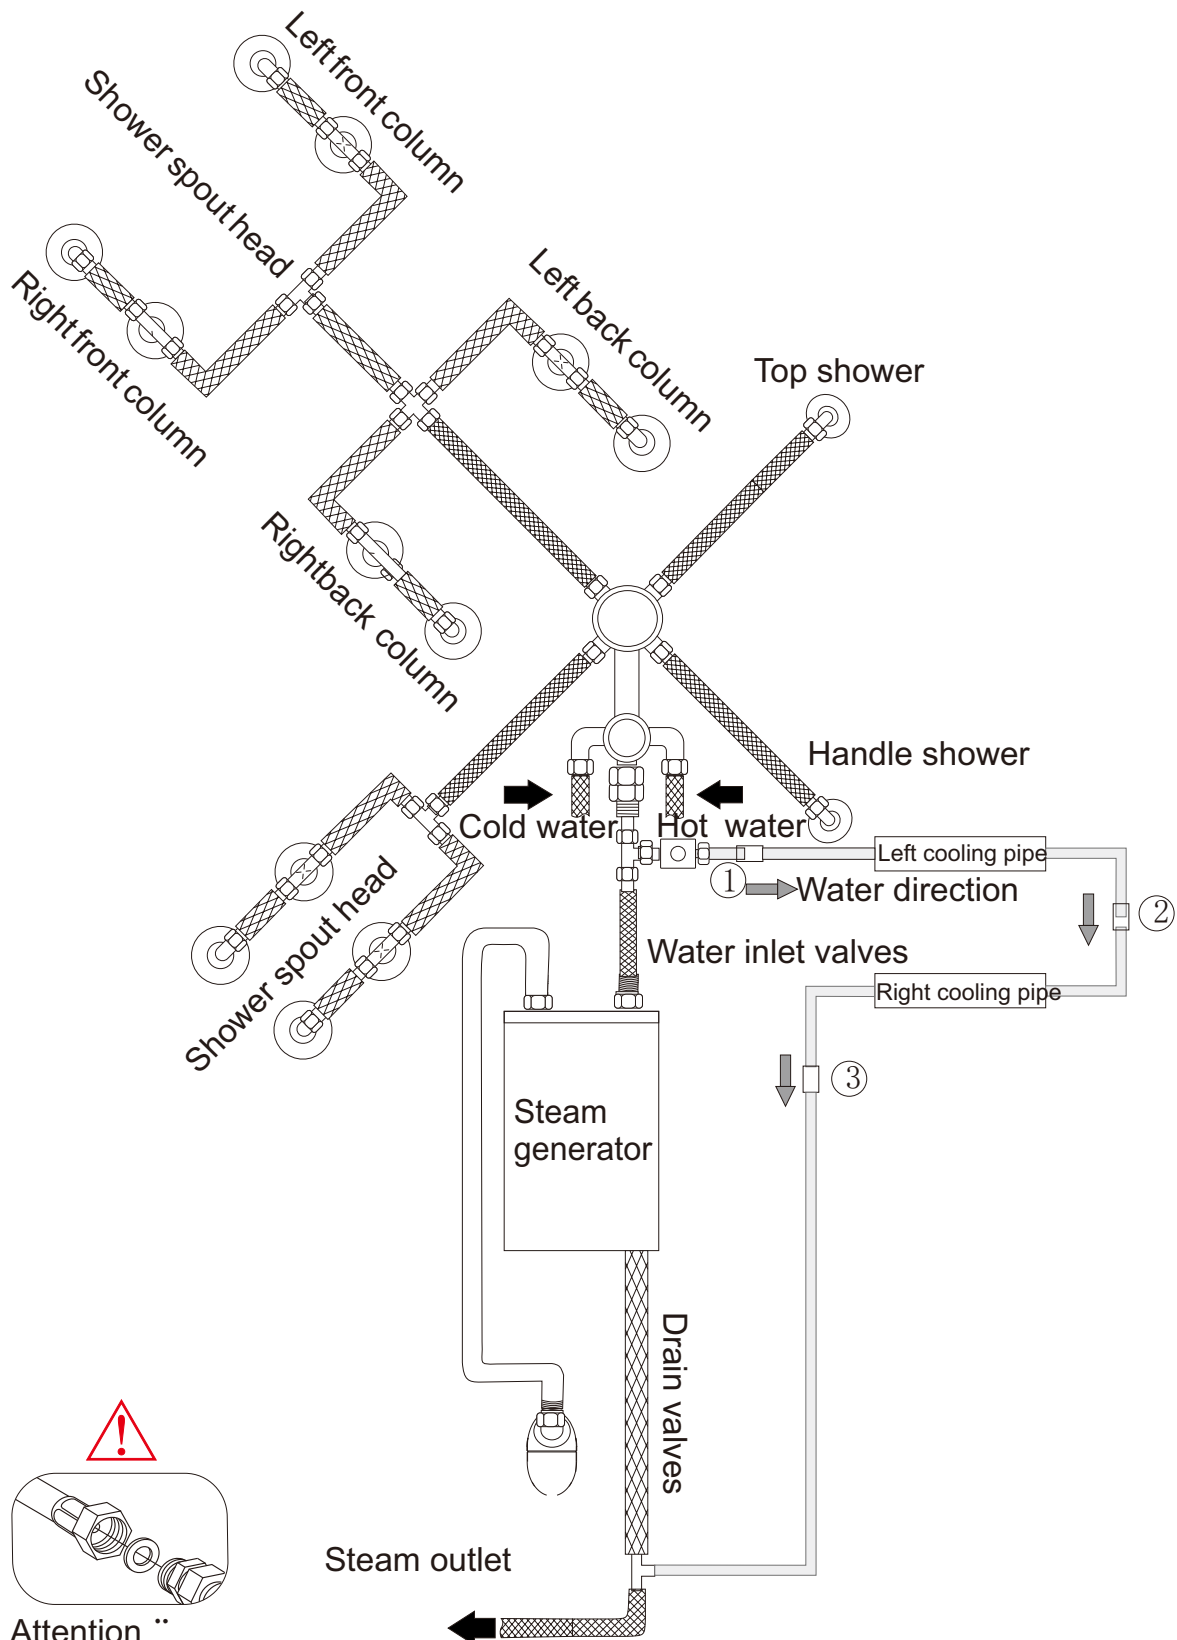


Attention "

With seal ring at every connect part

Connect drainer

Waterway drawing

K023/K025/K029


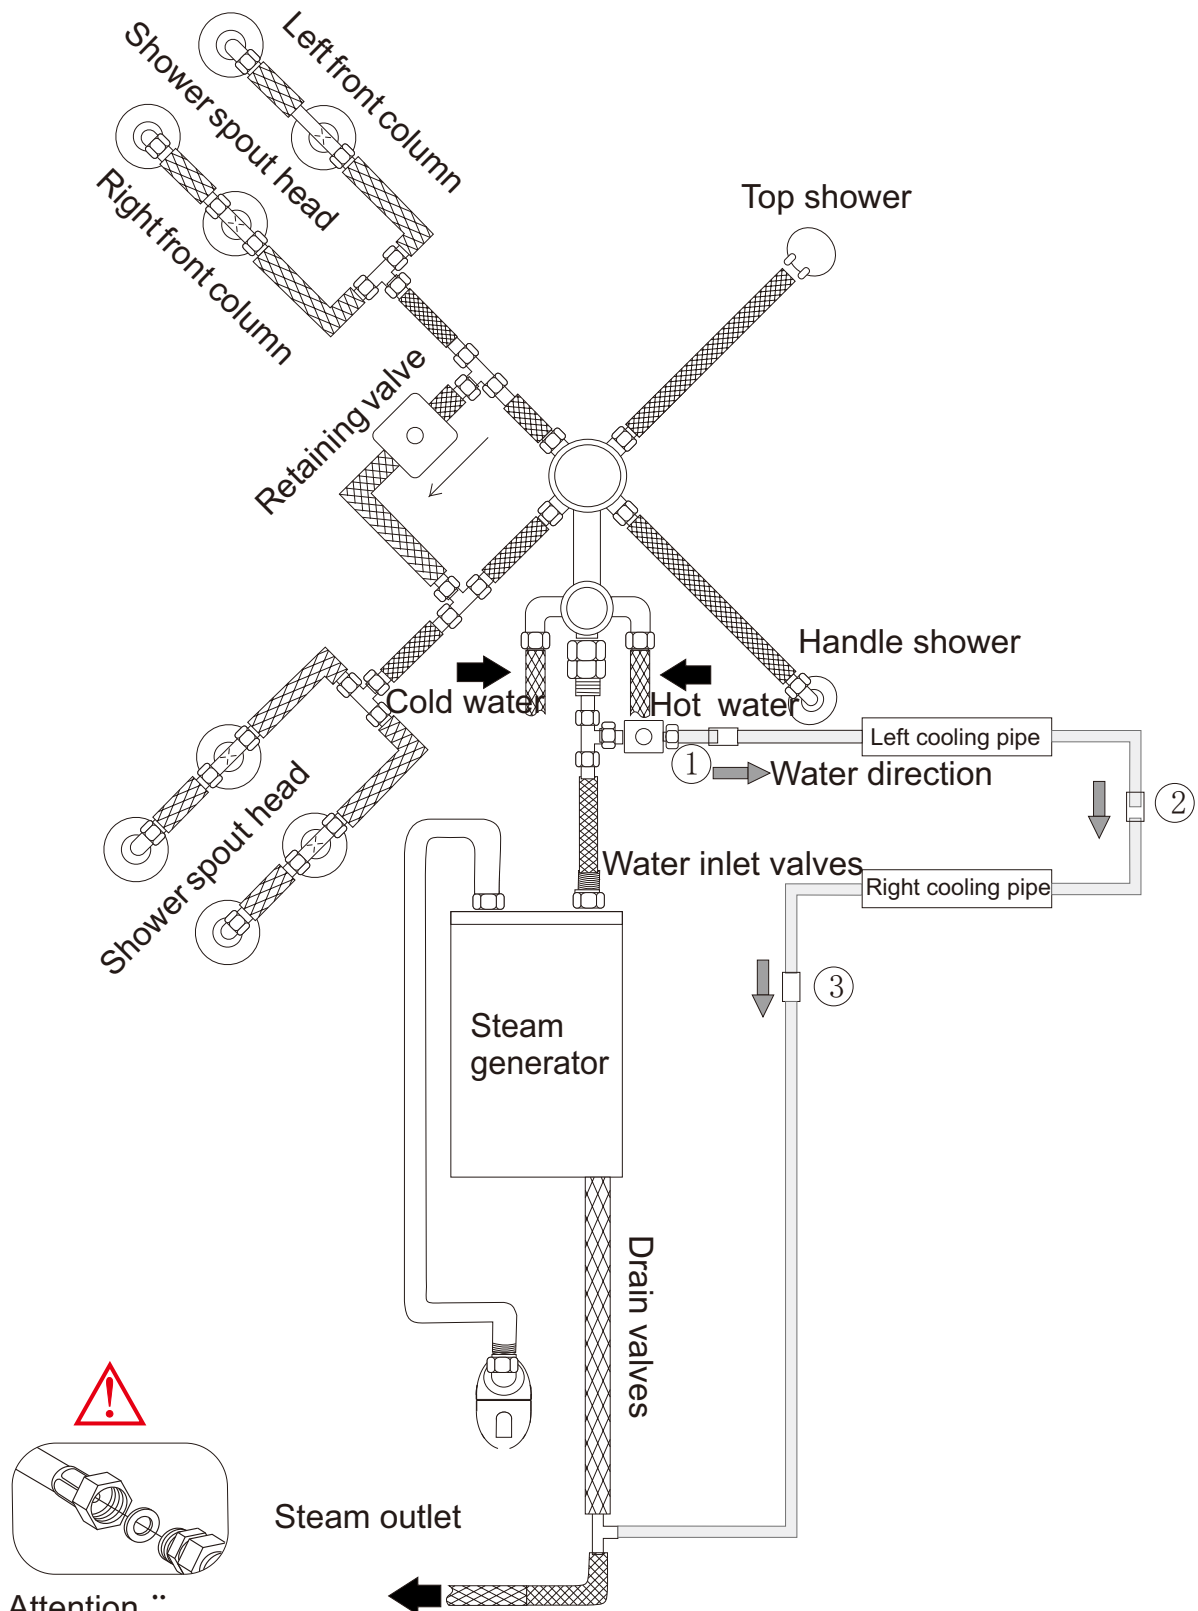


Connect drainer

Water&electricity install drawing

K021/K022

K023/K025/K029

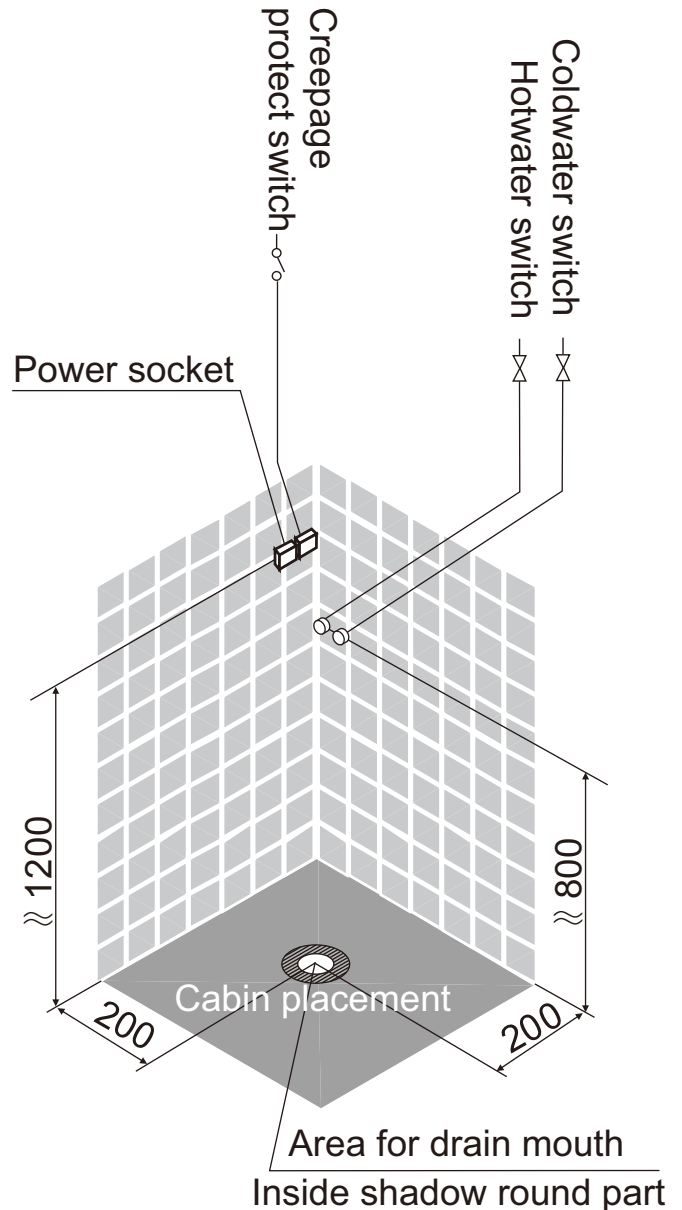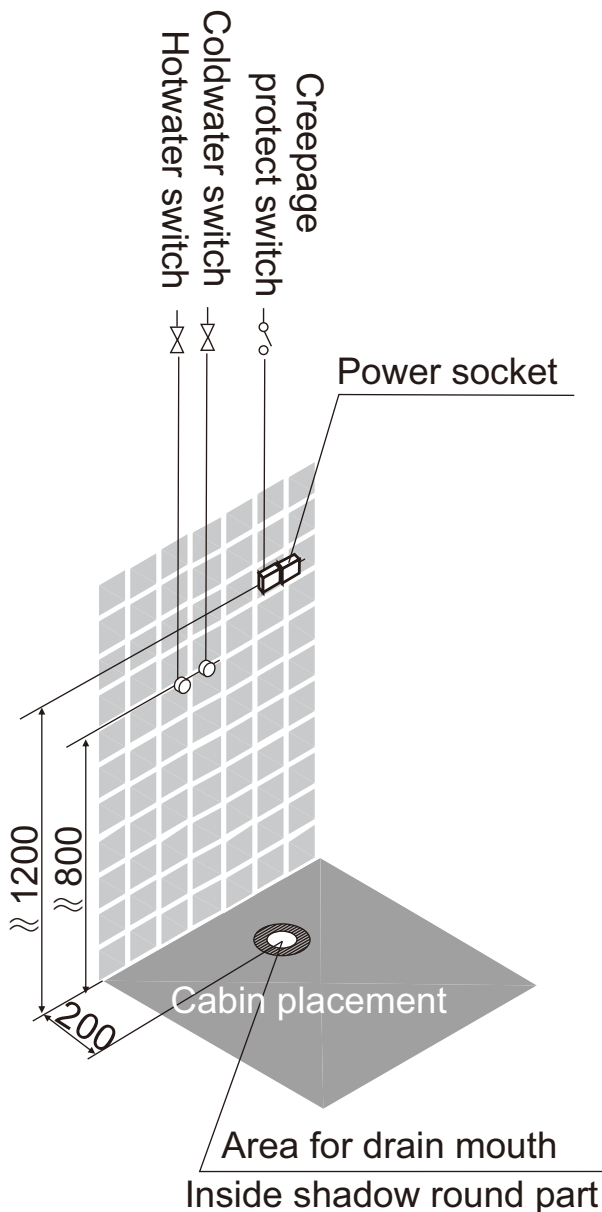

Hot water: G1/2 galvanize zinc pipe, height 800mm;

Cold water : G1/2 galvanize zinc pipe, height :800mm;

Power: 230V/50Hz single phase three line system, above 16A load capability, 1200mm high from earth;


Sinkhole: The diameter of the sinkhole underground should be $\Phi 60$.

Attention:

1. When turn on the steam, please be sure that there`s enough cold water, otherwise, the steam generator will be damaged;
2. Power and water resource should be controled by divide switch, switch must be placed in the convenient place;
3. After enjoying your shower, the power and water resource must be turn off.

Parts drawing


K021

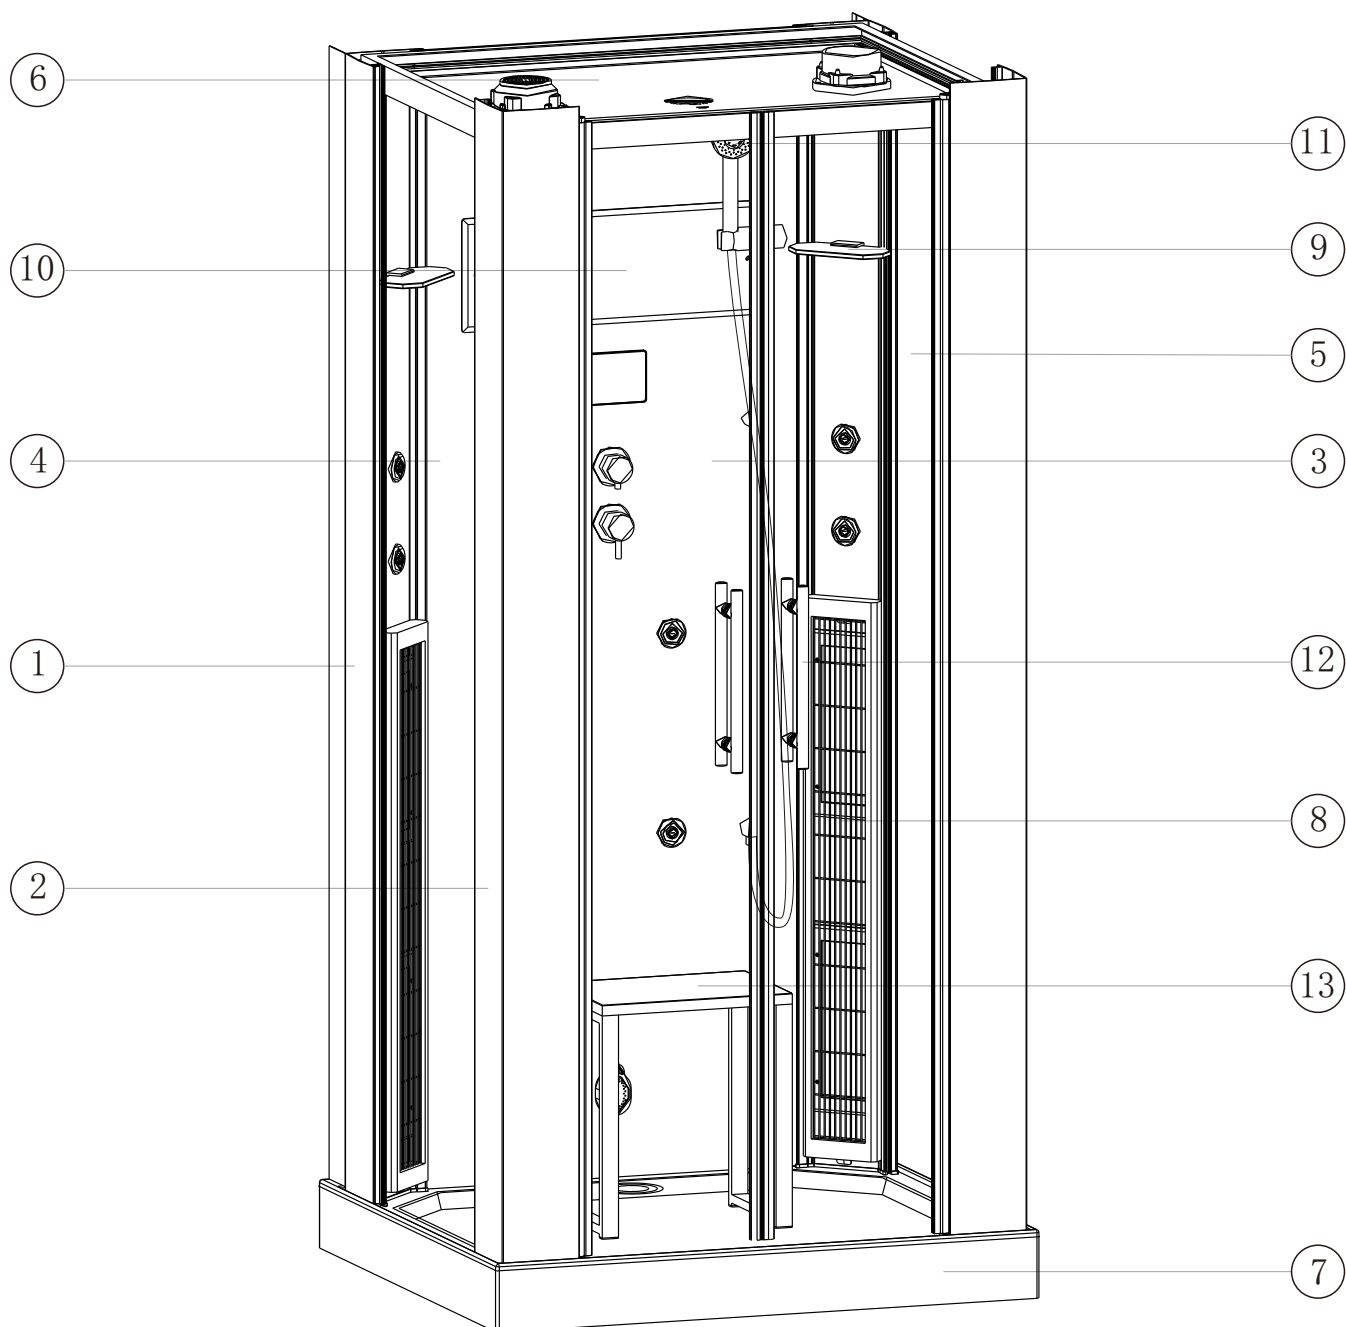

No.	Parts name	Qty	No.	Parts name	Qty
1	Back column	2	8	Cover of heater	4
2	Front column	2	9	Shelf for shampoo	2
3	Back fix glass	1	10	Mirror	1
4	Side fix glass	2	11	Handle shower	1
5	Glass door	2	12	Handle	2
6	Top	1	13	Chair	1
7	Tray	1			

Parts drawing


K022

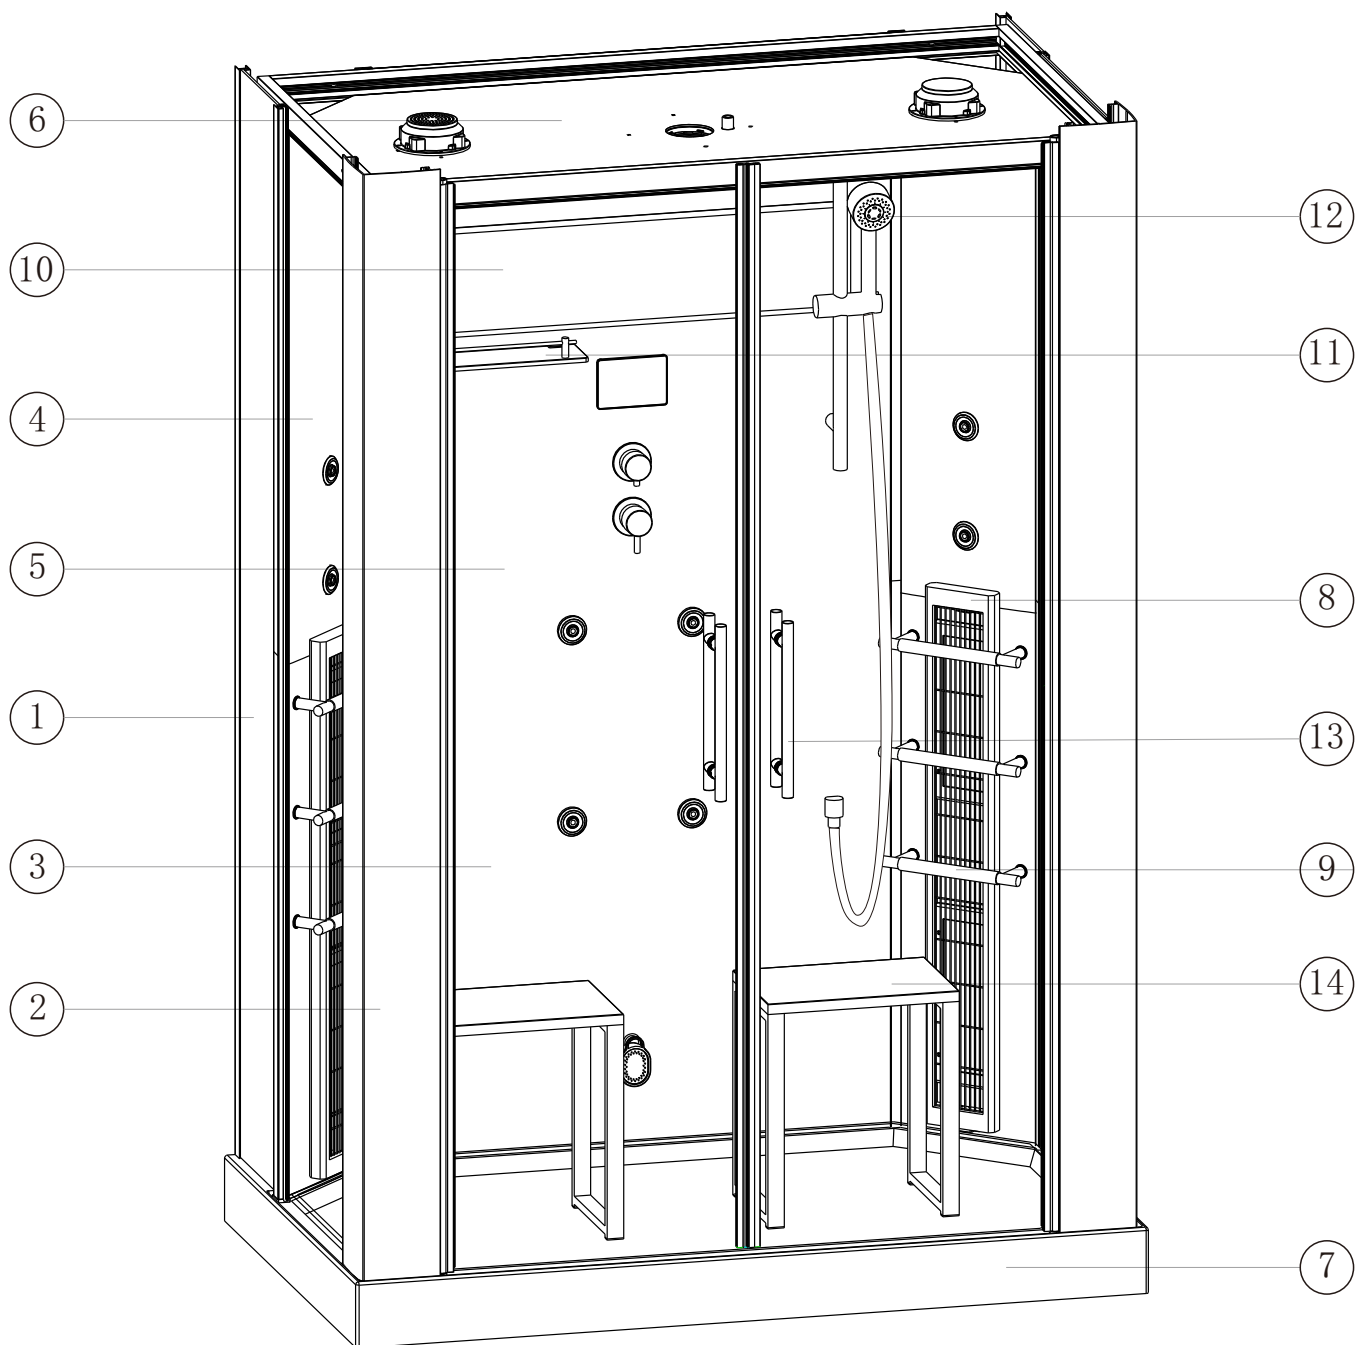

No.	Parts name	Qty	No.	Parts name	Qty
1	Back column	2	8	Cover of heater	4
2	Front column	2	9	Back cover	6
3	Back fix glass	1	10	Mirror	1
4	Side fix glass	2	11	Shelf for shampoo	1
5	Glass door	2	12	Handle shower	1
6	Top	1	13	Handle	2
7	Tray	1	14	Chair	2

Parts drawing

K023

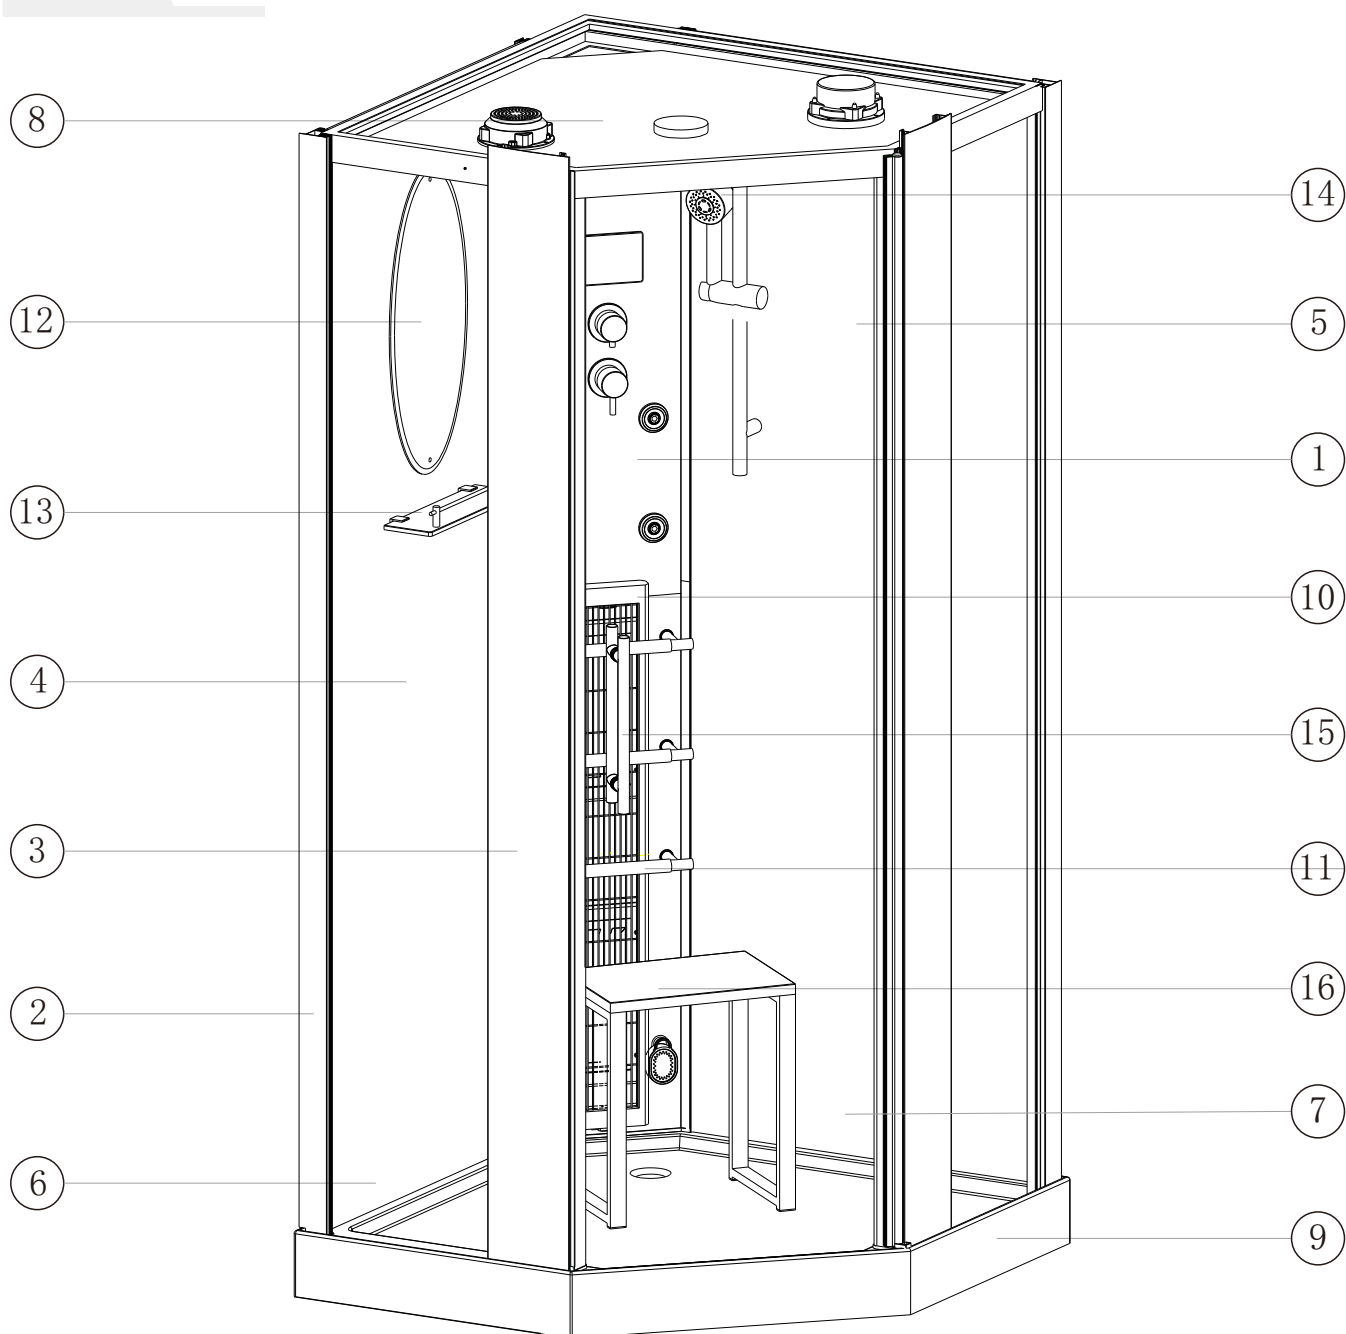


No.	Parts name	Qty
1	Back column	1
2	Side column	2
3	Front column	2
4	Left side fix glass	1
5	Right side fix glass	1
6	Front fix glass	2
7	Glass door	1
8	Top	1

No.	Parts name	Qty
9	Tray	1
10	Cover of heater	3
11	Back cover	3
12	Mirror	1
13	Shelf for shampoo	1
14	Handle shower	1
15	Handle	1
16	Chair	1

Parts drawing


K025

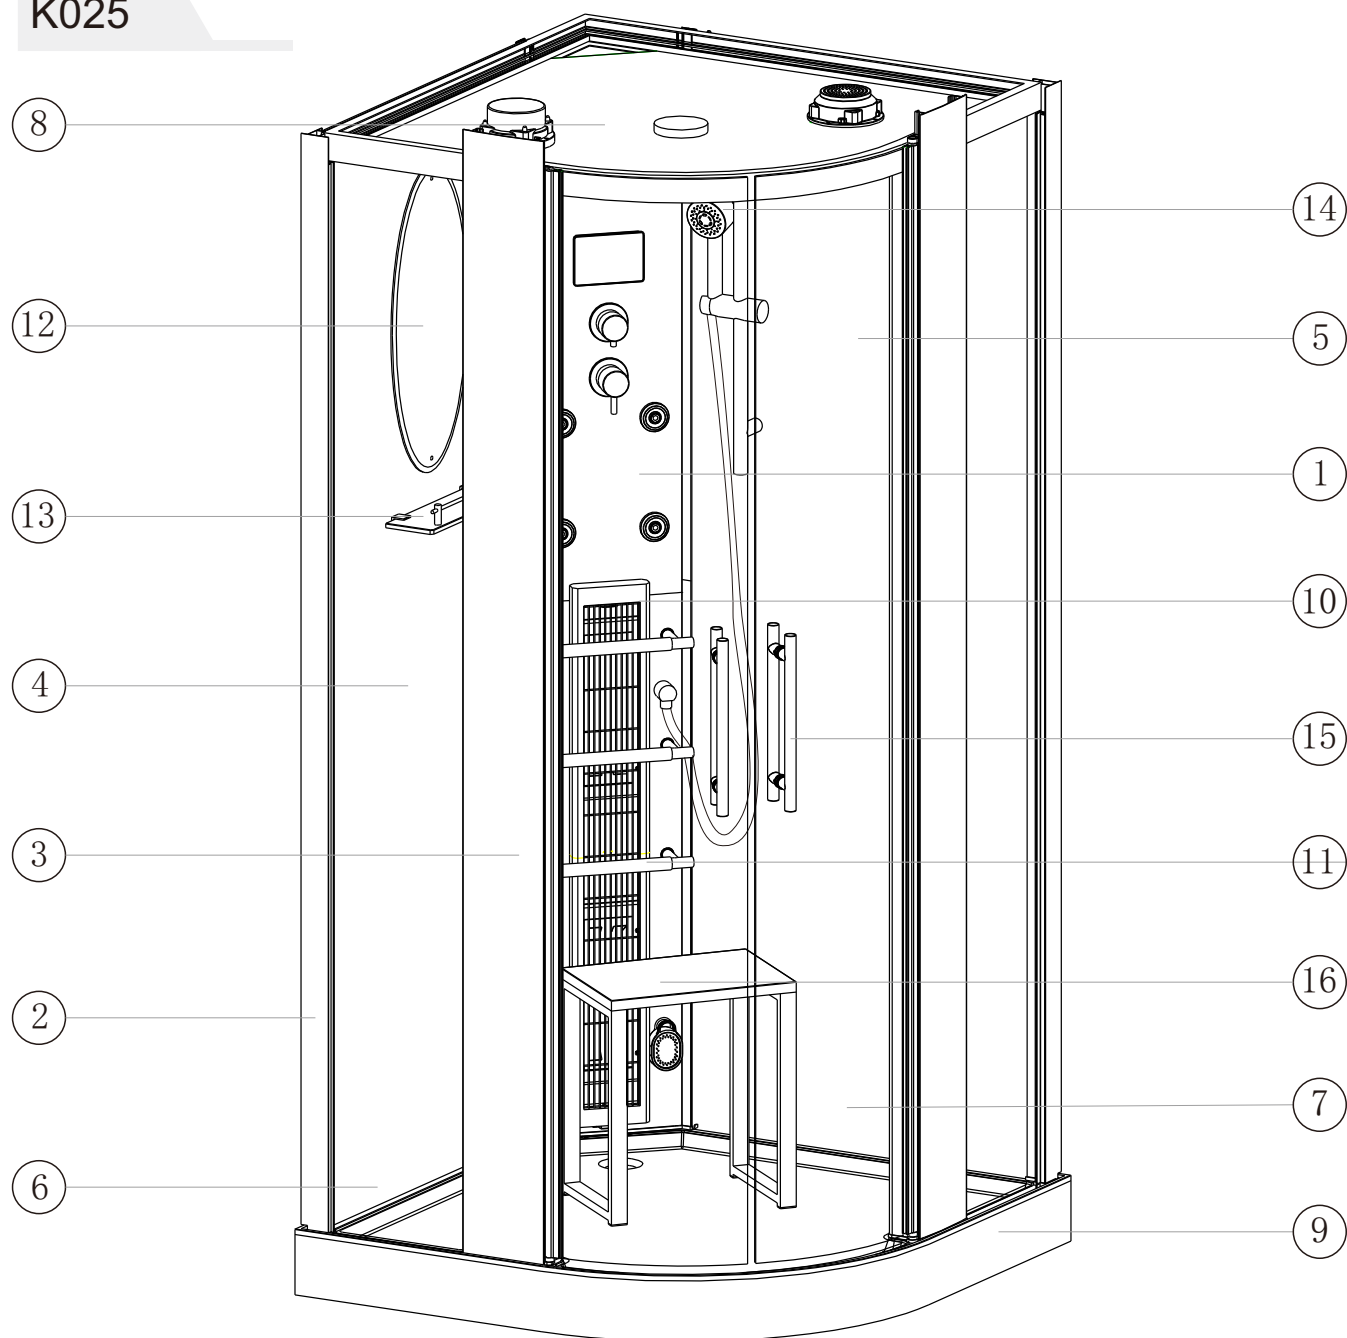

No.	Parts name	Qty	No.	Parts name	Qty
1	Back column	1	9	Tray	1
2	Side column	2	10	Cover of heater	3
3	Front column	2	11	Back cover	3
4	Left side fix glass	1	12	Mirror	1
5	Right side fix glass	1	13	Shelf for shampoo	1
6	Front fix glass	2	14	Handle shower	1
7	Glass door	2	15	Handle	2
8	Top	1	16	Chair	1

Parts drawing

K029

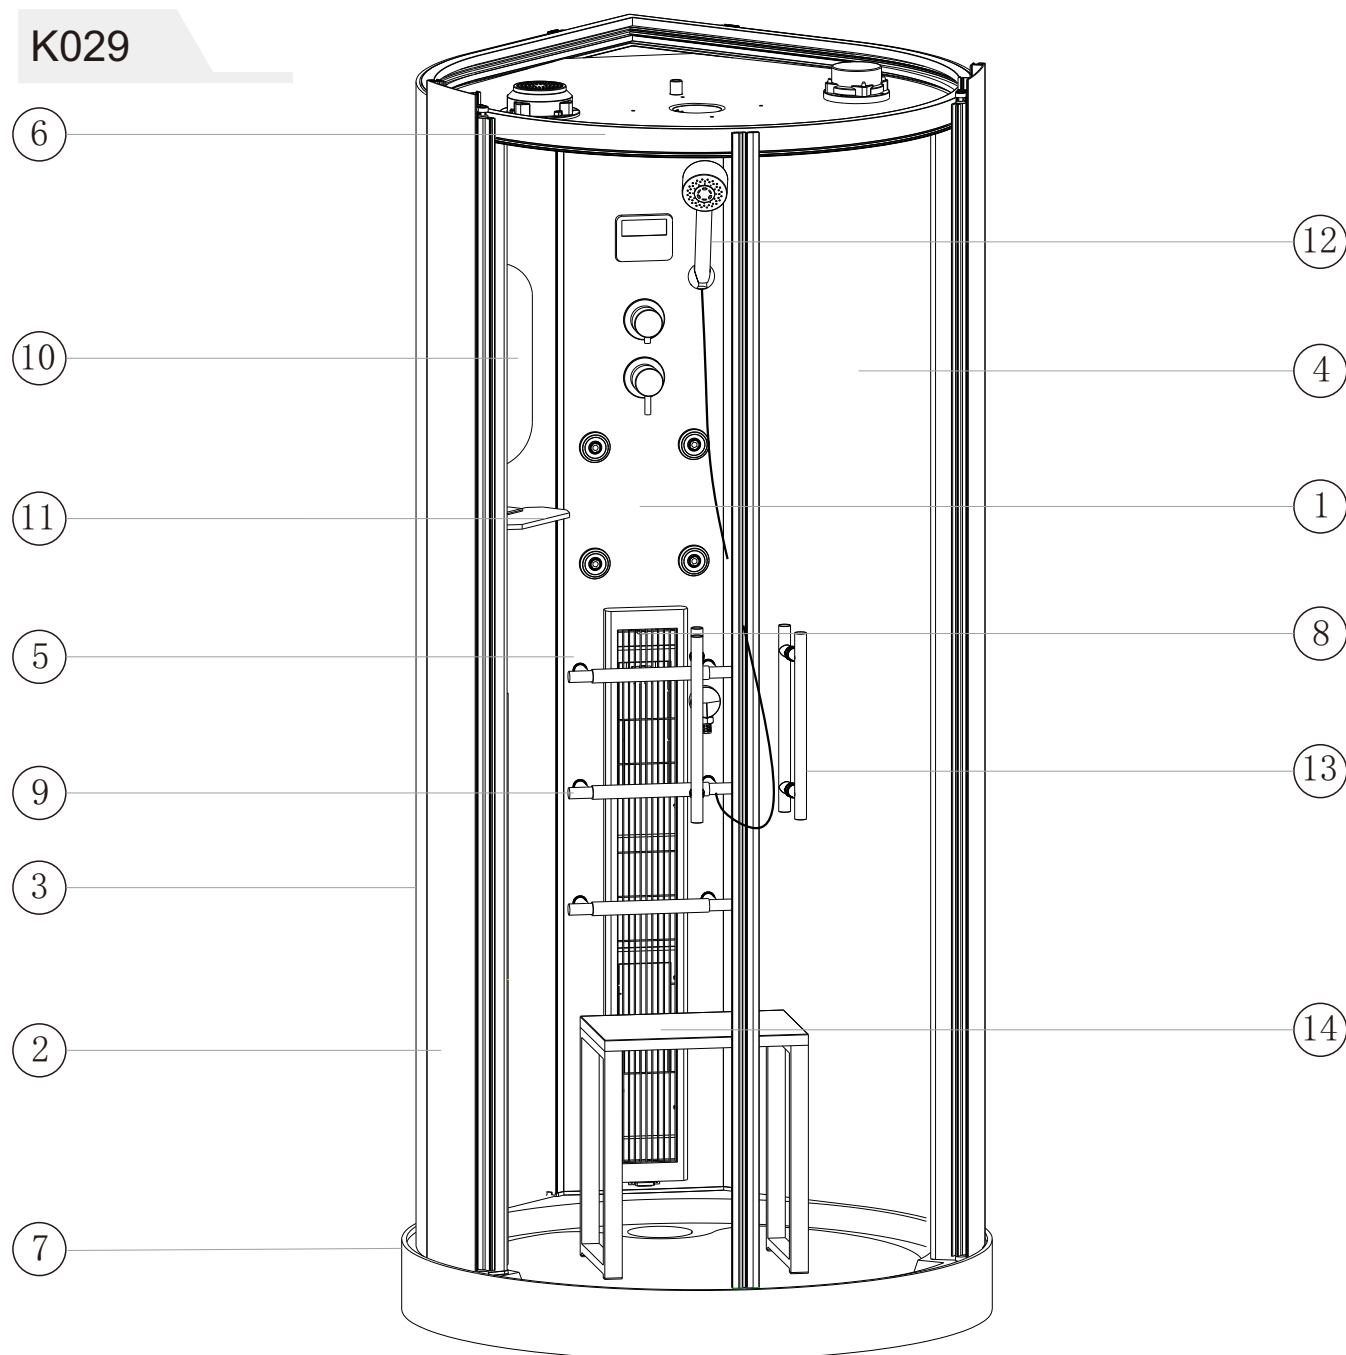


No.	Parts name	Qty	No.	Parts name	Qty
1	Back column	1	8	Cover of heater	3
2	Front column	2	9	Back cover	3
3	Left side fix glass	1	10	Mirror	1
4	Right side fix glass	1	11	Shelf for shampoo	1
5	Glass door	2	12	Handle shower	1
6	Top	1	13	Handle	2
7	Tray	1	14	Chair	1

Installation drawing

K021/K022

Step 1

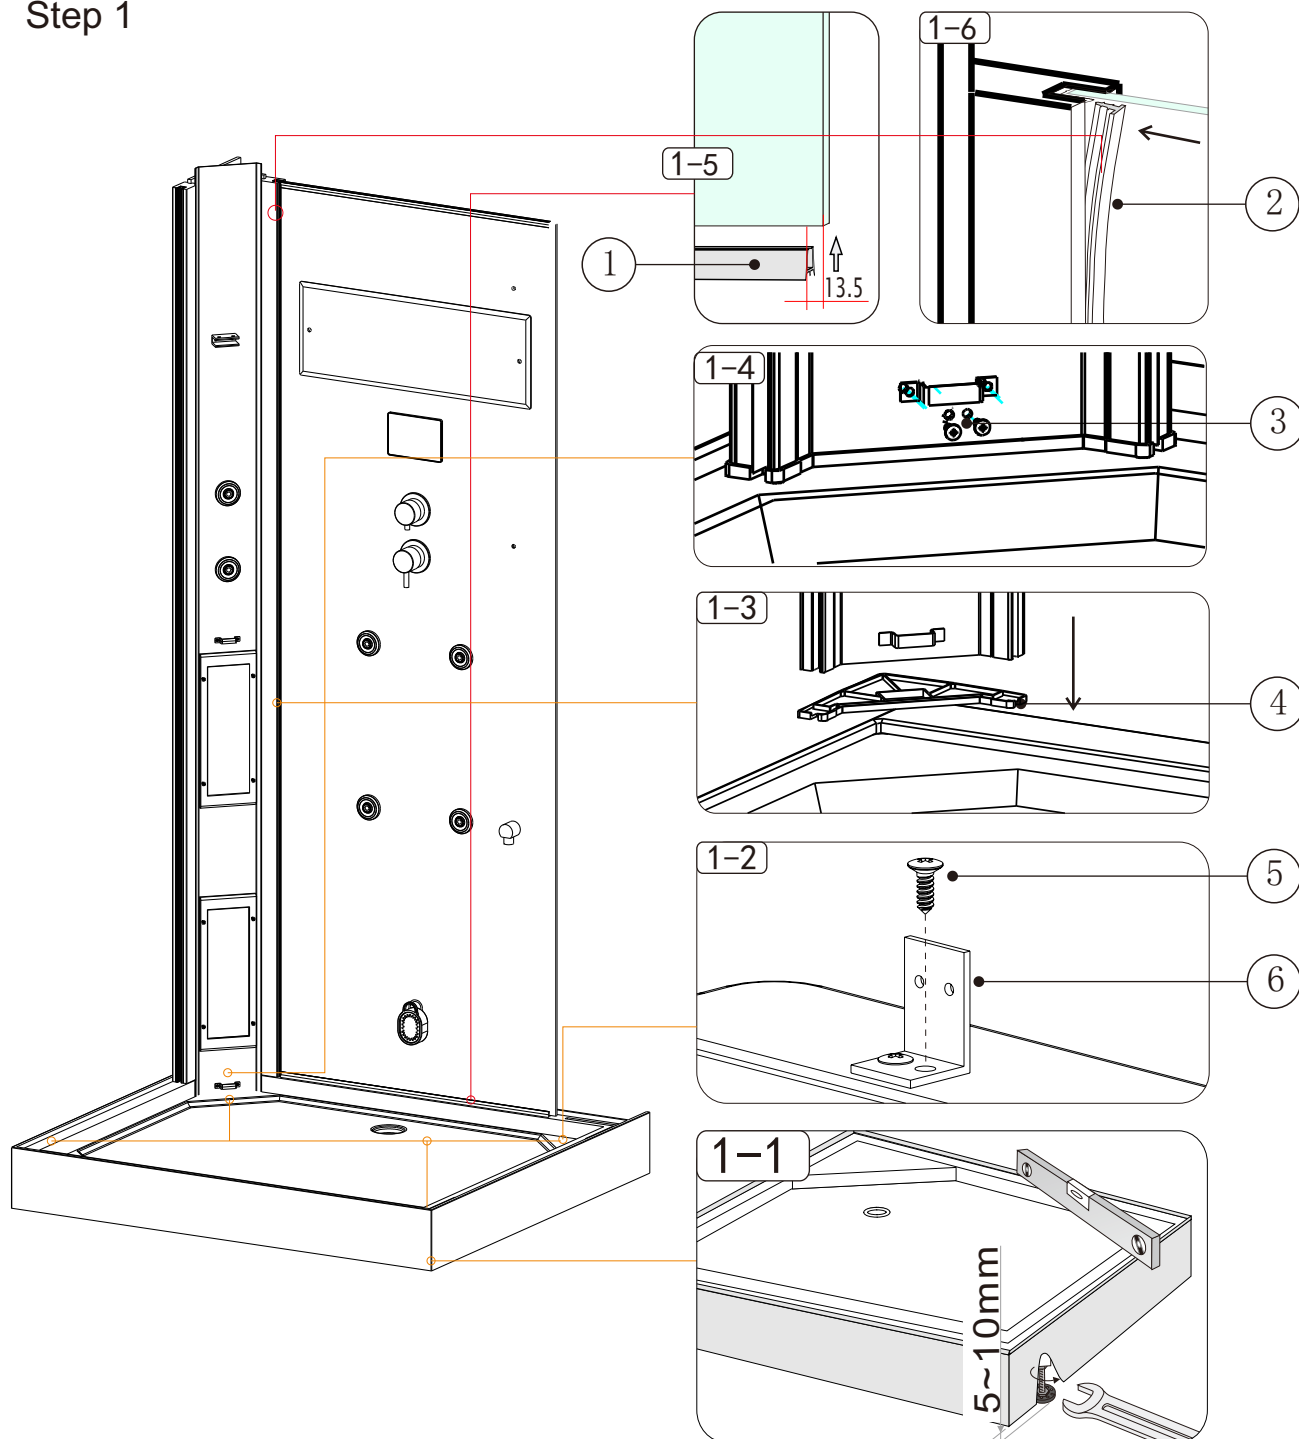


No.	Parts name
1	Plastic seal BF005-06
2	Plastic seal LR001-3.4
3	ST4*12 screw

No.	Parts name
4	Column seal
5	ST4*18 screw
6	Fixed bracket

Installation drawing

K021/K022

Step 2

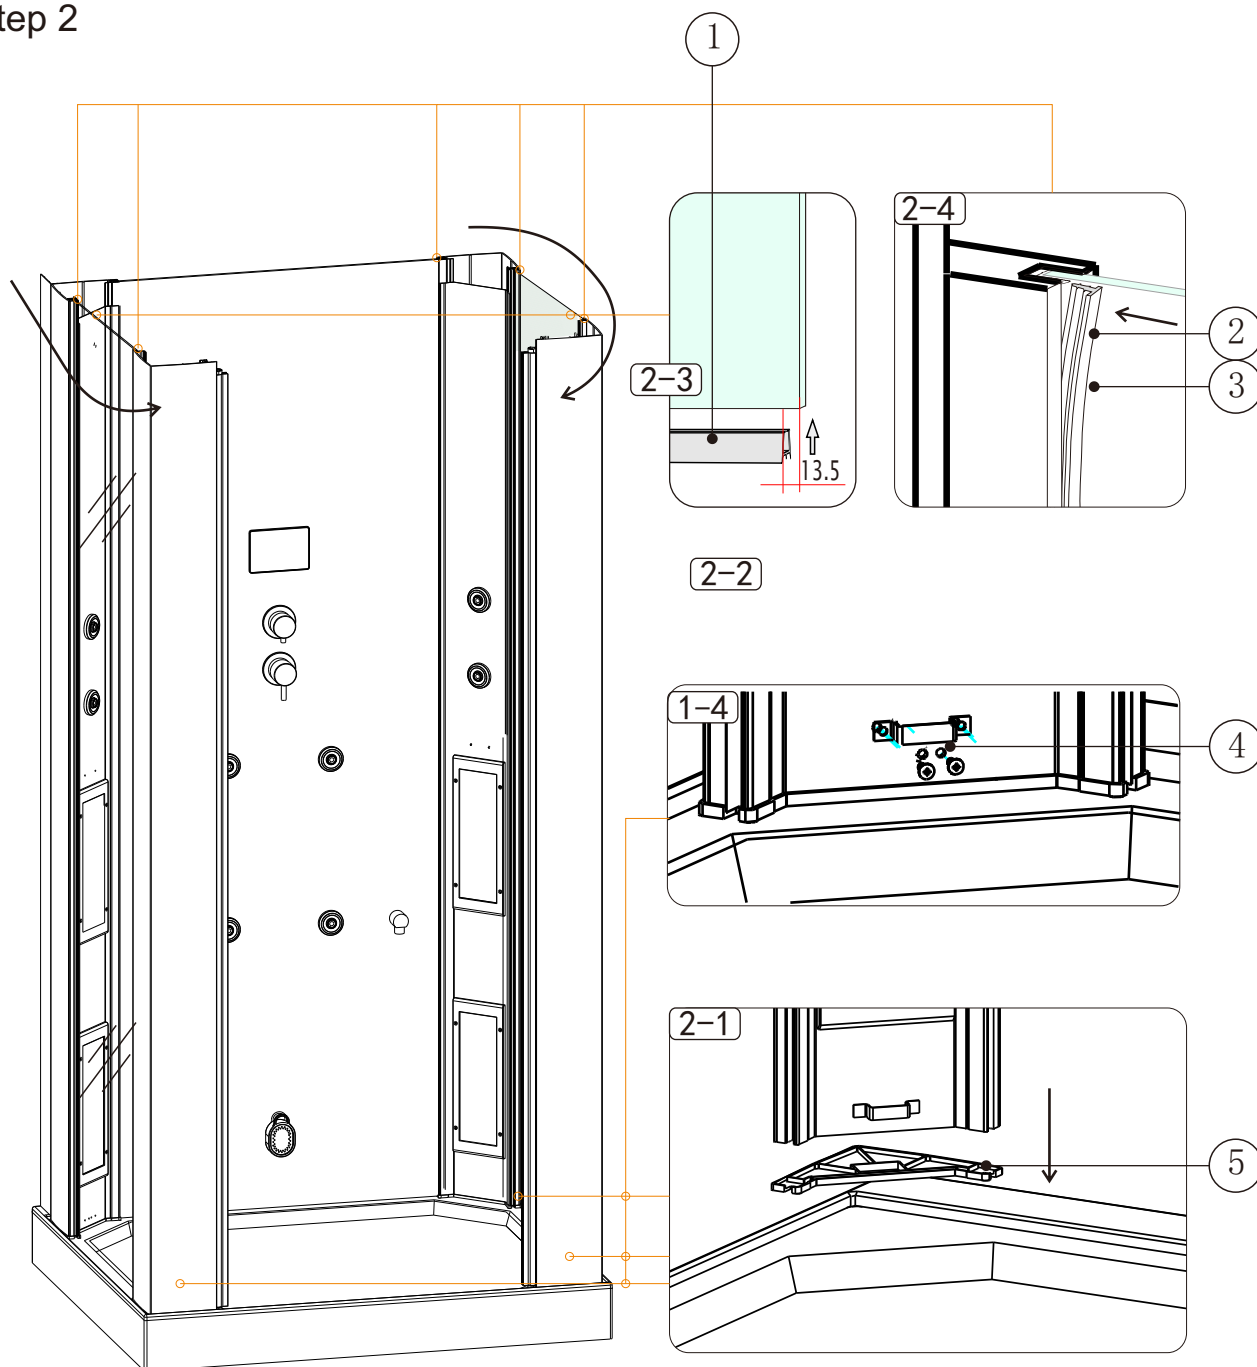


Pay attention:
Plastic seal LR001-3.4 used in side fixed glass,
LR001-2.3 used in back fixed glass.

No.	Parts name	No.	Parts name
1	Plastic seal BF005-06	4	ST4*12 screw
2	Plastic seal LR001-3.4	5	Column seal
3	Plastic seal LR001-2.3		

Installation drawing

K021/K022

Step 3

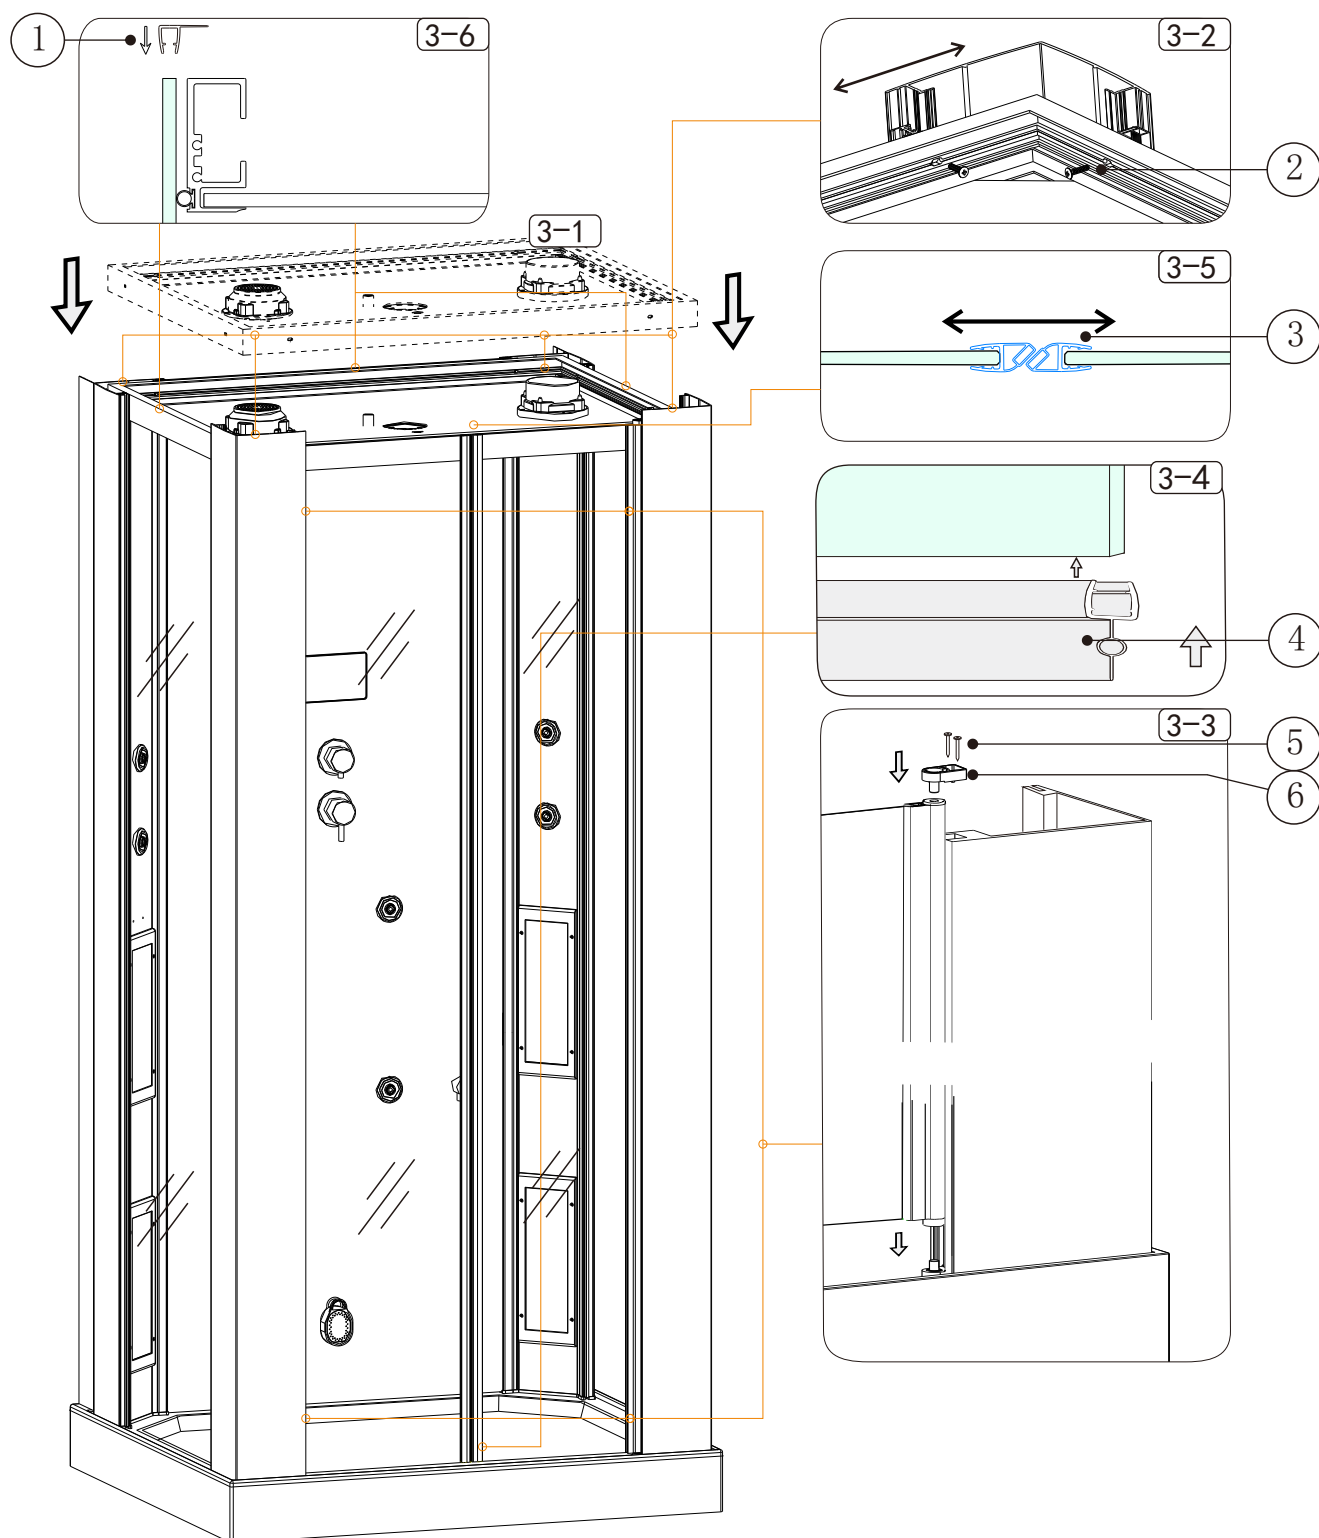


No.	Parts name
1	Plastic seal BF002-06-12
2	ST4*18 screw
3	Magnetism seal BC001-06
13	

No.	Parts name
4	Plastic seal BF010-06-18.8
5	ST4*18 screw
6	Axes seat

Installation drawing

K021

Step 4

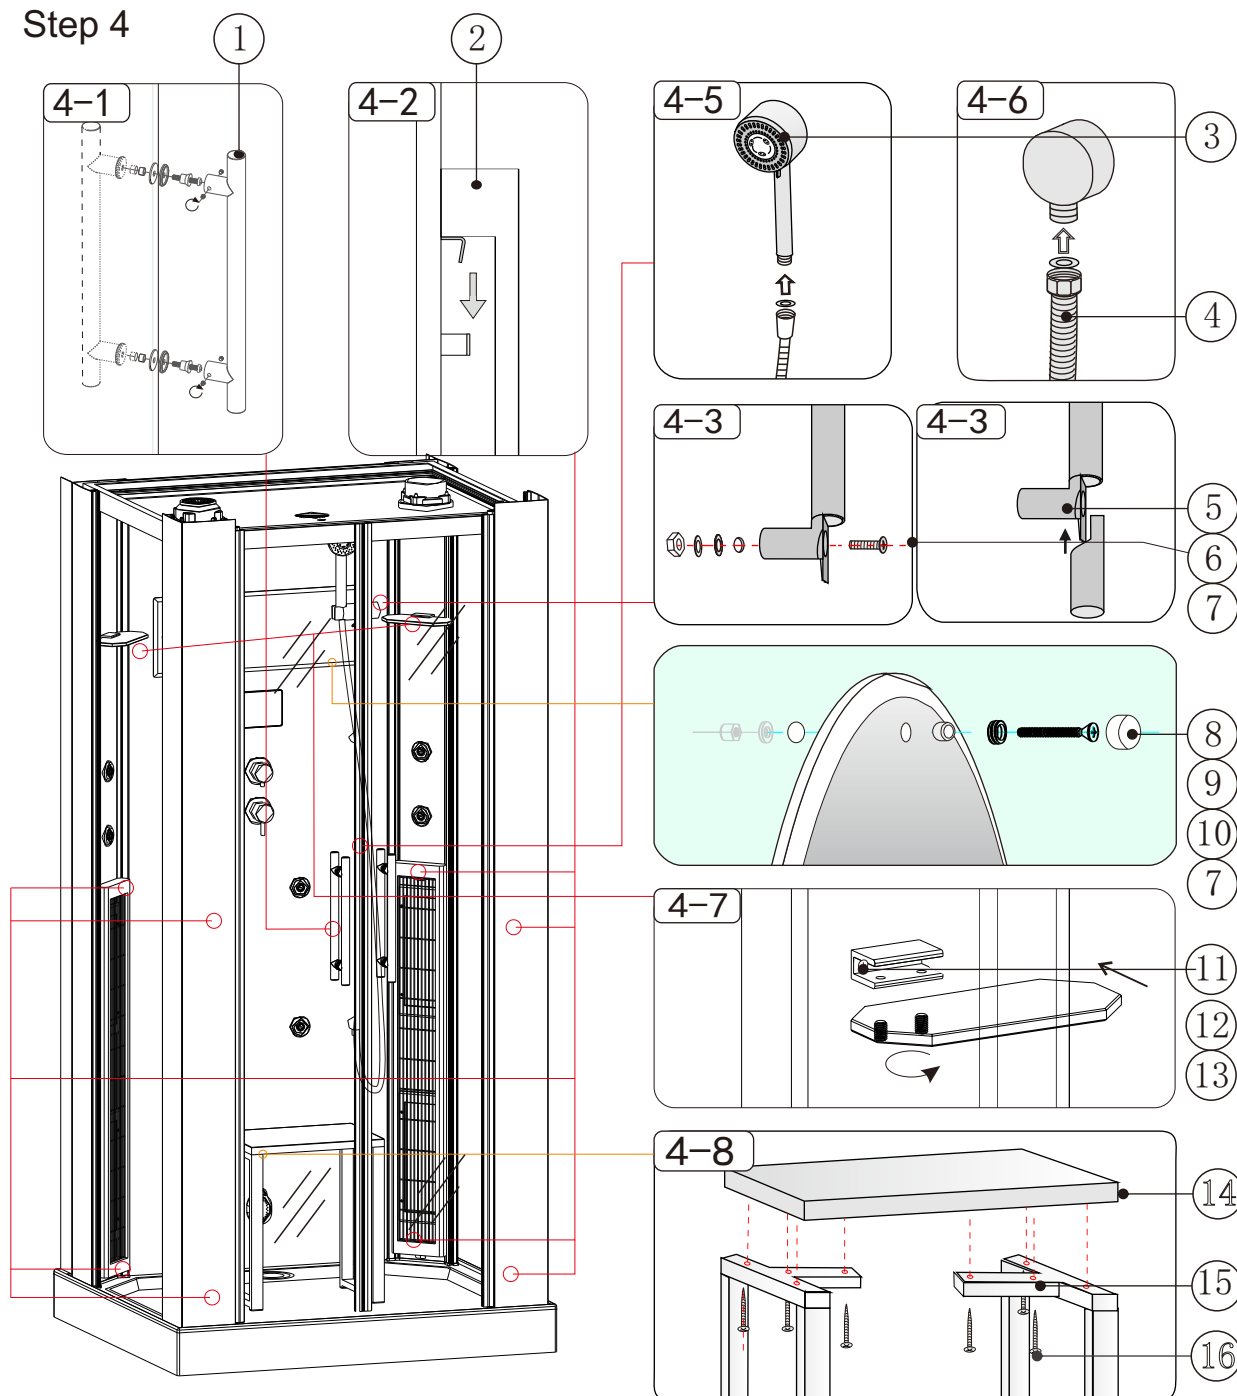


No.	Parts name
1	Handle
2	Cover of heater
3	Handle shower
4	Shower hose
5	Rack of the handle shower
6	M4*30 screw
7	M4 Hexagon nut
8	M4*18 screw

No.	Parts name
9	Decorated washer
10	Decorated screw cap
11	Glass for shelf of shampoo
12	Glass nip
13	ST4*12 screw
14	Bench cover
15	Bench rack
16	ST4*35 screw

Installation drawing

K022

Step4

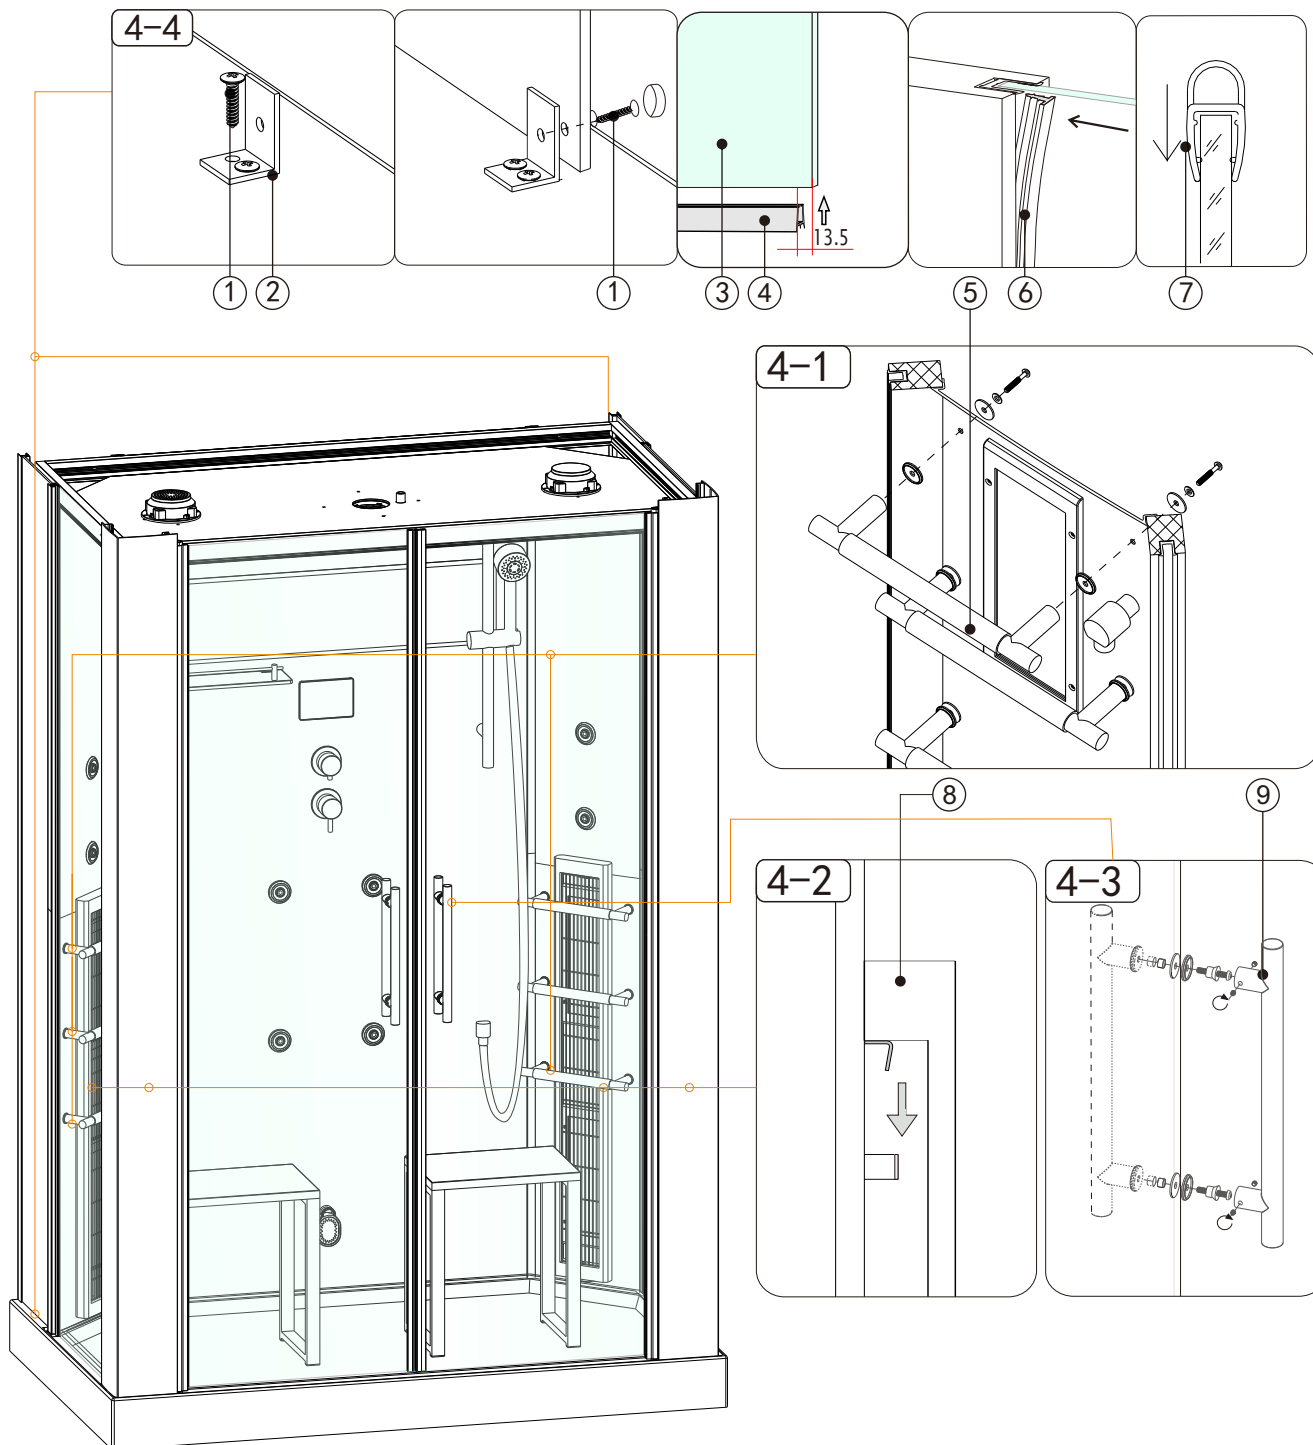






No.	Material
1	Crosse screwST4*18
2	Fixed shelf
3	Back glass
4	Plastic sealBF005-06
5	Back barrier

No.	Material
6	Plastic sealLR001-3. 4
7	Plastic seal BF012-06
8	Heater barrier
9	Handle

Installation drawing

K023/K025/K029

Step 1

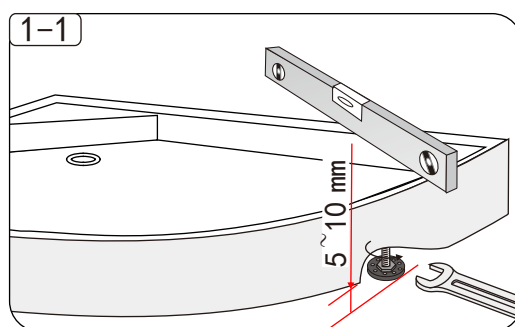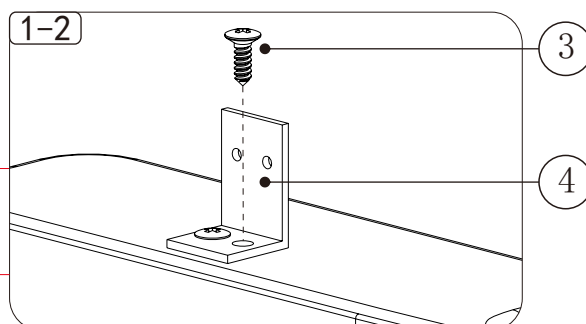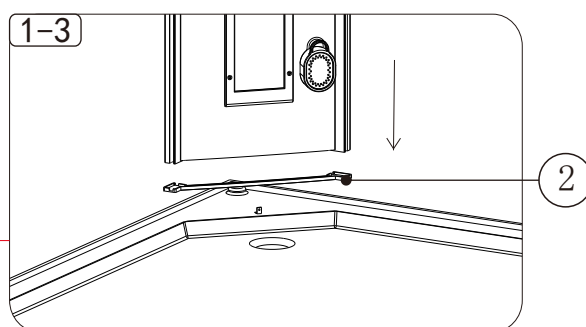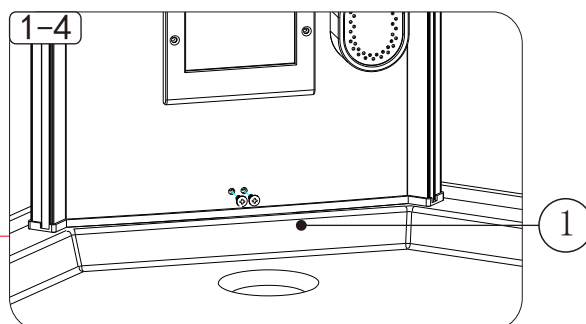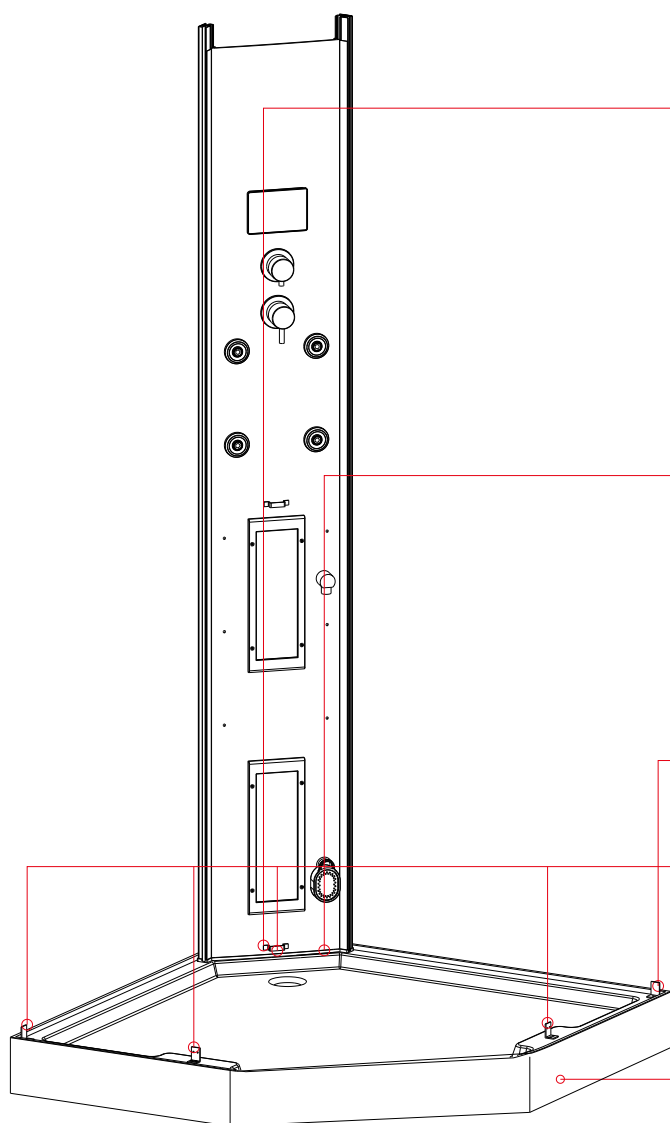


No.	Parts name	No.	Parts name
1	ST4*12 screw	3	ST4*18 screw
2	Rubber for back column	4	Fixed bracket

Installation drawing

K023/K025/K029

Step 2

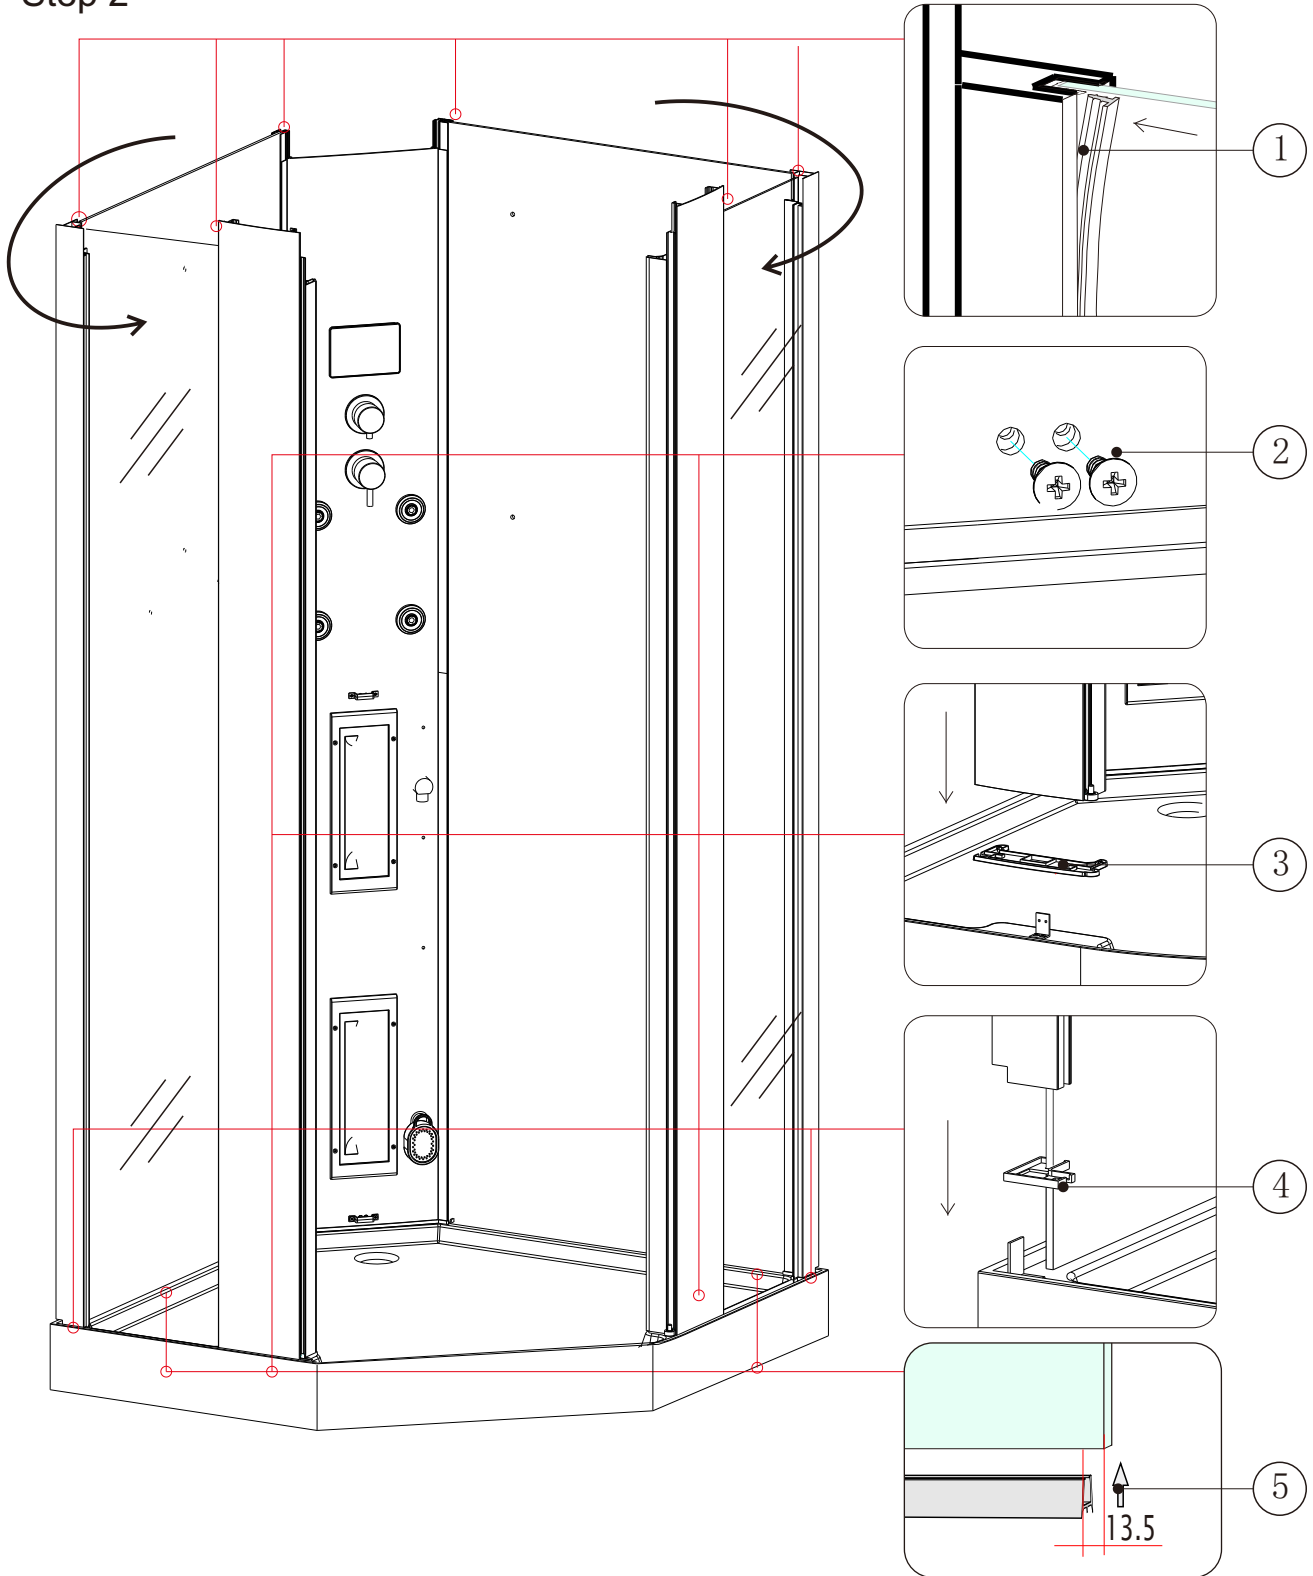


No.	Parts name
1	Plastic seal LR001-3.4
2	ST4*12 screw
3	Front column seal
17	

No.	Parts name
4	Side column seal
5	Plastic seal BF005-06

Installation drawing

K023/K025/K029

Step 3

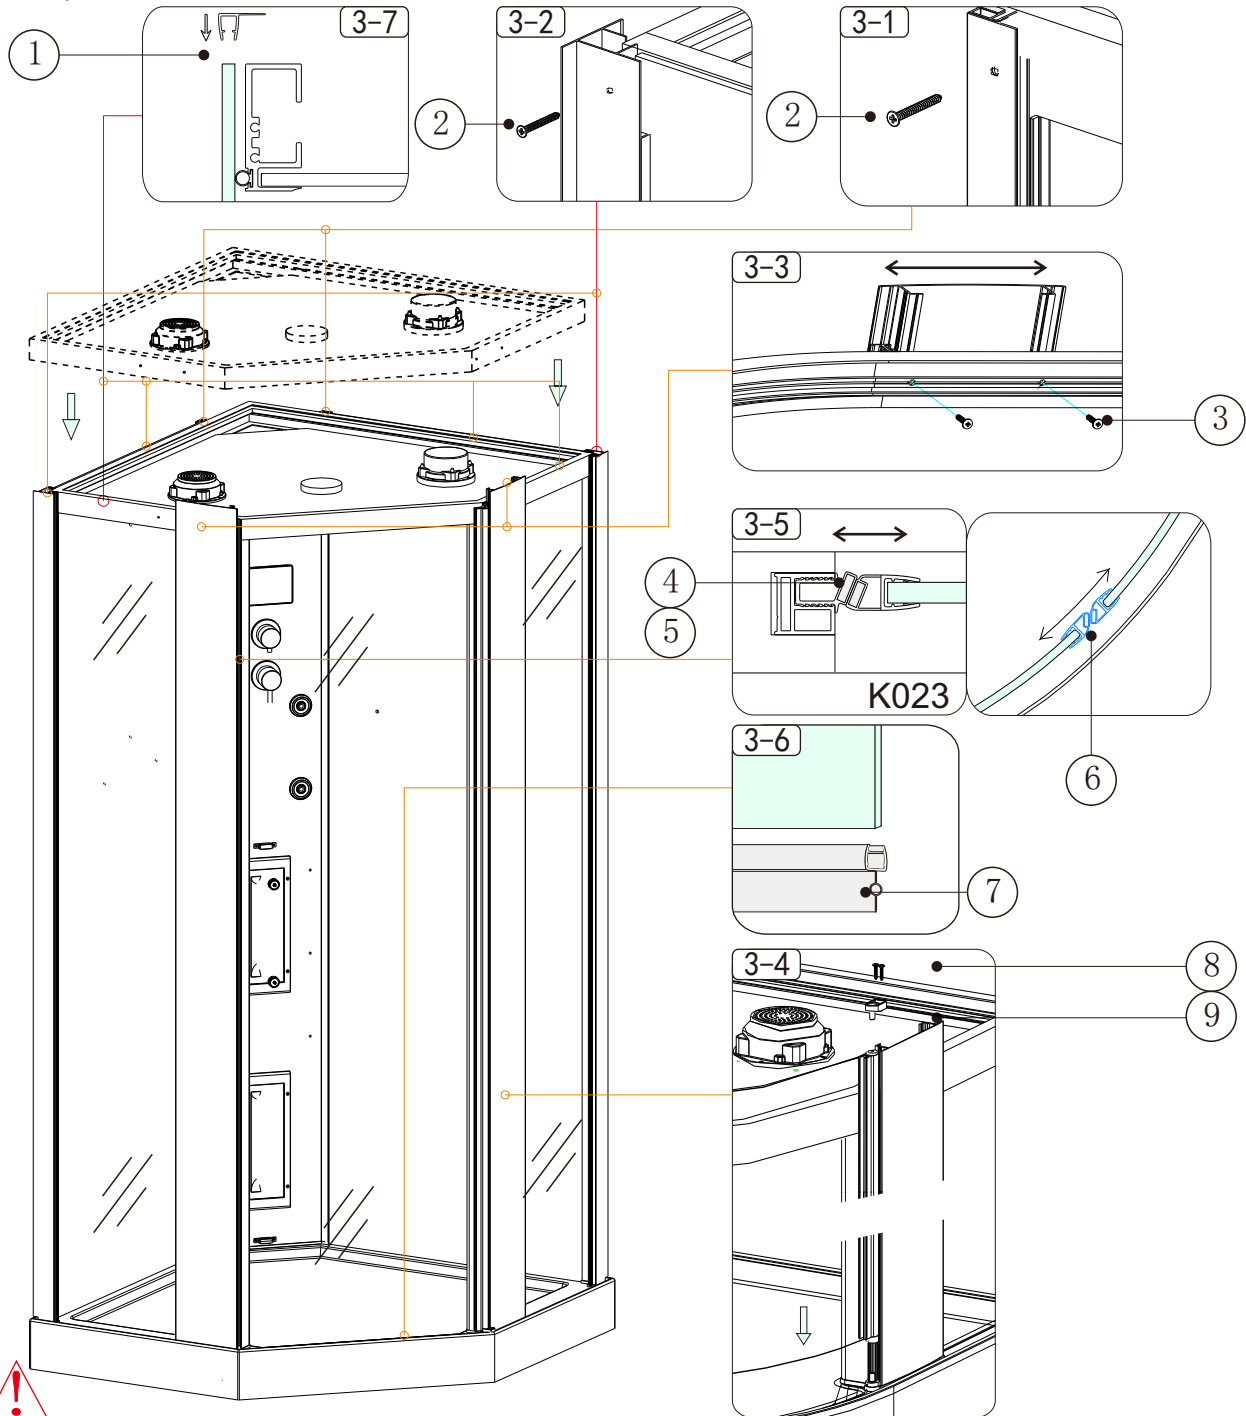

Pay attention :

Just can be fix with the correspond model when have marker like


K025

No.	Parts name	No.	Parts name
1	Plastic seal BF002-06-12	6	Plastic seal BC001-06
2	ST4*40 screw	7	Plastic seal BF010-06-18.8
3	ST4*18 screw	8	ST4*18 screw
4	Magnetism seal BC002-06	9	Axes seat
5	Plastic seal LC001-7.5		

Installation drawing

K023/K025/K029

Step 4

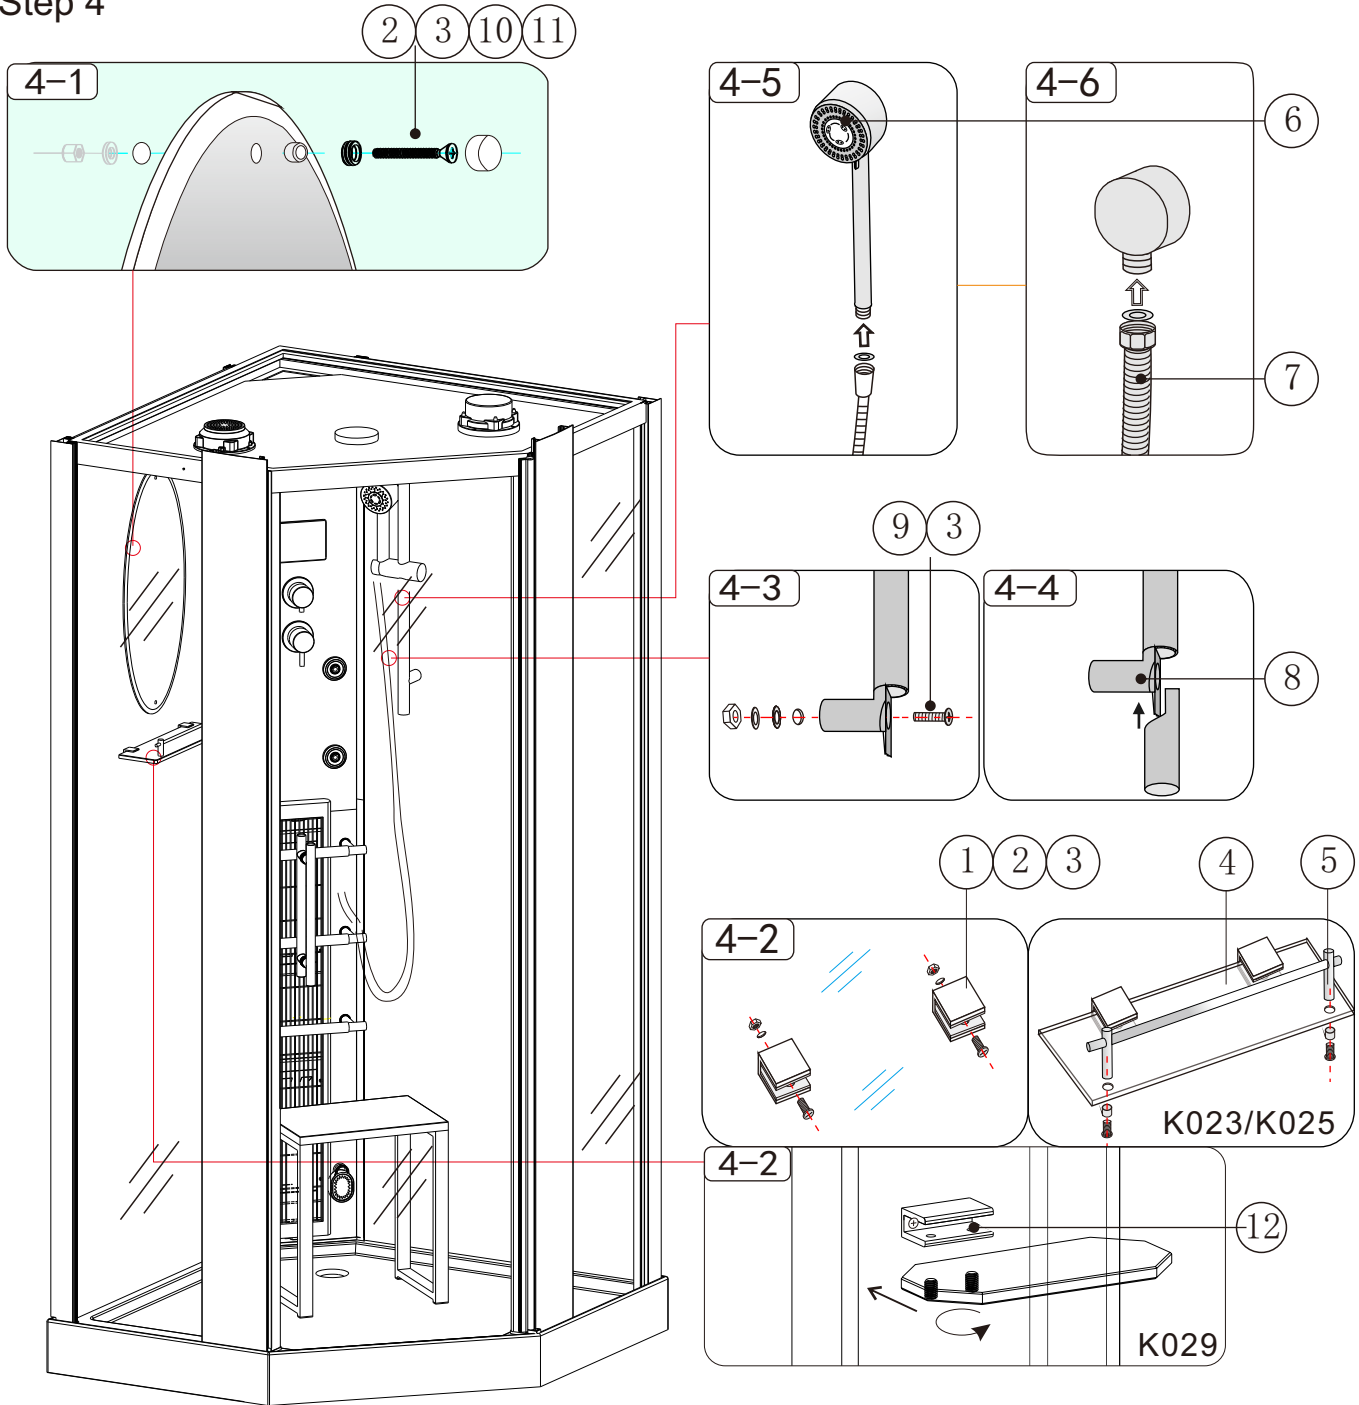






No.	Parts name
1	Glass nip
2	M4*18 screw
3	M4 Hexagon nut
4	Glass for shelf of shampoo
5	Handrail for shelf of shampoo
6	Handle shower
19	

No.	Parts name
7	Shower hose
8	Rack of the handle shower
9	M4*18 screw
10	Decorated washer
11	Decorated screw cap
12	Glass nip

Installation drawing

K023/K025/K029

Step 5

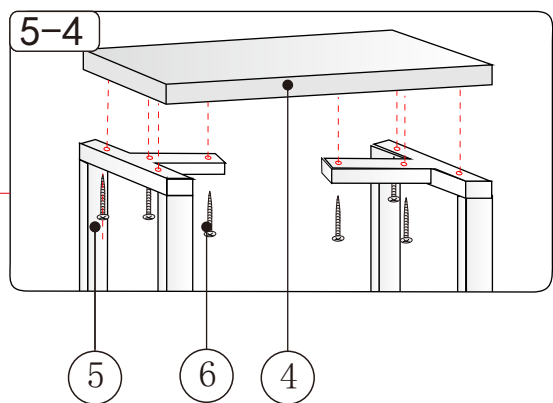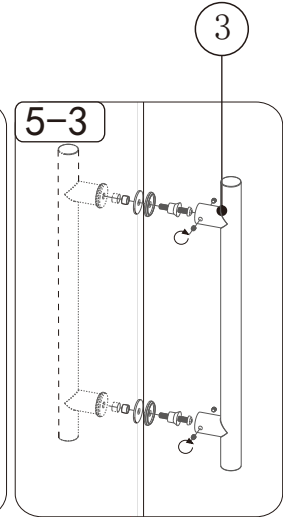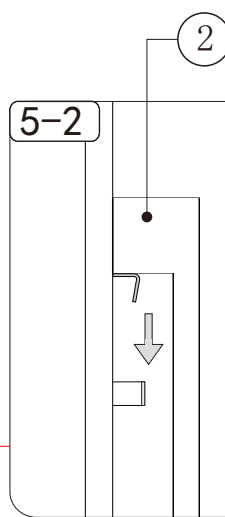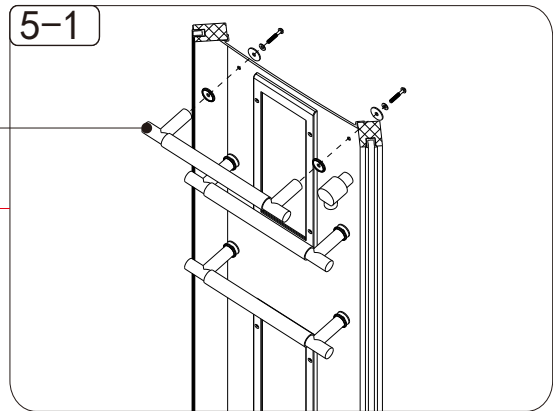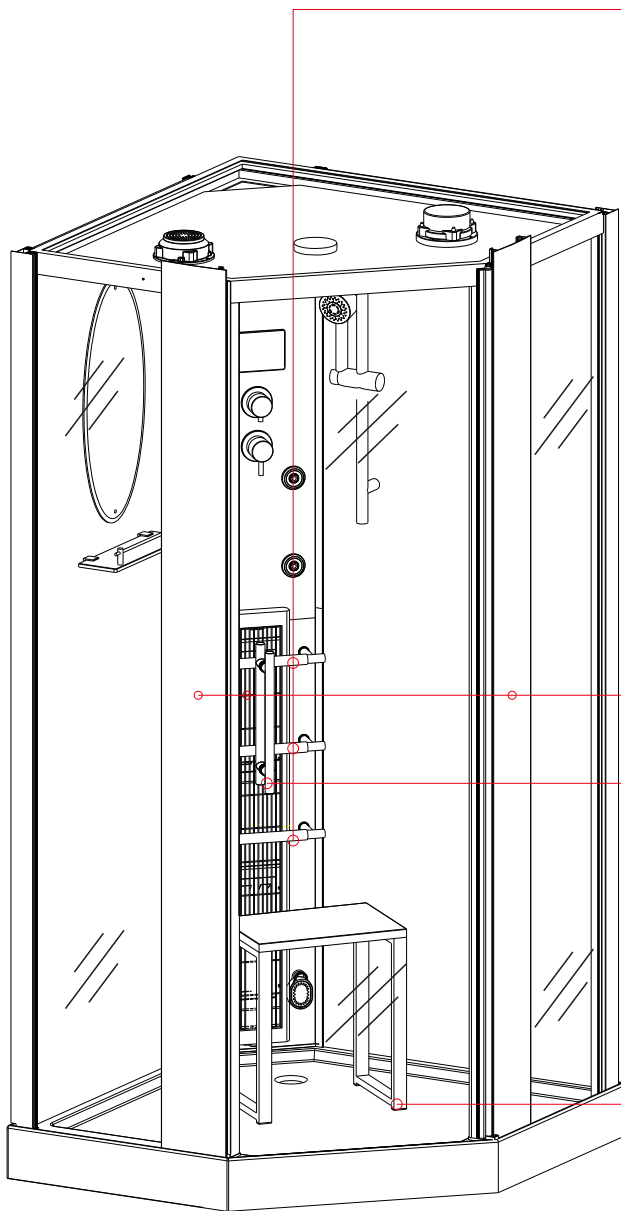

Pay attention :

Just can be fix with the correspond model when have marker like


K022
K023
K025

No.	Parts name	No.	Parts name
1	Back cover	4	Bench cover
2	Cover of heater	5	Bench rack
3	Handle	6	ST4*30 screw


Operation instruction

Ky1210CA

1.Function of the panel:

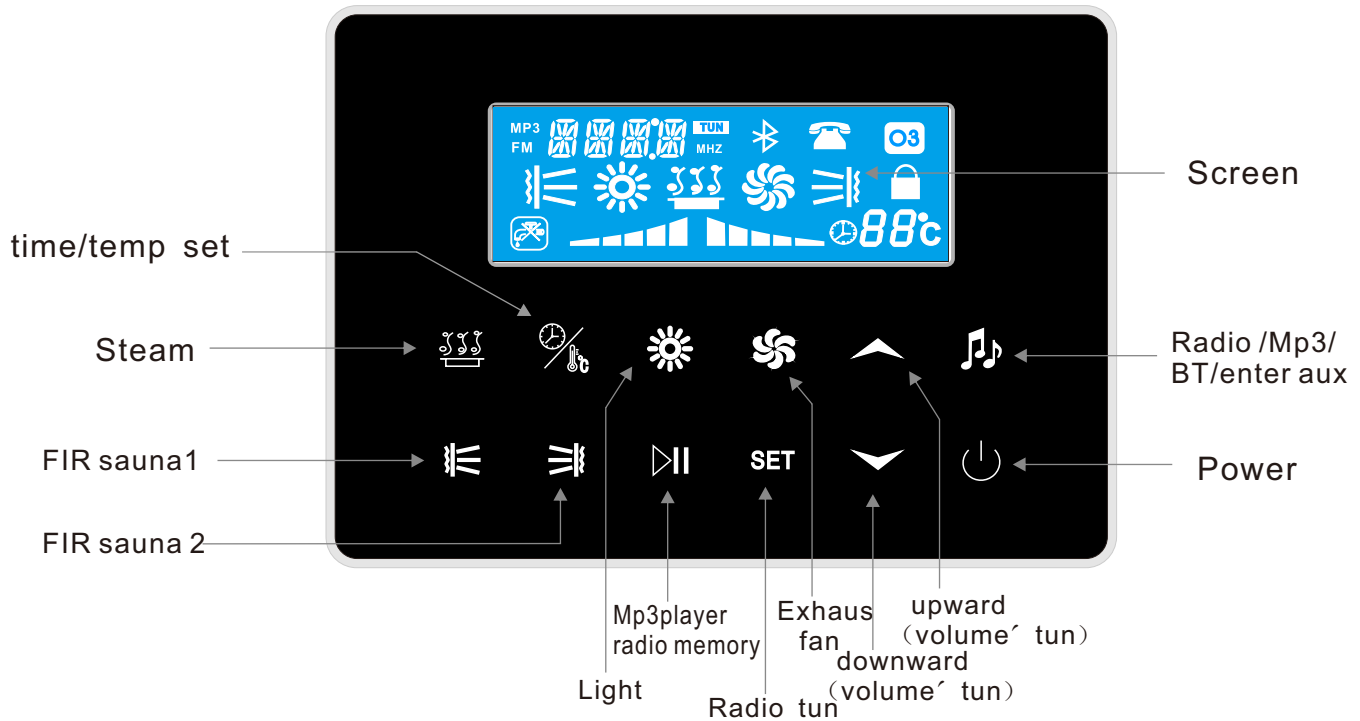


2.contant of display:

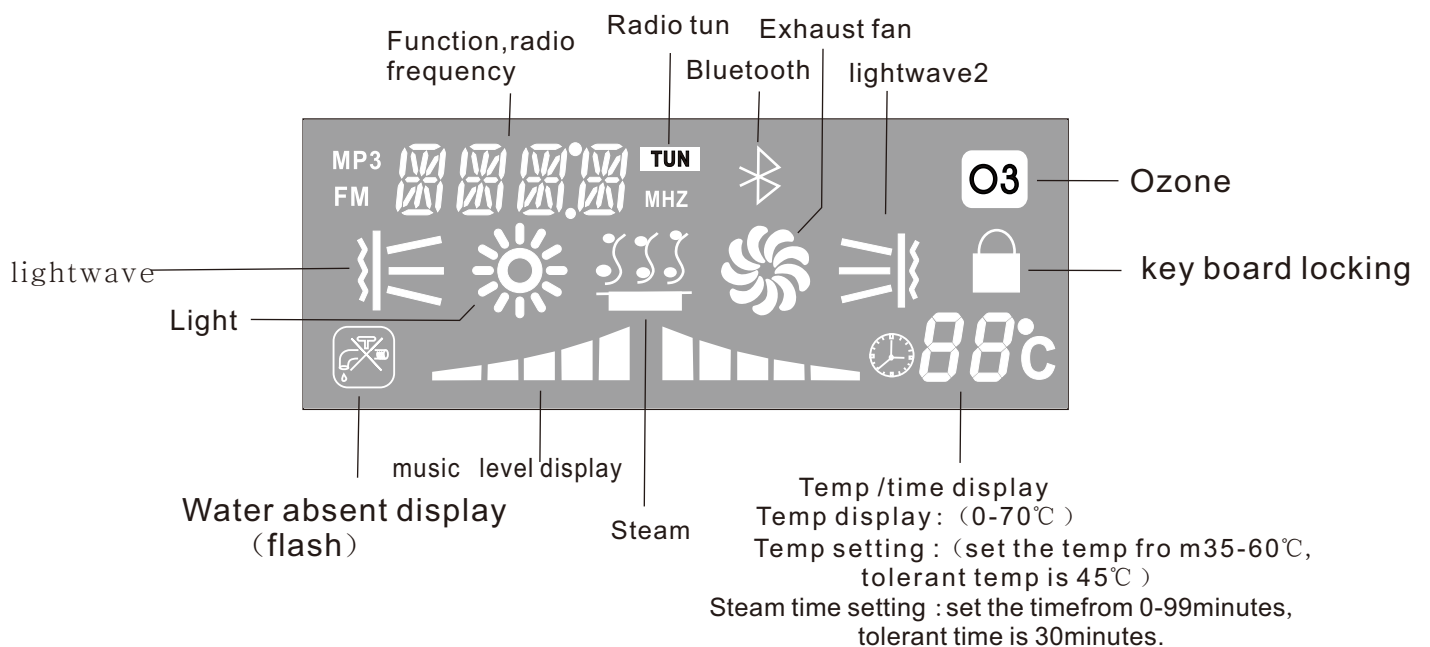







Installation drawing

3. Instruction

(1) Sauna Section:


Plug into the creepage switch, press the button , the steam system electrify, the display show the temperature in the room. the machine runs to base on your demand.


(2) temperature set: press , display TEMP, press  or  can pre-set temperature, set from 35-60°C, normal atmospheric temperature is 0-70°C,



(3) time set: press , display TIME, press  or  can pre-set temperature, set from 1-99 minutes, it started to countdown when the function turn on, the function turn off automatic when countdown to the end.

Note: steam function countdown leave 3 min, buzzer will "do do" deep 5 times, prompt toward the end of heating°

 
(4) Fan function: press  key in the on/off

(5) light function: light when power on, press  can be red, green, blue, white and turn off switch, light turn off after power off 15 minutes, during the time you can switch colors.

(6) Steam function----Press the steam button, the  is bright, the steam export after 1 minute, at this time the machine run to base on the temperature and time you set. (The tolerant temperature and time is 45°C and 30 minutes), when reach the temperature you set, the temperature is unchanged; when reaching the time you set, the steam machine is off, the steam sign disappear.

(7) infrared steam function: press light  or , Correspondence infrared wave output, the system run according to pre-set temperature and pre-set time (if not stated run by the system built-set temperature of 45 degrees and 30 minutes), the system in thermostat when reaches the set temperature; When reach setting time, the light is turned off. The solenoid valve on and spray to lower the temperature each 10 minutes when Infrared function on.

Note: infrared function and steam function are single options, system setting they interlocking and can not work at the same time.

(8) keyboard locking: enter to keyboard locking state if don't operating any function key more than 1 minutes, press "" to unlock.

4 .Radio section

- (1) Pull out the radio antenna and place in -Y -form. When (🎵) key is pressed ,the screen will appear radio frequency and the volume will rise from -0- to -15- DB with slight sound for loudspeaker.
- (2) Search" press the key (SET) when the screen will display the **TUN** - sign. Press (▲) or (▼) key for upward or downward frequency will move upward or downward automatically until the broadcasting station is received. In the case of poor receiving, environment or weak signal for receiving, it is recommended to select in manual selection mode.
- (3) Memory: After selecting the play station , press (▶||) key to display "CH-01 " to "CH-30 ", then it can be stored in this number. The total memory for station is 20. If the received broadcasting station is not ideal, please pull out antenna and adjust the direction of antenna .
- (4) repeated hearing: press the (▶||) key for selection of the position of desired station, the screen will display the number "Ch01---Ch 30 " thus you can hear the voice.
- (5) AUTO Channel:
Press **SET** for 2 seconds then be in auto channel selection model, then system will search channels (87.5-108mhz), lcd will show the frequency you are Searching. when Search channels, lcd shows --01ch, means system search the first channels, also memory it . then system will search channels by automatically till 30 channels or all frequency. (The number of radio depending on local radio coverage. The system can save 30 channels.) When auto search finish, the system return to the first radio and listen normally.
- (6) Volume adjustment-----The volume can be adjusted by pressing (▼) or (▲) key and the screen will display corresponding volume DB number
- (7) Enter aux function " Connect the Exterior audio wire with the external faucet of the main control box, press (🎵) key to the position of "Mp3" and "aux" , then choose the suitable volume .
- (8) USB MP3 player"
press (🎵) key to the position of Mp3 ^ display show (MP3) MP3 function is ready^ insert USB disk with Mp3 music to USB connector, system search and play the tracks auto , as the following picture:



Installation drawing

play/pause: press (▶||) to play or pause. tracks select: press (SET) → (▲) upward track or (▼) downward track.

(9) connect with phone Bluetooth

Press 🎵 key to the position of bluetooth, display show "BT", then system search bluetooth auto, it have to bluetooth pairing at the first time to pairing, operating as follow:

→ open bluetooth setting of phone → open bluetooth search equipment → pairing
→ pairing success. speaker broadcast a piece of music, display show "🔗" sign (pairing finish).

as follow:




Bluetooth pairing sign

at bluetooth mode play mobile phone's music:

play/pause: press (▶||) to play or pause, track selection:

press (SET) → (▲) upward track or (▼) downward track.

the sketch map of connecting cable

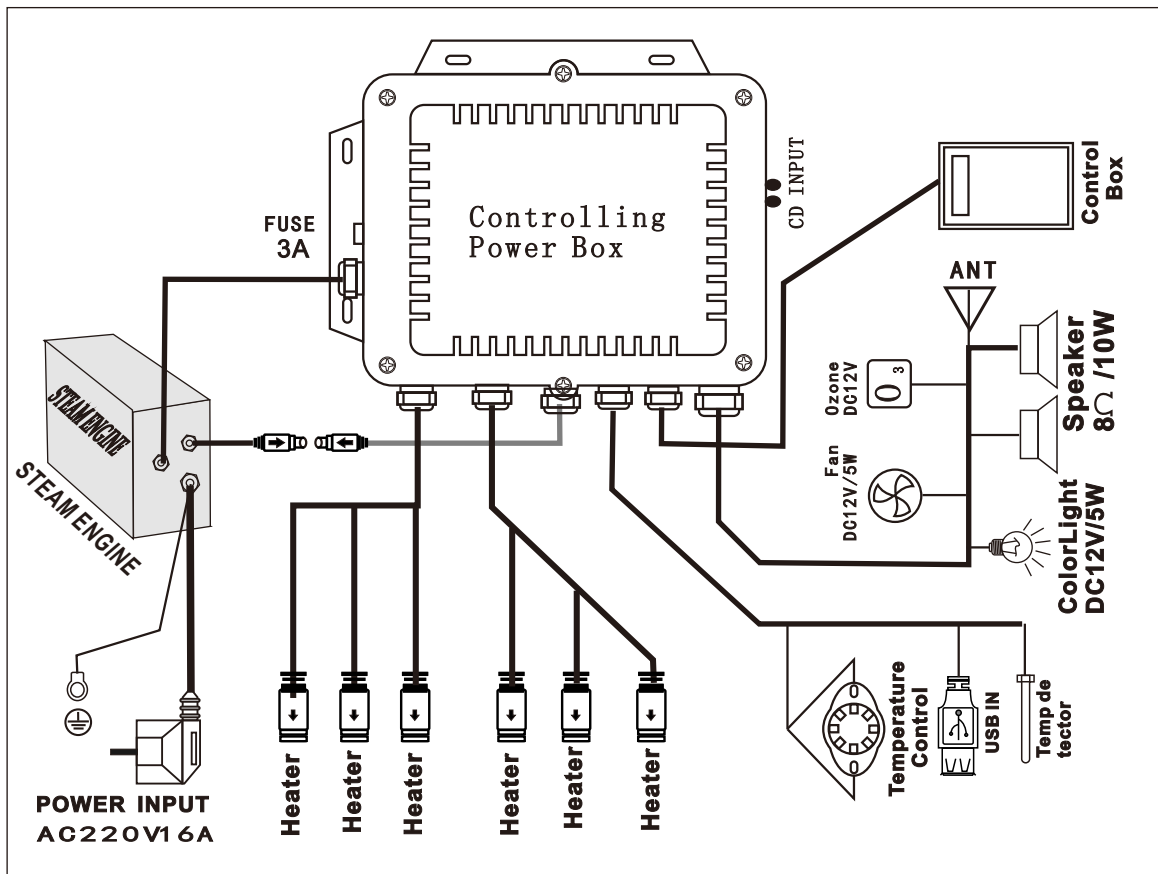

1. If the technique information is change, we will not inform you.
2. Do not connect the other equipment out company did not recommend to this machine's load cable; don't take down or change the connecting cable, or damage the machine.
3. Check the connecting cable before the machine is going to work.
Don't pull off the cable when electric leakages.
4. Every grounded place should connect to the ground hard.

Operation instruction

1.Operation of valve

A .Mix water valve function"

Turn to the "H " to connect the hot water ;
Turn to the "C" to connect the cold water ;
Control the place between "H" and "C" to adjust the temperature of the water ;

B.Water valve function"


Adjust the handle for the valve
(look at picture 1) to the relative function
shelves and take it up to connect the
relative waterway (look at picture 2);

2.Steam nozzle function


Open the cover of the steam nozzle,
put some spice or herbal medicine
(look at picture 3),cover the steam nozzle
cover ,turn on the steam system,scent will
come out together with the steam.After
shut down the system,it is must to clean
the steam nozzle.

3.Handle Shower function


Circumrotate the handle of the handle
shower,there are two water style for your
choice.(look at picture 4)

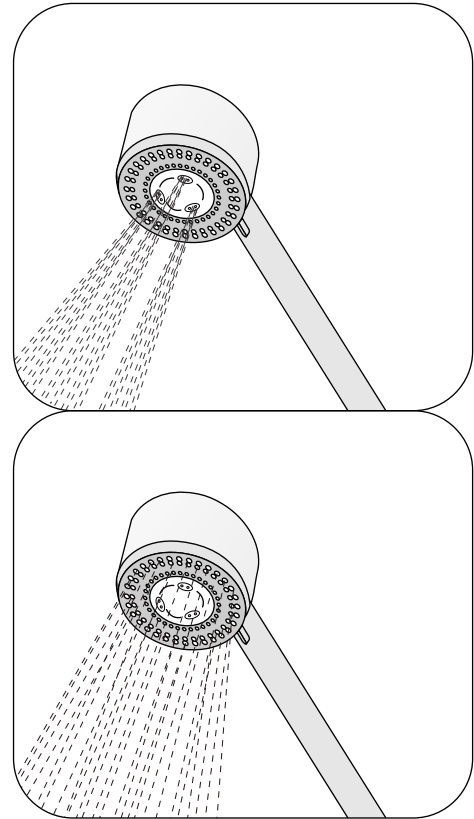


Picture 4

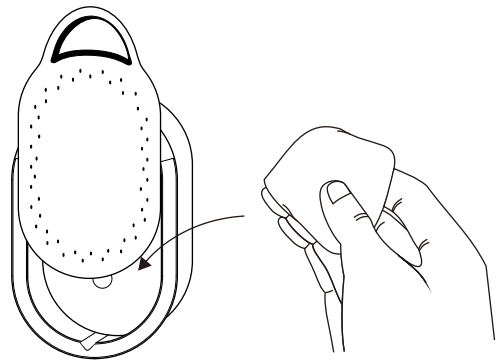

Picture 3

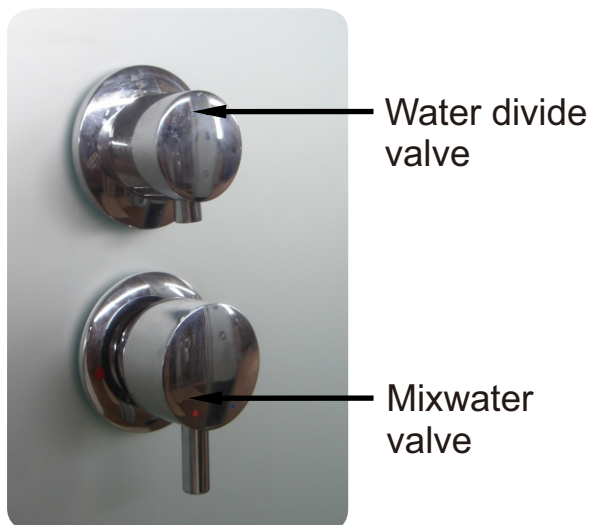

Picture 1

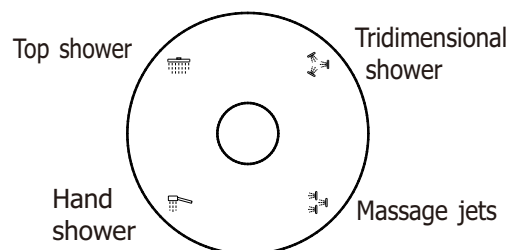

Picture 2

Aftersales service

【Warning】

- 1.For safety,please don't change the electrical equipment.If any problem, please ask a professional and skillful person to repair it.
- 2.Because the temperature of steam generator is high,the metal part is wet,for avoiding the scald and electricity,please shut down the main power of the control system and touch it after stoping heating for 30 Minutes.
- 3.Do not touch the covers of the heater when the heating on or off within 10 minutes.
- 4.please do not open the shower function and infrared function at same time,and don't let a mass of water touch the heaters.
- 5.Pls don't use the product,If you apt to bleed,especial ly people who suffers heart disease,cardiovascular disease, mal ignant or with new wound.Other symptoms or patients,please use t by doctor`s permission.
- 6.Any child or person with disability must use the product with the company of a normal adult.
- 7.Please don't put any thing which are easy cause fire (eg.towel) near heaters.
- 8.Be sure of power off when clean the cabin, replace parts,or remove operating faults Please turn off the power when cleaning the cabin,replacing accessory or damage parts.
- 9.External connected audio frequency should be not too strong otherwise it will burn out the system.
- 10.The power socket switch must be grounded reliably.
- 11.Please take attention to rated voltage and power supply,if not match then can't be used .Otherwise,it will burn out the control ler.

【Notice】

- 1.The ideal using time is 15 minutes,control system set time is 30 minutes.
- 2.The suitable temperature is 35~50℃,please djust heater's temperature to match need.
- 3.Please put off the power plug from the socket after use.
- 4.Please make sure wires and sockets are al l connected wel l before turning on power.
- 5.After 2 cycles` use(twice 30minutes),turn off the heater at least 30 minutes.

Aftersales service

【Remind】

1. In order to extend the life of the product, it must at least 30 seconds between turn on or off.
2. Control system is still working even though turning off the heater or multi-color lamp, The best way is put off the power socket.
3. Please put child to the suitable seat to avoid infrared's shining at its head.
4. Accidental shut down, please re-start.
5. If any uncomfortable when using, please turn off the power.
6. Before using, it is better to have some soft drinks (such as fruit juices, vegetable juices or mineral water etc.) while having a bath or shower with water not too cold after using.

【Maintenance】

1. Pls use general neutral liquid detergent to clean the product surface (Included bamboo wood, Composite board, plastic, aluminum, plated parts, spray pieces), but don't use strong alkaline detergents and organic solvents (such as Alcohol, Thinner, Ammonia, Acetone etc.)
2. Never wipe gilded or chrome-plated pieces with rough tool but soft cloth.
3. Please keep the tub clean and remove impurities such as hairs to make the drainage unclogged. If there is any dirt in the tub surface, please clean it with a piece of soft cloth with applied some toothpaste.
4. General neutral liquid detergent and soft cloth can be used for the daily cleaning of the infrared & steam room. Do not use the detergent containing the acetone or ammonia spirit.
5. Use 1200# waterproof abrasive paper dipped in water to grind the scratch on the room surface, then with 2000#, polish it after that with a piece of soft cloth applied some toothpaste.
6. Pls open the door of this cabin for airiness that can avoid steam or water stay in it over a long period of time which will cause mildew or peculiar smell.

Aftersales service

【Troubleshooting】

Problem	Reasons	Remedy
No Power	<ol style="list-style-type: none"> 1. Poor connection of power. 2. Power failure of leakage switch. 3. Fuse off. 	<ol style="list-style-type: none"> 1. Connect well the power socket. 2. Reconnect the leakage switch. 3. Replace fuse.
No infrared	<ol style="list-style-type: none"> 1. Up to permanent temperature, temperature detector off. 2. Heater supply plug not connect well. 3. Damage of infrared tube/board. 	<ol style="list-style-type: none"> 1. Temperature off and automatically recover. 2. Connect well the plug. 3. Replace infrared tube/board.
No steam	<ol style="list-style-type: none"> 1. No water in the steam generator. 2. Temperature explorer is broken. 3. The heater of the steam generator is broken. 	<ol style="list-style-type: none"> 1. Check water inlet electromagnetism valve. 2. Change the temperature protective explorer. 3. Change the heater .
No sound	<ol style="list-style-type: none"> 1. Low volume setted. 2. Speaker supply cord is loose. 3. Damage of speaker. 	<ol style="list-style-type: none"> 1. Adjust volume. 2. Connect well the supply cord. 3. Replace speaker.
No color light	<ol style="list-style-type: none"> 1. Turn off. 2. Multicolor lamp supply cord is loose. 3. Damage of multicolor lamp. 	<ol style="list-style-type: none"> 1. Turn on color light. 2. Connect well the supply cord. 3. Replace the multicolor lamp.
No fan	<ol style="list-style-type: none"> 1. Turn off or automatic. 2. Fan supply cord is loose. 3. Damage of fan. 	<ol style="list-style-type: none"> 1. Turn on the fan. 2. Connect well the supply cord. 3. Replace the fan.
Tray seeper	Block the drainer.	Clear drainer .