



C-PACK

POWERED  **Heat**

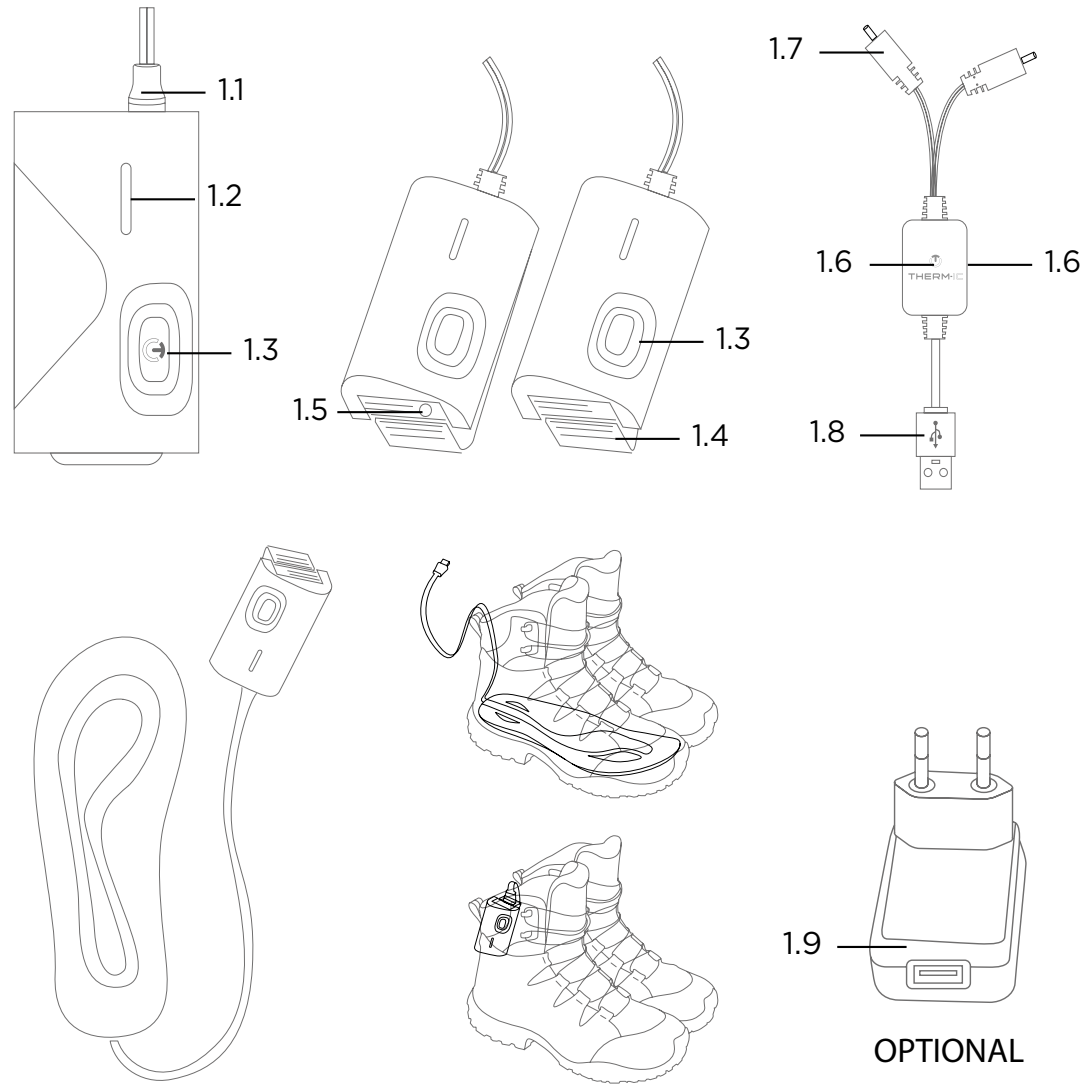

INSTRUCTIONS FOR USE

3

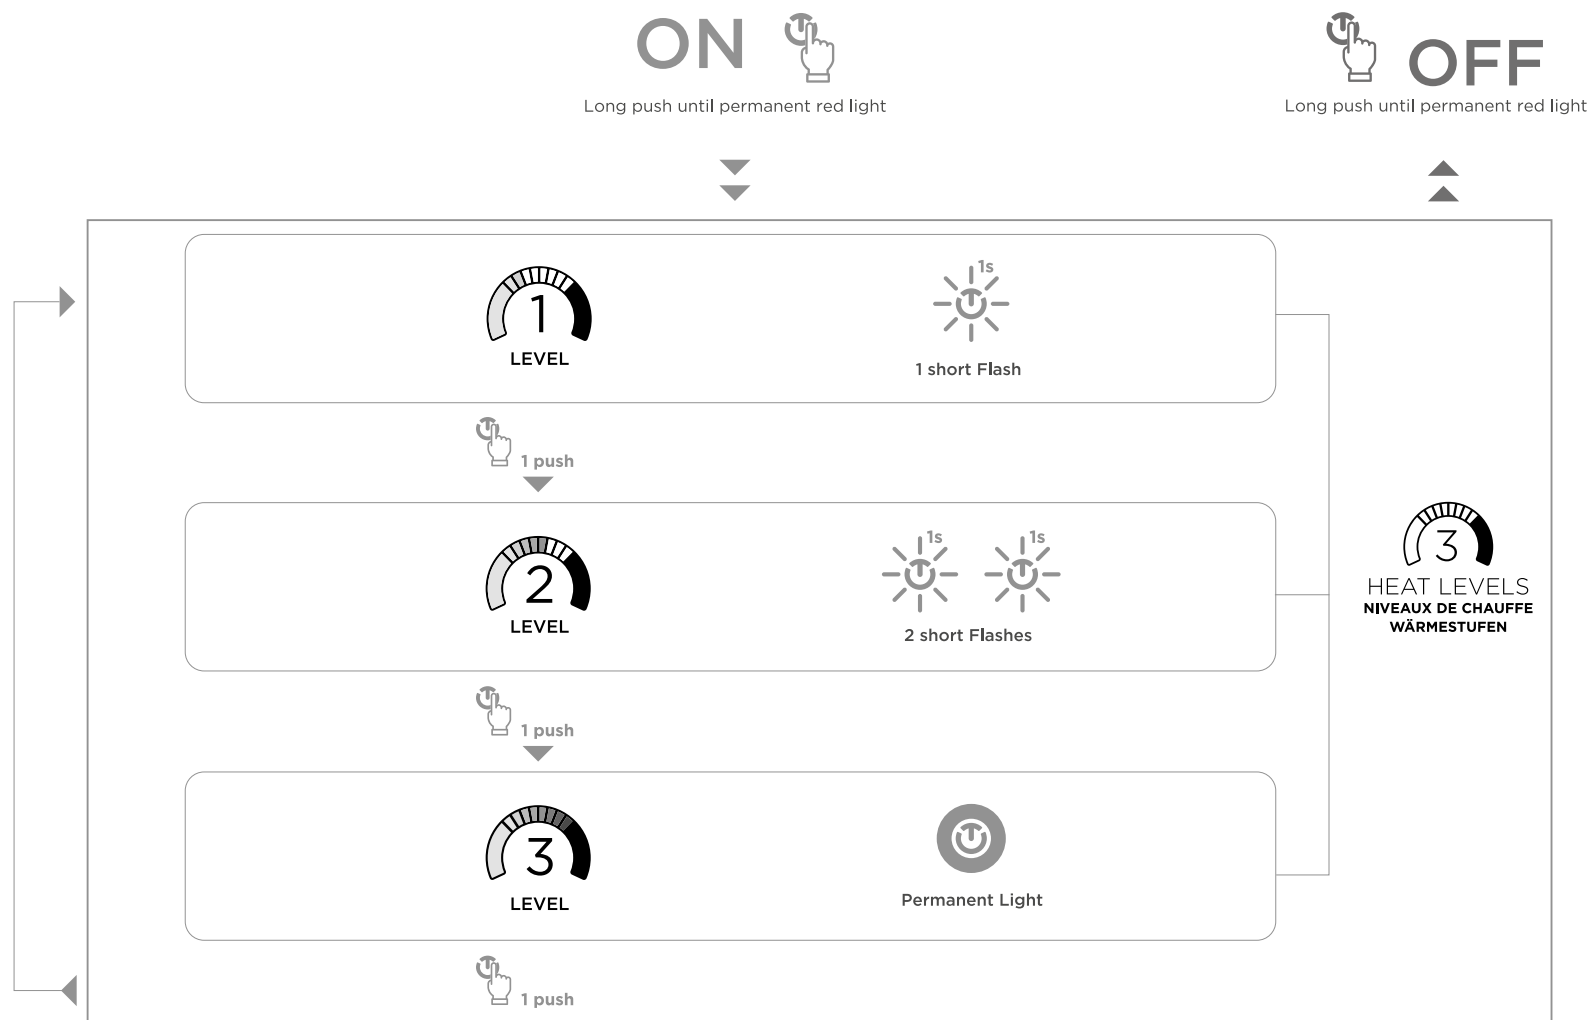

Video



INSTRUCTIONS FOR USE / ENGLISH	6
MODE D'EMPLOI / FRANÇAIS	14
GEBRAUCHSANWEISUNG / DEUTSCH	23
INSTRUCCIONES / ESPAÑOL	31
ISTRUZIONI PER L'USO / ITALIANO	40
GEBRUIKSAANWIJZING / NEDERLANDS	48
MANUAL DE UTILIZAÇÃO / PORTUGUÊS	57
BRUKSANVISNING / SVENSKA	65
BRUKSANVISNING / NORSK	73
NAVODILA ZA UPORABO / SLOVENŠČINA	81
INSTRUKCJA OBSŁUGI / POLSKI	89
HASZNÁLATI UTASÍTÁS / MAGYAR	97
MOD DE UTILIZARE/ROMÂNĂ	105
NÁVOD K POUŽITÍ / ČEŠTINA	113
ИНСТРУКЦИЯ ПО ЭКСПЛУАТАЦИИ / РУССКИЙ ЯЗЫК	121
ИНСТРУКЦИИ ЗА УПОТРЕБА / БЪЛГАРСКИ ЕЗИК	130
NÁVOD NA POUŽITIE/SLOVENSKY	139
KORISNIČKI PRIRUČNIK / HRVATSKI	147
KULLANIM KİTAPÇIĞI / TÜRKÇE	155
使用方法/中文	163
使用說明書/ 中文	170
取扱説明書/日本語	177
186	
تعليمات الاستخدام / عربي	

သုံးစွဲရန်အညွှန်း / မြန်မာဘာသာ	196
BRUGSANVISNING / DANSK	206
KÄYTTÖOHJE / SUOMI	214
사용 설명서/영어	222

Table of Contents:

Introduction 6

Package contents 7

Safety precautions 7

Device description 8

Technical specifications 9

First use and charging of the C-Pack battery 9

Safety functions 10

How to use the C-Pack batteries 10

Important instructions for use 10

Function description 11

Heat level - heating period 12

C-Pack Bluetooth® synchronization 12

Maintenance, storage and care of the C-Pack battery 12

Disposal 13

Accessories and spare parts 13

Guarantee 14

STORAGE AND CARE OF LITHIUM-ION BATTERIES

Charge fully prior to each use.

Storage:

- 1. Before storing the batteries, discharge them and charge them again (see instruction manual) - DON'T FULLY CHARGE.*
 - 2. Turn off C-Pack battery and disconnect them from the charger and insole.*
 - 3. Store in a cool, dry environment at 5°C/41°F to 20°C/68°F.*
 - 4. Avoid longer periods of non-use. If the storage exceeds a longer period, repeat the procedure of discharging the batteries and charging them halfway again evrey 6 months!*
- The proper storage of your battery will help to maximise its life and strength. For more information, please read the operating instructions!*

INTRODUCTION

Congratulations on your purchase of a C-Pack battery. Please read the instructions for use carefully before operating the device.

Please retain these instructions and pass them on to other users. The C-Pack battery supply energy for the Therm-ic heated insoles.

INSTRUCTIONS FOR USE / ENGLISH

7

PACKAGE CONTENTS

Please verify the exact model name of your C-Pack battery.

C-PACK 1300

2 C-PACK 1300 (rechargeable)
1 USB charger cable Therm-ic C-Pack

C-PACK 1300 Bluetooth®

2 C-PACK 1300 Bluetooth® (rechargeable)
1 USB charger cable Therm-ic C-Pack

C-PACK 1700 Bluetooth®

2 C-PACK 1700 Bluetooth® (rechargeable)
1 USB charger cable Therm-ic C-Pack

Optional: 1 wall plug universal charger with USB output 5V/2A Therm-ic (including country-specific adapters)

Note: Some models are not available in some countries.

Free Bluetooth® app: Only available on Android and iOS systems. Please download installed your Android app or iOS app, and follow instruction on App or refer to www.therm-ic.com for instructions.

SAFETY PRECAUTIONS

General safety precautions:

- This device is not intended for use by persons (including children) with limited physical, sensory or mental abilities or without adequate experience and/or knowledge, unless they are supervised by or receive instructions on how to use the device from a person in charge of their safety.
- Children should be supervised to make sure that they are not using the device as a toy.
- If you have problems sensing hot or cold objects (e.g. diabetics, disabled persons etc.), please consult your doctor before using the unit.
- Check your feet regularly for reddening of the skin. Excessive heat levels over prolonged periods of time can lead to burns. Children may use the unit only under the supervision of adults.

INSTRUCTIONS FOR USE / ENGLISH

8

- Cleaning and user maintenance shall not be made by children without supervision.
- It must only be supplied at SELV.
- The device may not be used to warm animals.

IMPORTANT: For recharging, only use the supplied USB Therm-ic charging cable. Charging is optimized using Therm-ic DC switching adaptor 5V/2A. It is designed for indoor use and may not be exposed to damp surroundings.

- Never try to open the battery packs! Improper handling of the lithium-ion batteries can lead to an explosion!
- Damaged batteries must no longer be used and must be disposed of immediately.
- If damage to charging cables or other parts of the unit is found, do not use the unit. Do not make any modifications to the unit or use it for any unintended purposes. Always have any repairs to the battery packs carried out by the manufacturer only. Damaged chargers or charging cables cannot be repaired. Dispose of the charger in accordance with local regulations at a collection site for electrical waste.

- If questions or problems arise, please get in touch with your dealer or the manufacturer (see rear of envelope for address).
- Do not throw C-Pack battery into an open fire, as there is a risk of explosion.

DEVICE DESCRIPTION

C-Pack battery

- Snap fasteners for connection to the charging station and the heated insole connector (1.1)
- Heat setting display 1 / 2 / 3 (1.2)
- Control button (1.3) (Instructions for use p3)
- Metal attachment hook (1.4)
- Charging trap (1.5). Pull the clip to access to charging connector
- Charge indicator light (1.6)
- Charger cord with C-Pack plug (1.7)
- USB connector (1.8)
- Optional wall plug universal charger (1.9) (with adaptors for use in different countries)

INSTRUCTIONS FOR USE / ENGLISH

TECHNICAL SPECIFICATIONS

USB wall plug universal charger* (incl. contry-specific adapters)	Input: 100V-240V ~ (50-60 Hz), max. 300 mA	Output: 5V / 2000 mA
USB charger cable Therm-ic**	Input: 5V max. 2000 mA	Output: 4.2V / 2000 mA
C-Pack 1300	Output: 3.7 V / 2600 mAh	
C-Pack 1700	Output: 3.7 V / 3400 mAh	

* Optional accessory from Therm-ic

** available in retail locations or from Therm-ic

FIRST USE AND CHARGING OF THE C-Pack BATTERY

Important note:

The C-Pack battery must be charged before using them for the first time.

Preparing the USB power supply (optional). Slide your country-specific adapter into the slot on the back of the charger until it locks in with an audible click.

USB cable charging process :

1. Please ensure that the C-Pack is switch OFF while charging.
2. Plug the USB cable into USB port. The charge indicator (1.6) will light up green. Lift up metal clip to access to the charging trap. Next, you plug the charging connectors of the cable into the batteries (1.5 - 1.7). The charging process will start automatically and the charge indicator (1.6) will light up in red during charging.
3. Once the C-Pack batteries are fully charged, the charging process is automatically concluded and the LED on the charge indicator (1.6) will switch back to green.
4. Remove both C-Pack batteries from the charging connectors.

Important note:

- Recharge the C-Pack battery after each use. This extends the service life of the batteries and ensures that the device is always ready for use.
- The battery consists of lithium ion cells and can be charged in any state. For this reason, the battery

INSTRUCTIONS FOR USE / ENGLISH

10

does not need to be fully discharged before charging.

- When starting the charging process, the C-Pack battery should be in POWER OFF mode.
- The full charging capacity of the C-Pack batteries can only be conserved if the C-Pack batteries are removed from the charging station after the charging procedure is complete.

Charging times

Battery	C-Pack 1300	C-Pack 1700
Charging time	~ 6h00	~ 8h00

Note that at half time of the charging time mentioned on table above, the battery is already charged at around 75% of its maximum capacity (fast charging process). Lab test done using Therm-ic USB wall plug universal charger (optional).

SAFETY FUNCTIONS

- Short circuit protection: If a short circuit occurs on the connector or heating element, the integrated electronic

circuit switches off the C-Pack battery. After removal of the short circuit and brief insertion into the charging shaft, the C-Pack battery is ready for use again.

- Protection against overcharging and exhaustive discharge: The C-Pack battery is protected against overcharging and exhaustive discharge by the integral electronic circuit during use.

HOW TO USE THE C-PACK BATTERY

- When using the C-PACK, connect the cord from the heated insole firmly to the C-PACK.
- The C-Pack battery can be controlled with button (1.3) or with a iOS and Android app (only for C-Pack Bluetooth® enabled).

IMPORTANT INSTRUCTIONS FOR USE

- Do not allow the highest heat level to be switched on for more than a few minutes at a time. This could produce too much heat during operation, which may cause burns.
- Always set C-Pack battery to low or moderate heat levels to maintain comfortable foot warming (heating should be almost undetectable).

INSTRUCTIONS FOR USE / ENGLISH

11

- The optimum heat output is only reached when the socks, boots or soles are dry.
- Never used the heatable sock and the heatable insole together; this can result in too much heat - risk of burning!

FUNCTION DESCRIPTION

C-Pack without Bluetooth®

The C-Pack battery have 4 operating modes: POWER OFF – IN USE LEVELS 1-2-3. They are indicated with the heating level display on the C-Pack battery. The LED flashing modes corresponds to the selected heat setting.

C-Pack with Bluetooth®

Using the phone App: Please refer to the Bluetooth® app or www.therm-ic.com.

Turning the device on:

Press the control button (1.3) for a long period of time (approx. 3 sec) to turn on the C-Pack battery at the lowest heat level. If the control button is pressed for too long period of time (approx. more than 6s), the C-Pack will remain in OFF mode.

Turning the device off:

- Press the control button for a longer period of time (3 seconds) (1.3) to turn off the C-Pack battery.
- The C-Pack battery switches into POWER OFF mode.
- No LED is illuminated on the heat setting display (1.2).
- The heat is off.

Changing the heat setting:

- Press the control button briefly (approx. 1s) to switch to next heat settings (Level1, Level2, Level3, Level1...)
- Level1: A flash, lower heat settings.
- Level2: 2 flashes, moderate heat settings
- Level3: LED ON, higher heat settings.

Note: Both C-Pack batteries can be used independently with different heat levels.

INSTRUCTIONS FOR USE / ENGLISH

12

HEAT LEVEL - HEATING PERIOD

The following table shows the heating period for the heat levels, which can be set using the control buttons.

Heat level	C-Pack 1300	C-Pack 1700
1	11-13 hrs	15-17 hrs
2	5-7 hrs	7-9 hrs
3	3-4 hrs	4-5 hrs

The heating period per charge depends on the selected heating level, the ambient temperature and the charging status as well as the age of the batteries.

Therefore heating times are provided for information only and are not contractual.

C-PACK BLUETOOTH® SYNCHRONIZATION

Free Bluetooth® app: Only available on Android and iOS systems. Please download installed your Android app or iOS app, and follow instruction on App or refer to www.therm-ic.com for instructions.

MAINTENANCE STORAGE AND CARE OF THE C-PACK BATTERY

To ensure a long life, we recommend storing the C-Pack battery in a cool room (at temperatures ranging from 5°C / 41°F to 20°C / 68°F) in a semi-charged status.

The C-Pack battery must be turned off (heat setting display (1.2) dark) and disconnected from the insoles and charger for storage.

For long-term storage, the C-Pack battery must be discharged and recharged half at least every 6 months (Charge for about 1/3rd of the time indicated on charging time table).

This ensures that the maximum battery power is preserved for many years!

Clean the parts as needed with a soft, slightly damp cloth and a mild detergent.

Caution:

Always remove the charger from the outlet before cleaning it.

INSTRUCTIONS FOR USE / ENGLISH

13

DISPOSAL

- If the device can no longer be used, please dispose of it and its packaging in an environmentally-friendly way that is in accordance with current regulations.
- Do not throw the charger or the battery packs away with normal household trash. Instead, dispose of the parts at a collection site for electrical waste.
- Packaging materials are raw materials and can be recycled. For this reason, please recycle the packaging.
- Battery packs must be disposed of at intended collection sites.
- Please contact your local authority for more information.

ACCESSORIES AND SPARE PARTS

When subsequently purchasing accessories or spare parts, please make sure to provide the exact Therm-ic model designation. Ideally, take the part to be replaced with you to your dealer.

We offer a number of accessories. All items (accessories and spare parts) are also available

individually. More information can be found at www.therm-ic.com or from your specialist retailer.

Information subject to change.

This product complies with the relevant regulations and guidelines.



GUARANTEE

As the manufacturer we guarantee for this product for a period of two years after the date of purchase. Within this guarantee period we will remedy any defects arising from faulty material or manufacture, free of charge, either by repairing or exchanging the device at our discretion.

The following are not included in the guarantee : damage caused by improper use; normal wear and tear with only minor impact on the value or usability of the device.

The guarantee becomes null and void if the device is tampered with by unauthorised bodies, or where other than original THERM-IC spare parts are used.

Sommaire :

Introduction	14
Contenu de l'emballage	15
Consignes de sécurité	15
Description de l'appareil	16
Spécifications techniques	17
Mise en service et charge des batteries C-Pack	17
Fonctions de sécurité	18
Utilisation des batteries C-Pack	18
Conseils importants pour l'utilisation	18
Description des fonctions	19
Puissance et durée de chauffe	20
Synchronisation des C-Pack Bluetooth®	20
Maintenance, stockage et entretien des batteries C-Pack	20
Mise au rebut	21
Accessoires et pièces de rechange	21
Garantie	21

STOCKAGE ET ENTRETIEN DES BATTERIES LITHIUM-ION

Recharger complètement avant chaque utilisation.

Stockage:

1. Avant de stocker les batteries, les décharger et les recharger à moitié (voir le mode d'emploi) - **NE PAS CHARGER COMPLÈTEMENT.**
 2. Eteindre les batteries C-Pack et les débrancher du chargeur et de la semelle.
 3. Stocker au frais et au sec entre 5°C/41°F et 20°C/68°F.
 4. Eviter les périodes d'inutilisation prolongée. Dans le cas d'un stockage prolongé, décharger les batteries et les recharger à moitié, tous les 6 mois !
- Le bon stockage des batteries permet d'obtenir la puissance et la longévité maximum.*
- Vous trouverez des informations supplémentaires dans le mode d'emploi ci-dessous.*

INTRODUCTION

Nous vous félicitons pour l'achat de vos batteries C-Pack. Veuillez lire attentivement ce mode d'emploi avant de mettre l'appareil en service. Conservez-le soigneusement et communiquez-le aux autres utilisateurs. Les batteries C-Pack fournissent de l'énergie pour les semelles chauffantes Therm-ic.

MODE D'EMPLOI / FRANÇAIS

CONTENU DE L'EMBALLAGE

Veuillez bien tenir compte du nom du modèle de votre C-Pack.

C-Pack 1300

2 Batteries C-Pack 1300 (rechargeables)
1 câble de chargeur USB Therm-ic C-Pack

C-Pack 1300 Bluetooth®

2 Batteries C-Pack 1300 Bluetooth® (rechargeables)
1 câble de chargeur USB Therm-ic C-Pack

C-Pack 1700 Bluetooth®

2 Batteries C-Pack 1700 Bluetooth® (rechargeables)
1 câble de chargeur USB Therm-ic C-Pack

En option : 1 chargeur universel 5V/2A Therm-ic (avec adaptateurs à la norme du pays).

Note : Certains modèles ne sont pas disponibles dans tous les pays.

15

Application gratuite Bluetooth® : Disponible sur Android et iOS. Téléchargez l'application sur Android ou iOS, et suivez les instructions de l'application. Plus d'informations sur www.therm-ic.com.

CONSIGNES DE SÉCURITÉ

Consignes générales de sécurité :

- Cet appareil n'est pas adapté pour des personnes (y compris des enfants) dont les capacités physiques, sensorielles ou intellectuelles sont limitées, ni à des personnes manquant d'expérience et/ou de connaissance, à moins que ces personnes ne soient sous la surveillance d'une personne assurant leur sécurité ou leur ayant fourni des instructions sur son mode de fonctionnement.
- Surveillez les enfants afin de s'assurer qu'ils ne jouent pas avec l'appareil.
- Si vous n'êtes pas en mesure de sentir précisément le chaud ou le froid (diabétiques, handicapés, etc.), demandez l'avis de votre médecin avant d'utiliser l'appareil.
- Contrôlez régulièrement si vos pieds ne présentent pas de rougeurs. Vous risquez des brûlures dans le

cas où l'exposition à la chaleur excessive dure trop longtemps. Par conséquent, les enfants ne doivent utiliser cet appareil que sous la surveillance et la responsabilité d'un adulte.

- Cet appareil ne doit pas être utilisé pour réchauffer des animaux.

IMPORTANT :

N'utilisez pour la charge que le câble de chargeur USB Therm-ic C-Pack. Pour la charge il est préconisé d'utiliser le chargeur universel Therm-ic 5V/2A (en option). Il a été conçu pour une utilisation en intérieur et ne doit pas être exposé à l'humidité.

- N'essayez jamais d'ouvrir les blocs de batteries. Vous risquez une explosion en cas de manipulation inappropriée des batteries lithium-ion !
- Les packs de batteries endommagés ne doivent plus être utilisés et doivent être mis au rebut dans les plus brefs délais.
- Si vous constatez que les cordons du chargeur ou d'autres pièces de l'appareil sont endommagés, ceux-ci ne doivent plus être utilisés. N'apportez pas de modification à l'appareil et ne l'affectez pas à un autre

usage que celui prévu. Faites réparer les packs de batteries par le fabricant uniquement. Les dommages survenant sur le chargeur ou les cordons du chargeur ne sont pas réparables. Mettez le chargeur au rebut dans un point de collecte des déchets électroniques en respectant les règles en la matière !

- Pour toute question ou tout problème qui se présenterait, veuillez vous adresser à votre revendeur ou au fabricant (à l'adresse indiquée sur le dos de l'enveloppe).
- Ne pas jeter les batteries C-Pack au feu en raison des risques d'explosion !

DESCRIPTION DE L'APPAREIL

Batteries C-Pack

- Prise de raccordement du cordon du chargeur et de la semelle intérieure chauffante (1.1)
- Affichage du niveau de chauffe 1 / 2 / 3 (1.2)
- Bouton unique pour le réglage du niveau de chauffe (1.3) (cf. Mode d'emploi p. 3)
- Crochet de fixation métallique (1.4)
- Point de charge (1.5). Tirez la fixation métallique pour avoir accès au point de charge.

MODE D'EMPLOI / FRANÇAIS

- Voyant de charge (1.6)
- Cordon du chargeur avec fiche (1.7)
- Prise USB (1.8)
- En option chargeur universel (1.9) (avec adaptateurs à la norme du pays)

SPÉCIFICATIONS TECHNIQUES

Chargeur universel* (avec adaptateurs à la norme du pays)	Entrée : 100V-240V ~ (50-60 Hz), max. 300 mA	Sortie : 5V / 2000 mA
Câble de chargeur USB Therm-ic C-Pack**	Entrée : 5V max. 2000 mA	Sortie : 4.2V / 2000 mA
C-PACK 1300	Sortie : 3.7 V / 2600 mAh	
C-PACK 1700	Sortie : 3.7 V / 3400 mAh	

* En option : pièce détachée disponible chez Therm-ic

** disponible dans le commerce ou comme pièce détachée chez Therm-ic

MISE EN SERVICE ET CHARGE DES BATTERIES C-Pack

Remarque importante :

Il est nécessaire de charger les batteries C-Pack avant la première mise en service !

Processus de charge USB :

1. Assurez-vous que votre C-Pack est éteint.
2. Branchez le chargeur à une prise. Le voyant de charge (1.6) s'allume en vert. Soulevez le clips des batteries (1.5) puis branchez le câble de chargeur dans les batteries. (1.5-1.7). La charge commence automatiquement et le voyant de charge (1.6) reste allumé en rouge pendant la charge.
3. Lorsque les C-Pack sont complètement chargées, la charge s'arrête automatiquement et la LED du voyant de charge (1.6) devient verte.
4. Enlevez les deux C-Pack de la charge.

En option : Préparation du chargeur universel
Introduisez l'adaptateur adapté à votre pays dans le logement situé à l'arrière du chargeur jusqu'à ce qu'il se clipse de manière audible.

Note importante :

- Chargez les C-Pack après chaque utilisation. Cela permet d'augmenter la longévité des batteries et de garder l'appareil en état de marche.
- La batterie est constituée de cellules lithium-Ion et peut être rechargée dans n'importe quel état. Il n'est donc plus nécessaire de la décharger complètement avant de la recharger.
- Les C-Pack doivent être éteintes lors du démarrage de la procédure de charge.
- La pleine capacité de charge des batteries ne peut être maintenue que si ces dernières sont débranchées du chargeur après la charge.

Durées de charge :

Batteries	C-Pack 1300	C-Pack 1700
Temps de charge	~ 6h00	~ 8h00

Les temps de chauffe communiqués sont fournis à titre indicatif et sont non contractuels.

FONCTIONS DE SÉCURITÉ

- Anti court-circuit : En cas de court-circuit au niveau de la prise ou de l'élément chauffant, l'électronique intégrée désactive les C-Pack. Lorsque le court-circuit a été éliminé et que les C-Pack ont été rebranchées dans le compartiment de recharge, elles sont à nouveau opérationnelles.
- Protection contre la surcharge et le déchargement : l'électronique intégrée aux batteries C-Pack assure une protection en temps réel contre les surcharges et les déchargements.

UTILISATION DES BATTERIES C-Pack

- Lorsque vous utilisez les C-PACK, fixez fermement le cordon de la semelle intérieure chauffante aux C-PACK.
- Les C-Pack peuvent être contrôlées par le bouton unique (Fig. 1.3) ou avec le Bluetooth® en téléchargeant l'application mobile Therm-ic compatible.

IMPORTANT : CONSEILS POUR L'UTILISATION

- Ne laissez pas la puissance de chauffage maximum

MODE D'EMPLOI / FRANÇAIS

19

activée pendant plus de quelques minutes ; une utilisation prolongée risque d'élever la température de manière excessive, et d'occasionner des brûlures.

- Toujours régler les C-Pack sur un niveau de puissance faible ou moyen afin de conserver une chaleur confortable pour les pieds (la chauffe devrait être pratiquement imperceptible).
- La température de chauffe optimale est atteinte lorsque les chaussures ou les semelles sont sèches.
- N'utilisez jamais la chaussette chauffante et la semelle intérieure chauffante en même temps afin d'éviter une chaleur excessive - risque de brûlure !

DESCRIPTION DES FONCTIONS

C-Pack sans Bluetooth®

Les batteries C-Pack sont dotées de 4 modes : ARRÊT - NIVEAUX 1, 2, 3. Ces modes sont signalés par un voyant d'allure de chauffe pour lequel le nombre de flash LED correspond au niveau de chauffe sélectionné. La puissance de chauffe des C-Pack peut être réglée sur 3 niveaux (level1, level2, level3), grâce à une zone de commande comportant

un bouton unique (1.3).

Les batteries C-Pack sont éteintes lorsque la LED du niveau de chauffe l'est aussi.

C-Pack Bluetooth®

Application gratuite Bluetooth® : Disponible sur Android et iOS. Téléchargez l'application sur Android ou iOS, et suivez les instructions de l'application. Plus d'informations sur www.therm-ic.com.

MARCHE (ON) :

- Appuyer longtemps (env. 3 secondes) sur la touche de fonction pour régler les C-Pack sur le niveau de chauffe le plus bas. Au-delà de 6 secondes d'appui sur le bouton, celui-ci passe en mode sécurité et s'éteint.

RÉGLAGE :

- Une pression (env. 1 seconde) sur la touche de fonction augmente la puissance de chauffage (Level1, Level 2, Level 3).
- Niveau 1 (Level 1) : 1 flash, puissance de chauffe faible.
- Niveau 2 (Level 2) : 2 flashes, puissance de chauffe moyenne.

MODE D'EMPLOI / FRANÇAIS

- Niveau 3 (Level 3) : Lumière constante, puissance de chauffe élevée.

ARRÊT (OFF) :

- Pour éteindre les C-Pack, appuyez longtemps (3 secondes) sur la touche de fonction jusqu'à ce que le voyant de niveau de chauffe s'éteint (1.2).

PUISSANCE ET DUREE DE CHAUFFE

Le tableau suivant précise à titre indicatif la température max. et la durée de chauffe des niveaux, réglables à l'aide des touches de fonction.

Heat level	C-Pack 1300	C-Pack 1700
1	11-13 h	15-17 h
2	5-7 h	7-9 h
3	3-4 h	4-5 h

La durée de chauffe par charge dépend de l'allure de chauffage sélectionnée, de la température ambiante, des batteries, de leur niveau de charge et de leur ancienneté.

20

SYNCHRONISATION DES C-PACK Bluetooth®

Application gratuite Bluetooth® : Disponible sur Android et iOS. Téléchargez l'application sur Android ou iOS, et suivez les instructions de l'application. Plus d'informations sur www.therm-ic.com.

MAINTENANCE, STOCKAGE ET ENTRETIEN DES C-PACK

Afin de prolonger au maximum la durée de vie des batteries C-Pack, nous vous recommandons de les stocker dans un endroit frais (de 5°C / 41°F à 20°C / 68°F), après les avoir chargées à moitié. Les C-Pack doivent être stockées après avoir été désactivées (affichage de l'allure de chauffage éteint (1.2)) et débranchées de la semelle chauffante et du chargeur. Lors d'un stockage prolongé, les C-Pack doivent être déchargées, puis rechargées à moitié au moins tous les 6 mois.

Ainsi, les batteries conservent leurs performances maximales pendant plusieurs années !

Au besoin, nettoyez les pièces à l'aide d'un chiffon doux légèrement humide et d'un nettoyant doux.