

Maintenance manual

NT-820-06 – Stretcher traverse lock repair kit


Repair kit components

The complete repair kit consist of:


- 8 Repair clips
- 1 tube of fast glue
- Instructions




Mounting the clips to the stretcher traverse

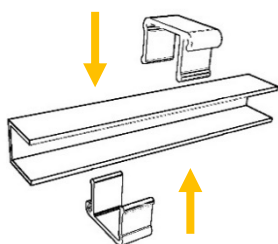


1: Place one part above the traverse and one part under the traverse, opposite to the other.

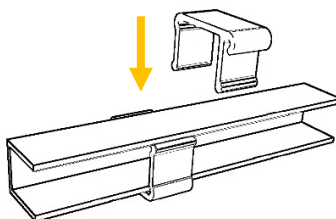


2: Insert the parts on the traverse - one from underneath and one from the top.

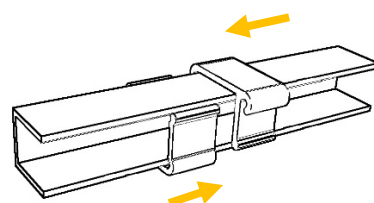

3: Position the parts so they can slide into each other.

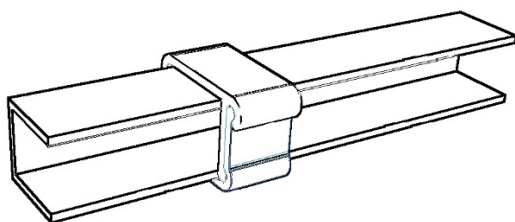

4: Press the parts together into one unit.

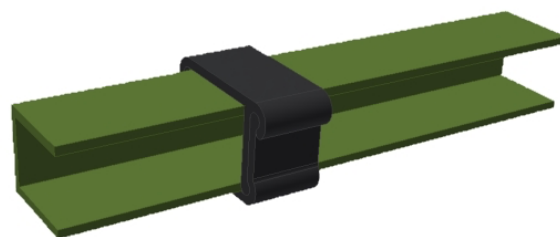

The locking mechanism is fully assembled.



5: After the assembly, the two parts are fixed by applying the liquid adhesive along the two slots, as shown in the pictures above.


Best results if the adhesive is allowed to cure for a day before being exposed to stress.



Removing the 2" webstraps underneath the NT-820MV1

Mounting the new traverse lock makes the straps on the NT-820MV1 superfluous.

Cut the strap close to the stitching.

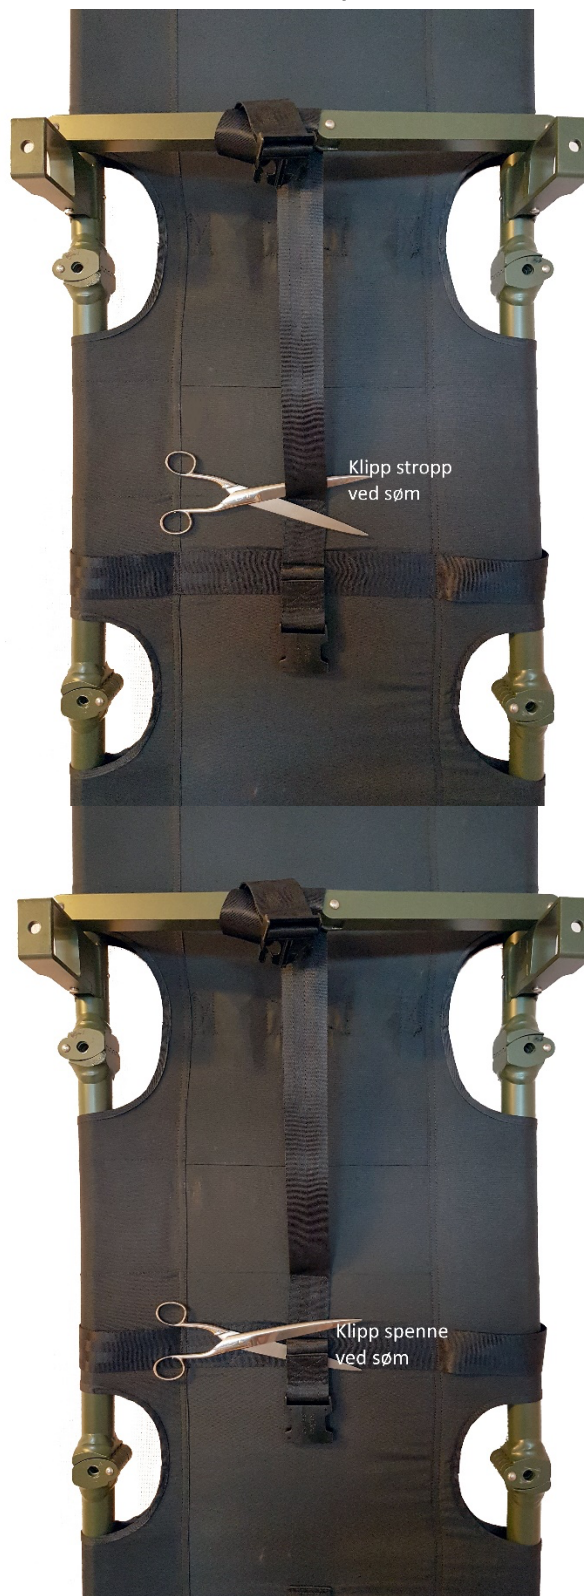

Cut the buckle close to the stitching

Straps can be removed from both ends of the stretcher.