

979200 Assembly

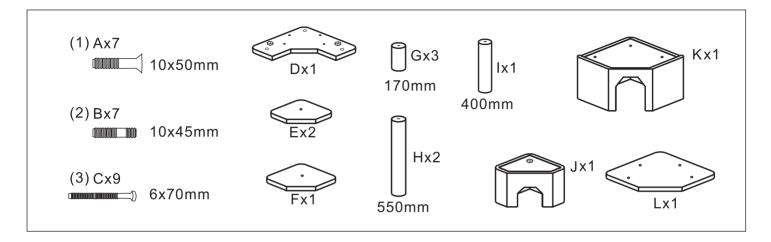


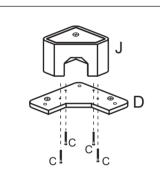

Step1:


Connect the smaller cubby J to D board screwing the longer bolts C through smaller holes using allen key provided.

*To help assembling, press board against the cubby firmly.

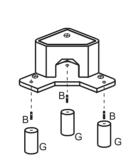


Step2:

Screw 3 double headed bolts to 2 holes on the board using the short end, connect the three short posts G to the longer end of the bolts.

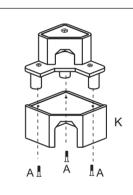


Step3: Connect the bigger cubby K to the other ends of the three posts, using the short bolts A.

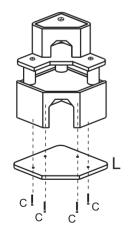


Step4: Seal the bottom of the cubby using the four longer bolts C.


*To help assembling, press board against the cubby firmly.

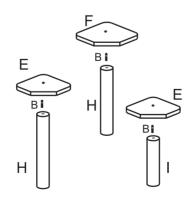

Step5:

Connect the three posts to the three platforms using the double-headed bolts as pictured, with shorter thread screwed into platforms and longer thread into the posts.

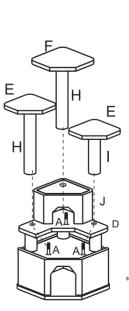



complete unit

Step6:

Attach the three finished platforms in step 5 to D board and cubby J using bolts A.

*Tighten all posts once more to complete assembling.