



GO MOTO CHIN MOUNT

USER MANUAL

Table of content:

The basics	2
Mounting instructions	3
Customer support	5
Mounting Action Camera	6
Removing mount	7
WARNING	8



The Basics




- ALUMINUM ACTION CAMERA MOUNT
- ASA HELMET SPECIFIC BASE
- ORIGINAL 3M VHB 4991 F ADHESIVE
- 3M VHB surface cleaner included

Step 3: Prepare for mounting!



Peel off the protective film from the 3M VHB adhesive. We recommend warming up the 3M VHB adhesive (**NOT HOT!**) with a hair dryer for better adhesion.

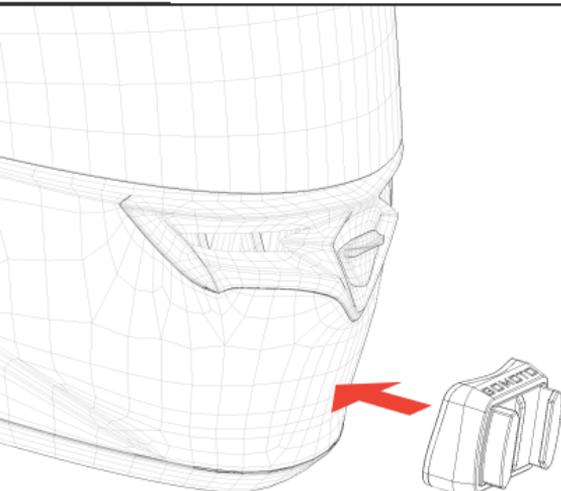

Carefully line up the mount with your helmet (remember step 1). Don't press until you have the placement just right. When you think the mount is on the right spot, press hard and hold for at least 1 minute with firm pressure.

Potential gaps may be present between the 3M adhesive and the helmet. This could be due to misplacement or not applying enough pressure. You can warm up and press the chin mount again, or use something like a credit card to press the 3M adhesive against the helmet to remove the gaps.

Step 5: Waiting...



You mounted your Go Moto mount?!
Well done!

Just a little patience...

Before using your Go Moto Mount, we recommend not using it for at least 24 hours to let the adhesive properly cure. The optimal waiting time for the 3M VHB adhesive to settle is 72 hours.

We'd love to see your results! Share your Go Moto mount on Instagram or Facebook with gomotomounts!

Questions?

Need any help mounting your Go Moto mount, or do you have any other questions?
We'll be happy helping you out!

Send an e-mail to: support@go-moto.com

Find Go Moto online!



www.go-moto.com




[gomotomounts](https://www.instagram.com/gomotomounts)



www.facebook.com/gomotomounts


Mounting action camera

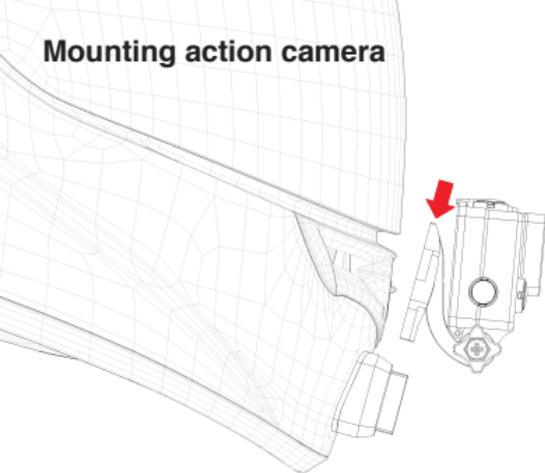

You can mount an action camera mount by using a compatible mounting buckle. This will be universal for different brands including: GoPro Hero/Session, Insta360 ONE R, DJI Osmo Action, Xiaomi Yi 4K and more.

Push the buckle into place until it clicks.


Recommendation:

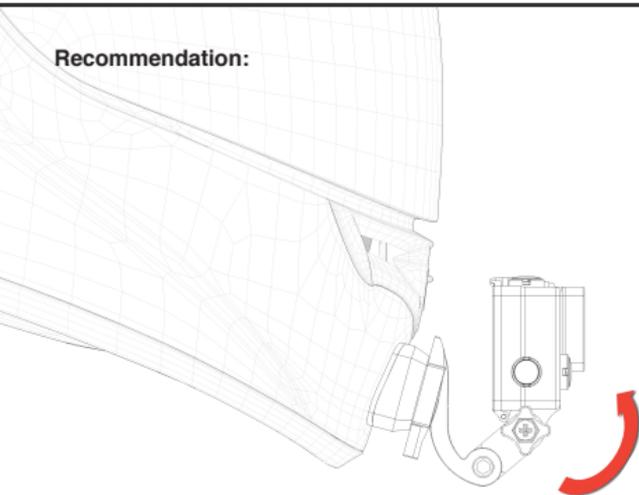

You can use an extension arm for better adjustability of the camera angle.

Removing the mount.

Step 1: Weakening the adhesive

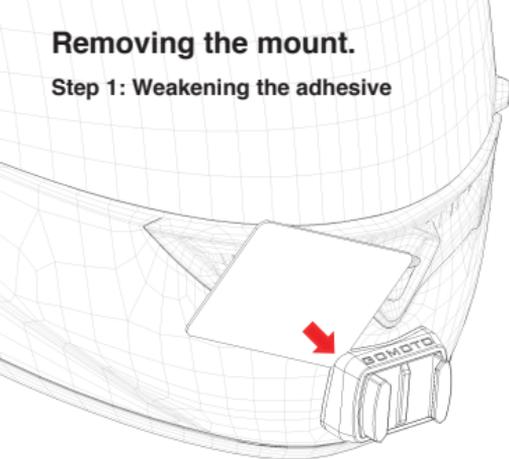


Removing the mount from your helmet can be pretty hard. Use the following instructions so you won't damage your helmet or the Go Moto mount:

We advise heating up the sides with a hair dryer to make the proces a little easier.

We also advise using something like an old credit card to remove the mount. Push the credit card between the mount and the adhesive (so you won't scratch your helmet).

Push a credit card between the corners of the VHB adhesive untill it starts coming loose at each corner.

Step 2: Twisting

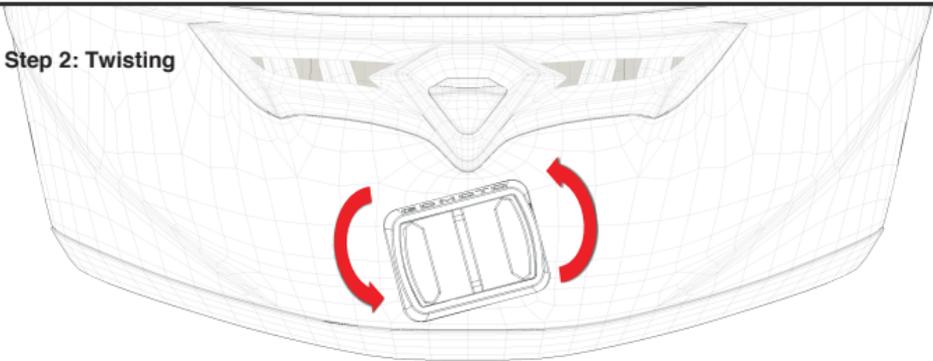

When the corners of the adhesive are released, try twisting the Go Moto mount (you can attach something to the mount to get more grip). For this step you can also heat up the mount a little more. By twisting the Go Moto mount it should release from your helmet. (**Don't pull! This may damage your helmet!**)

WARNING:

Only use the correct Go Moto mount for the intended helmet.

Always clean your helmet with original 3M VHB surface cleaner before mounting the Go Moto mount. The 3M VHB adhesive may not stick properly without using the 3M VHB cleaner.

Only use original 3M VHB 4991 F adhesive for the Go Moto mount. Any other adhesives may fail to hold.

Always check your action camera is properly mounted before riding.

Go Moto is not responsible for any damage caused by improper installation.

DANGER. 3M VHB surface cleaner:

Contains: Propan-2-ol.

Highly flammable liquid and vapour. Causes serious eye irritation. May cause drowsiness or dizziness.

Keep away from heat, hot surfaces, sparks, open flames and other ignition sources. No smoking. Avoid breathing vapours.

IF IN EYES: Rinse cautiously with water for several minutes. Remove contact lenses, if present and easy to do. Continue rinsing.