

Get *Your* CP Survey done in Minutes!



- ✓ T/R Performance
- ✓ Coating Condition
- ✓ Line Currents
- ✓ Critical Bonds
- ✓ Polarized Potentials
- ✓ Corrosion Rates (ER)
- ✓ AC/DC Interference

For a free demo:
get-it-done@metricorr.com
To learn more: www.metricorr.com

1

Setup instant-off campaign via CP*Manage Web. Campaign ID, Time, On/Off switch pattern, repetitions, etc.

2


Select interrupter to perform On/Off switching of the CP source.

3

Select loggers on your pipelines to perform the instant-off measurements.

4

Receive data, analyze results and build reports in CP*Manage Web.

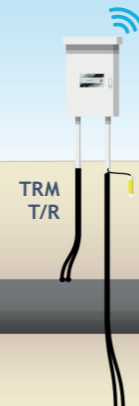

VL100 CASING

POTENTIAL

VL100 BOND

ICL-C LINE CURRENT ER PROBE

2 x ER PROBE

VL100 POTENTIAL (FOREIGN)

MetriCorr

Corrosion & Cathodic Protection Remote Monitoring