
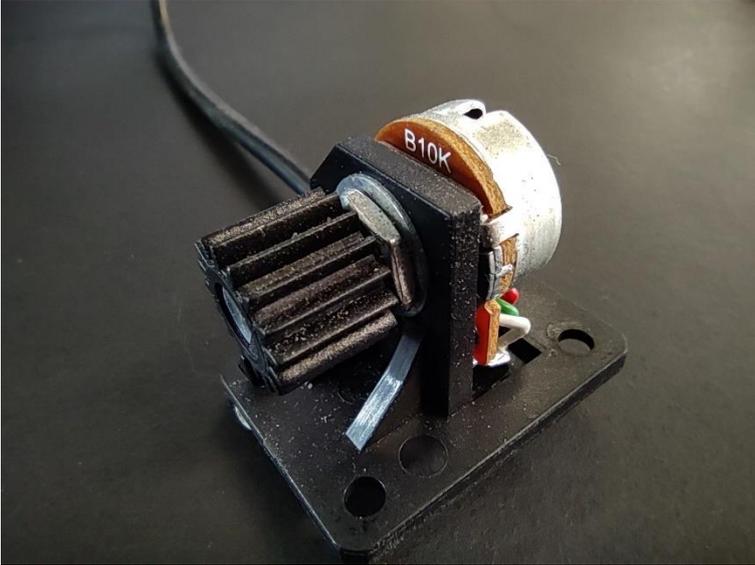
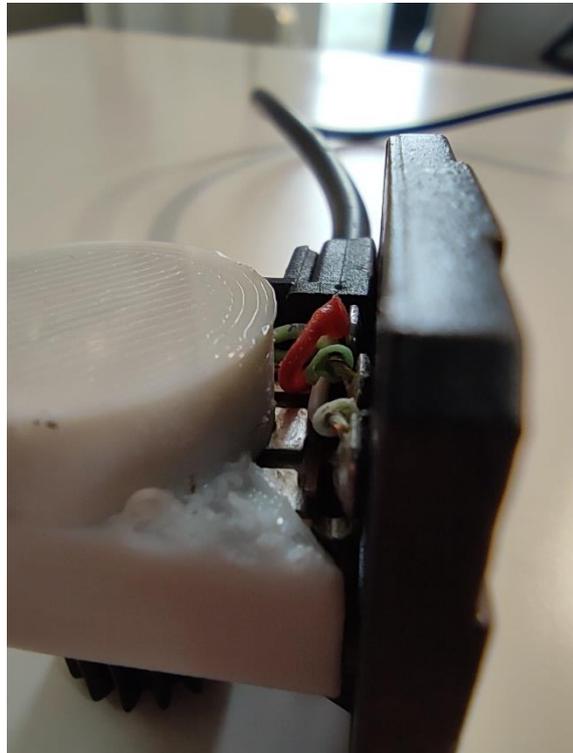


Step 1

Unscrew the three screws holding the potentiometer in the pedal and take out the potentiometer from the pedal. Be aware of the orientation of the gear on the potentiometer.


**Step 2**

Be aware of the wires on the potentiometer as the 3D printed cover reaches all the way into the potentiometer print. If necessary, move the wires away from the potentiometer housing.

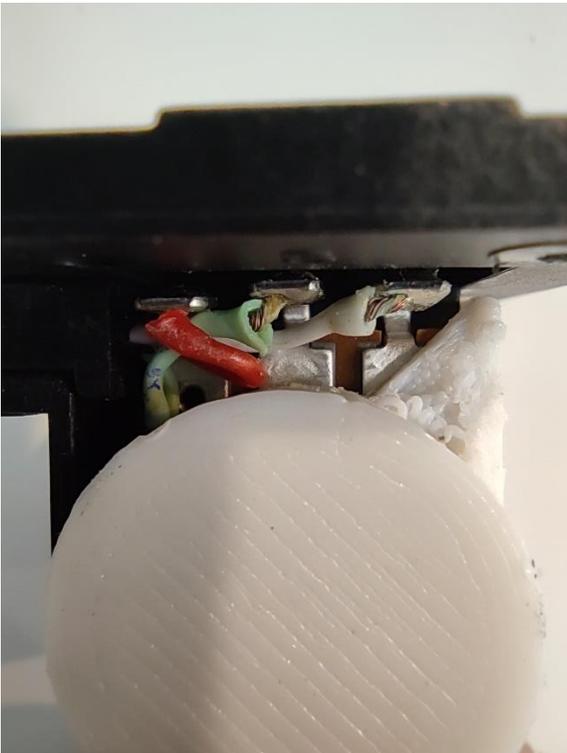

Step 3

Press the 3D printed cover onto the potentiometer.

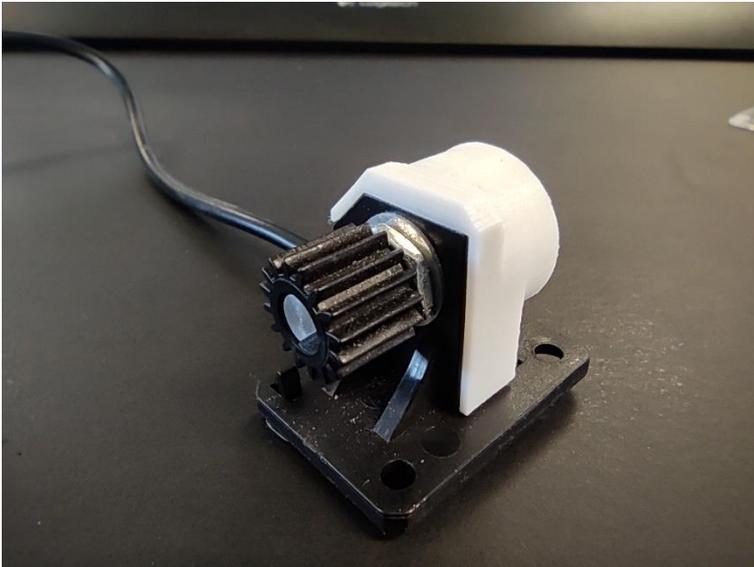**Step 4**

Remount the potentiometer in the pedal, being aware that the gear is oriented in the same way as when unmounted.

It might be necessary to recalibrate the pedal.

**Step 5**

You are ready to go – enjoy!