

# PURPL PRO

INSTANT CANNABIS POTENCY MEASUREMENT



## INSTALLATION GUIDE





1: Charge your Purpl with the cable for at least 10 minutes.

And Download the Purpl pro app in the AppStore or Google Play store

2: Enable the Bluetooth In your settings (if you are an android user enable Bluetooth and location services) Don't try to connect the device in your phone settings. The connection will happen in the Purpl pro app!

3: Open the app and make sure you are REGISTERING and NOT LOG IN! (you do not have an account yet)

The image displays two side-by-side screenshots of the Purpl Scientific app's registration and login interface. Both screens feature the 'PURPL SCIENTIFIC' logo at the top. The left screen is the registration page, showing fields for 'Email' and 'Password' (with a 'Required' label), checkboxes for 'By continuing to use our service, you agree to EULA and Acceptable Use Policy.' and 'Remember me', and a 'Register' button circled in red. A 'LOG IN' button is visible below. The right screen is the login page, showing the same 'Email' and 'Password' fields, but with the 'Log In & Remember me' checkbox checked and the 'Log In' button highlighted in blue. A 'REGISTER' button is also present. Below the screenshots is a blue banner with white text: 'please verify your email by clicking the link sent to your inbox.'



4: Fill out a working email and choose a password and tap 'REGISTER'



5: Verify your email. Even if the app doesn't ask.

If you can not find it, make sure that you check your spam folder!

Some email services have multiple spam folders (Like google). If you hit 'all email' you are sure you will find it.

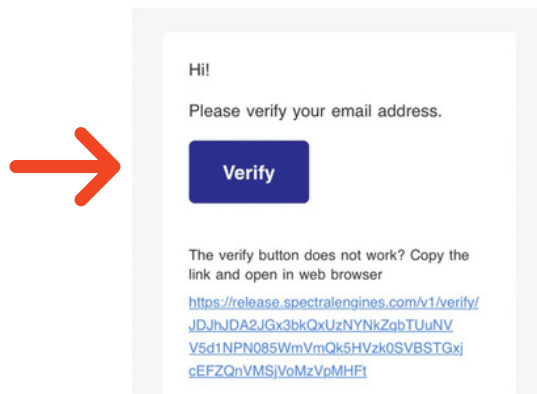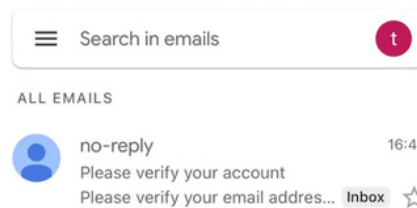


6: Go back into the app, and this time LOGIN (instead of REGISTER)

7: Click the tab my devices in the bottom of your screen.



8: First, click register (1), then click activate (2)

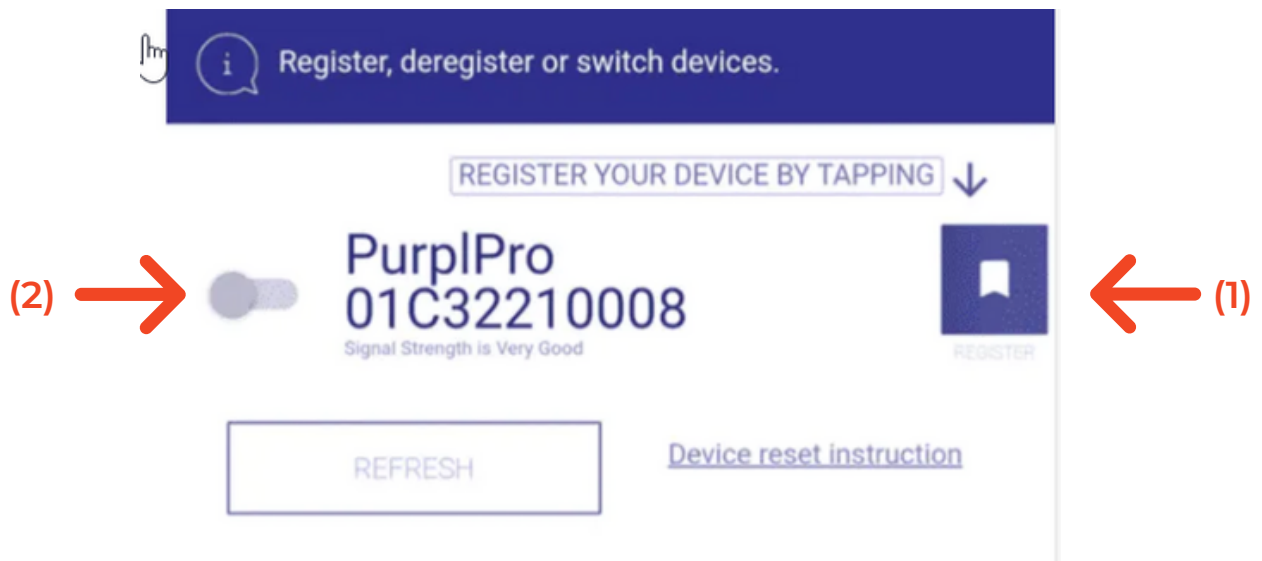

9: Calibration: The app will ask you to calibrate the device the first time using it.

## 10. How to calibrate your PurplPro:

Before calibration make sure your measurement glass window is clean. **Do not touch the white calibration puck!!** This has to stay 100% clean, always cover it after calibration!!

(calibrate every week)



## Calibration steps:

1: Remove the cap from the calibration device

2: Place the white reference puck (up side down) on the glass measurement window of your Purpl PRO

The white needs to be scanned by your Purpl to calibrate

3: Press the "Calibrate Now" button from within the app

4: The app will tell you the calibration was successful :)

5: Make sure you put back the cap on the calibration puck to protect the white surface! And put it back in the case where it belongs

6: Pressing "Let's Go" will take you to the Measurement screen, where you can make your first measurement.





## YOUR FIRST TEST

- 1: place the black cover with hole in the middle on the Purpl PRO, make sure it 'clicks' (this way no light can escape!)
- 2: Fill the grinder with plant material (the amount of 1 bud), place the grinder on the cover, and grind your sample, then let the ground material fall into the hole of the cover
- 3: Make sure the hole is filled to the top!! then compress and cover the sample with the rubber tamper attached to the Sample Holder.
- 4: Tap "Measure Now" in the Purpl PRO App
- 5: Congratulations! You now have your first set of results :)

### DEMO VIDEO



### YOUR RESULTS

17:52:15 02/03/2021

NAME	<u>Pheno 6 banana breathz</u>
TOTAL THC	<b>26%</b>
TOTAL CBD	<b>&lt;2%</b>
MOISTURE	<b>14.0%</b>
WATER ACTIVITY	<b>0.5</b>
NOTE	Gm genetic



## **DELTA 9 ANALYTICS CUSTOMER CARE PACKAGE:**

- 1: Whatsapp service 7 days of the week**
- 2: Call back requests answered within 1 hour**
- 3: Premium warranty: if there is a problem with your device that we can not fix remotely, we can ship you a new device as soon as possible!**



**+31 6 21 30 90 91**



**+31 850 605 458**



**info@delta9analytics.nl**



**@delta9\_analytics**

# PURPL PRO

INSTANT CANNABIS POTENCY MEASUREMENT

