




Install HDD with the screws included.
Then install the piece.



Slide the HDD tray in the 5.25" bay.

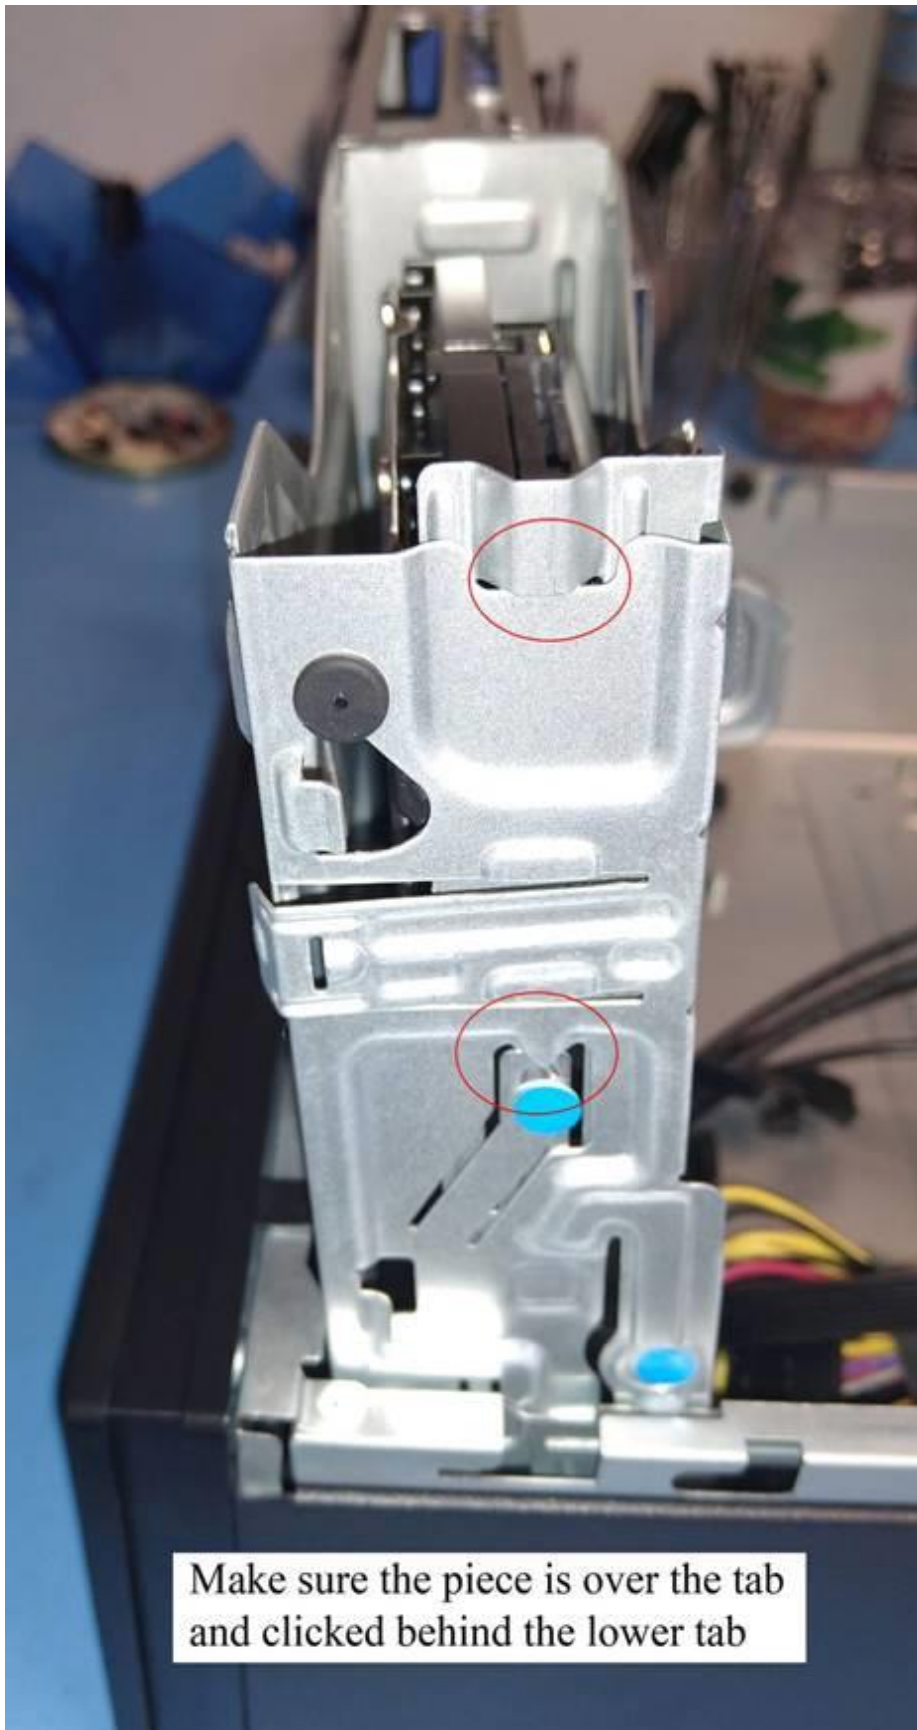

Make sure the piece is over the tab and clicked behind the lower tab