


# **RUT240**






# **HARDWARE**


#### **FRONT VIEW**

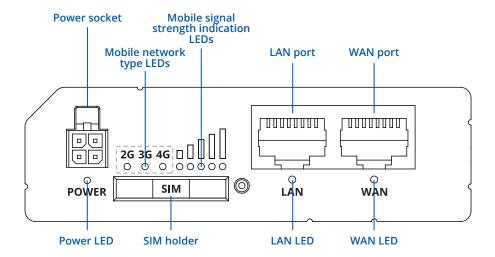

#### **BACK VIEW**

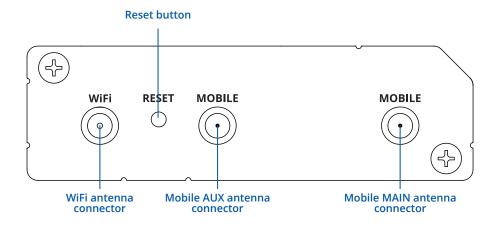

## **POWER SOCKET PINOUT**





# **FEATURES**

Mobile module	4G (LTE) – Cat 4 up to 150 Mbps, 3G – Up to 42 Mbps, 2G – Up to 236.8 kbps
Status	Signal strength (RSSI), SINR, RSRP, RSRQ, EC/IO, RSCP, Bytes sent/received, connected band, IMSI, ICCID
SMS	SMS status, SMS configuration, send/read SMS via HTTP POST/GET, EMAIL to SMS, SMS to EMAIL, SMS to HTTP, SMS to SMS, scheduled SMS, SMS autoreply, SMPP
Black/White list	Operator black/white list
Band management	Band lock, Used band status display
APN	Auto APN
Bridge	Direct connection (bridge) between mobile ISP and device on LAN
Passthrough	Router assigns its mobile WAN IP address to another device on LAN
Multiple PDN (optional)	Possibility to use different PDNs for multiple network access and services (not available in standard FW)
WIRELESS	
Wireless mode	IEEE 802.11b/g/n, Access Point (AP), Station (STA)
WiFi security	WPA2-Enterprise - PEAP, WPA2-PSK, WEP, WPA-EAP, WPA-PSK; AES-CCMP, TKIP, Auto Cipher modes, client separation
SSID	SSID stealth mode and access control based on MAC address
WiFi users	Up to 50 simultaneous connections
Wireless Hotspot	Captive portal (Hotspot), internal/external Radius server, built in customizable landing page
ETHERNET	
WAN	1 x WAN port (can be configured to LAN) 10/100 Mbps, compliance with IEEE 802.3, IEEE 802.3u standards, supports auto MDI/MDIX
LAN	1 x LAN port, 10/100 Mbps, compliance with IEEE 802.3, IEEE 802.3u standards, supports auto MDI/MDIX
NETWORK	
Routing	Static routing, Dynamic routing (BGP, OSPF v2, RIP v1/v2, RIPng, OSPF6)
Network protocols	TCP, UDP, IPv4, IPv6, ICMP, NTP, DNS, HTTP, HTTPS, FTP, SMTP, SSL v3, TLS, ARP, VRRP, PPP, PPPoE, UPnP, SSH, DHCP, Telnet client, SNMP, MQTT, Wake On Lan (WOL)
VoIP passthrough support	H.323 and SIP-alg protocol NAT helpers, allowing proper routing of VoIP packets
Connection monitoring	Ping Reboot, Wget Reboot, Periodic Reboot, LCP and ICMP for link inspection
Firewall	Port forward, traffic rules, custom rules
DHCP	Static and dynamic IP allocation, DHCP Relay, Relayd
QoS / Smart Queue Management (SQM)	Traffic priority queuing by source/destination, service, protocol or port, traffic priority queuing by source/destination, service, protocol or port, WMM, 802.11e
DDNS	Supported >25 service providers, others can be configured manually
Network backup	VRRP, Mobile, Wired and WiFi WAN options, each of which can be used as backup, using automatic Failover
Load balancing	Balance your internet traffic over multiple WAN connections
SSHFS (optional)	Possibility to mount remote file system via SSH protocol (not available in standard FW)
SECURITY	
Authentication	Pre-shared key, digital certificates, X.509 certificates
Firewall	Pre-configured firewall rules can be enabled via WebUI, unlimited firewall configuration via CLI; DMZ; NAT; NAT-T
Attack prevention	DDOS prevention (SYN flood protection, SSH attack prevention, HTTP/HTTPS attack prevention), port scan prevention (SYN-FII SYN-RST, X-mas, NULL flags, FIN scan attacks)
VLAN	Port and tag based VLAN separation
Mobile quota control	Set up custom data limits for the SIM card
WEB filter	Blacklist for blocking out unwanted websites, whitelist for specifying allowed sites only
Access control	Flexible access control of TCP, UDP, ICMP packets, MAC address filter



V	P	N	

OpenVPN	Multiple clients and server can be running simultaneously, 12 encryption methods
OpenVPN Encryption	DES-CBC, RC2-CBC, DES-EDE-CBC, DES-EDE3-CBC, DESX-CBC, BF-CBC, RC2-40-CBC, CAST5-CBC, RC2-64-CBC, AES-128-CBC, AES-192-CBC, AES-256-CBC
IPsec	IKEv1, IKEv2, supports up to 4 x VPN IPsec tunnels (instances), with 5 encryption methods (DES, 3DES, AES128, AES192, AES256)
GRE	GRE tunnel
PPTP, L2TP	Client/Server services can run simultaneously
Stunnel	Proxy designed to add TLS encryption functionality to existing clients and servers without any changes in the programs' code
SSTP	SSTP client instance support
ZeroTier	ZeroTier VPN
WireGuard	WireGuard VPN client and server support

#### MODBUS TCP SLAVE

ID filtering	Respond to one ID in range [1;255] or any
Allow Remote Access	Allow access through WAN
Custom registers	MODBUS TCP custom register block requests, which read/write to a file inside the router, and can be used to extend MODBUS TCP Slave functionality.

#### MODBUS TCP MASTER

Supported functions	01, 02, 03, 04, 05, 06, 15, 16
Supported data formats	8 bit: INT, UINT; 16 bit: INT, UINT (MSB or LSB first); 32 bit: float, INT, UINT (ABCD (big-endian), DCBA (little-endian), CDAB, BADC)

#### **MODBUS DATA TO SERVER**

Protocol	HTTP(S), MQTT, Azure MQTT	
----------	---------------------------	--

## **MQTT GATEWAY**

MQTT gateway Allows sending commands and receiving data from Modbus Master through MQTT broker

## **MONITORING & MANAGEMENT**

WEB UI	HTTP/HTTPS, status, configuration, FW update, CLI ,troubleshoot, event log, system log, kernel log
FOTA	Firmware update from sever, automatic notification
SSH	SSH (v1, v2)
SMS	SMS status, SMS configuration, send/read SMS via HTTP POST/GET
Call	Reboot, Status, WiFi on/off, Mobile data on/off, Output on/off
TR-069	OpenACS, EasyCwmp, ACSLite, tGem, LibreACS, GenieACS, FreeACS, LibCWMP, Friendly tech, AVSystem
MQTT	MQTT Broker, MQTT publisher
SNMP	SNMP (v1, v2, v3), SNMP trap
JSON-RPC	Management API over HTTP/HTTPS
MODBUS	MODBUS TCP status/control
RMS	Teltonika Remote Management System (RMS)

#### **IOT PLATFORMS**

Clouds of things	Allows monitoring of: Device data, Mobile data, Network info, Availability
ThingWorx	Allows monitoring of: WAN Type, WAN IP Mobile Operator Name, Mobile Signal Strength, Mobile Network Type
Cumulocity	Allows monitoring of: Device Model, Revision and Serial Number, Mobile Cell ID, ICCID, IMEI, Connection Type, Operator, Signal Strength, WAN Type and IP
Azure loT Hub	Can send device IP, Number of bytes send/received/ 3G connection state, Network link state, IMEI, ICCID, Model, Manufacturer, Serial, Revision, IMSI, Sim State, PIN state, GSM signal, WCDMA RSCP WCDMA EC/IO, LTE RSRP, LTE SINR, LTE RSRQ, CELL ID, Operator, Operator number, Connection type, Temperature, PIN count to Azure IoT Hub server



#### SYSTEM CHARACTERISTICS

CPU	Atheros Hornet, MIPS 24Kc, 400 MHz
RAM	64 MB, DDR2
FLASH storage	16 MB, SPI Flash

## FIRMWARE / CONFIGURATION

WEB UI	Update FW from file, check FW on server, configuration profiles, configuration backup, restore point
FOTA	Update FW/configuration from server
RMS	Update FW/configuration for multiple devices
Keep settings	Update FW without losing current configuration

#### FIRMWARE CUSTOMIZATION

Operating system	RutOS (OpenWrt based Linux OS)
Supported languages	Busybox shell, Lua, C, C++
Development tools	SDK package with built environment provided

#### INPUT/OUTPUT

Input	1 x Digital input, 0 - 6 V detected as logic low, 8 - 30 V detected as logic high
Output	1 x Digital open collector output, max output 30 V, 300 mA
Events	SMS FMAII RMS

#### **POWER**

Connector	A min industrial DC navyana adat
Connector	4 pin industrial DC power socket
Input voltage range 9 – 30 VDC, reverse polarity protection, surge protection >33 VDC 10us max	
PoE (passive)  Passive PoE over spare pairs (available from HW revision 0007 and batch number 0010). Possibility to power port, not compatible with IEEE802.3af, 802.3at and 802.3bt	
Power consumption	< 6.5 W Max

## PHYSICAL INTERFACES (PORTS, LEDS, ANTENNAS, BUTTONS, SIM)

Ethernet	2 x RJ45 ports, 10/100 Mbps	
I/Os	1 x Digital Input, 1 x Digital Output on 4 pin power connector	
Status LEDs	3 x Connection type status LEDs, 5 x Connection strength LEDs, 2 x LAN status LEDs, 1 x Power LED	
SIM	1 x SIM slot (Mini SIM – 2FF), 1.8 V/3 V, external SIM holder	
Power	1 x 4 pin DC connector	
Antennas	2 x SMA for LTE, 1 x RP-SMA for WiFi antenna connectors	
Reset	Reboot/Factory reset button	

#### PHYSICAL SPECIFICATION

Casing material	Aluminium housing with DIN rail mounting option, plastic panels	
Dimensions (W x H x D)	83 x 25 x 74 mm	
Weight	125 g	
Mounting options	Bottom and sideways DIN rail mounting slots	

#### **OPERATING ENVIRONMENT**

Operating temperature	-40 C to 75 C
Operating humidity	10 % to 90 % non-condensing
Ingress Protection Rating	IP30

## **REGULATORY & TYPE APPROVALS**

Regulatory	CE/RED, FCC, IC/ISED, EAC, RCM, PTCRB, RoHS, WEEE, Wi-Fi Certified, CCC, Anatel, GCF, REACH, Thailand NBTC, Ukraine UCRF, SDPPI (POSTEL)	
Operator	Verizon, AT&T	
Vehicle	ECE R10 (E-mark)	



#### **EMI IMMUNITY**


Standards	Draft EN 301 489-1 V2.2.0, Draft EN 301 489-17 V3.2.0, Draft EN 301 489-52 V1.1.0 FCC 47 CFR Part 15B (2017), ANSI C63.4 (2014)	
ESD	EN61000-4-2:2009	
RS	EN 61000-4-3:2006 + A1:2008 + A2:2010	
EFT	EN 61000-4-4:2012	
Surge immunity (AC Power Line)	EN 61000-4-5:2006	
Surge immunity (Ethernet ports)	EN 61000-4-5:2014, clause 7.1 of ITU-T K21	
CS	EN 61000-4-6:2009	
DIP	EN 61000-4-11:2004	
RF		
Standards	EN 300 328 V2.1.1, EN 301 511 V12.5.1, EN 301 908-1 V11.1.1, EN 301 908-2 V11.1.1, EN 301 908-13 V11.1.1 FCC 47 CFR Part 15C (2017), FCC 47 CFR Part 2 (2017), FCC 47 CFR Part 22H (2017), FCC 47 CFR Part 24E (2017), FCC 47 CF 27C (2017) RSS-Gen Issue 4 (2014), RSS-247 Issue 2 (2017), RSS-132 Issue 3 (2013), RSS-133 Issue 6 (2013), RSS-139 Issue 3, RSS-130 AS/CA S042.1:2018, AS/ACIF S042.3:2005, AS/CA S042.4:2018, AS/NZS 4268:2017	
SAFETY		
Standards	IEC 60950-1:2005 (Second Edition) + Am 1:2009 + Am 2:2013 AS/NZS 60950.1:2015 EN 50665:2017, EN 62311:2008 FCC 47 CFR Part 1 1.1310	

RSS-102 Issue 5 (2015)




# HARDWARE INSTALLATION

- 1. Push the SIM button with the SIM needle.
- 2. Pull out the SIM holder.
- 3. Insert your SIM card into the SIM holder.
- 4. Slide the SIM holder back into the router.
- 5. Attach Mobile and WiFi antennas.
- 6. Connect the power adapter to the socket on the front of the device. Then plug the other end of the power adapter into a power outlet.
- 7. Connect to the device wirelessly using SSID and password provided on the device information label or use an Ethernet cable connected to LAN port.

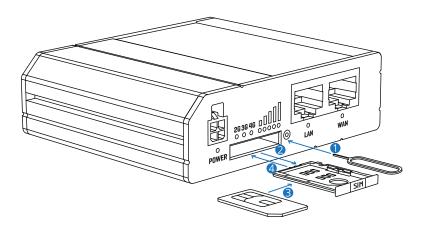

#### **LOGIN TO DEVICE**

- 1. To enter the router's Web interface (WebUI), type http://192.168.1.1 into the URL field of your Internet browser.
- 2. Use login information shown in image A when prompted for authentication.
- 3. After you log in, you will be prompted to change your password for security reasons. The new password must contain at least 8 characters, including at least one uppercase letter, one lowercase letter, and one digit. This step is mandatory, and you will not be able to interact with the router's WebUI before you change the password.
- 4. When you change the router's password, the Configuration Wizard will start. The Configuration Wizard is a tool used to set up some of the router's main operating parameters.
- 5. Go to the Overview page and pay attention to the Signal Strength indication (image B). To maximize the cellular performance try adjusting the antennas or changing the location of your device to achieve the best signal conditions.

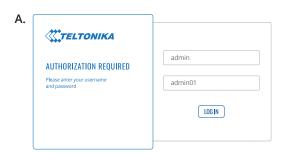



#### **TECHNICAL INFORMATION**

	Radio specifications
RF technologies	2G, 3G, 4G, WiFi
Max RF power	33 dBm@GSM, 24 dBm@WCDMA, 23 dBm@LTE, 20 dBm@ WiFi
Bundled accessories specifications*	
Power adapter	Input: 0.4A@100-240VAC, Output: 9VDC, 1A, 4-pin plug
Mobile antenna	698~960/1710~2690 MHz, 50 Ω, VSWR<3, gain** 3 dBi, omnidirectional, SMA male connector
WiFi antenna	2400~2483.5 MHz, 50 Ω, VSWR<2, gain** 5 dBi, omnidirectional, RP-SMA male connector

<sup>\*</sup>Order code dependent

<sup>\*\*</sup>Higher gain antenna can be connected to compensate for cable attenuation when a cable is used. The user is responsible for the compliance with the legal regulations.




# WHAT'S IN THE BOX?

## STANDARD PACKAGE CONTAINS\*

- Router RUT240
- 9 W PSU
- 2 x LTE antennas (swivel, SMA male)
- 1 x WiFi antenna (swivel, RP-SMA male)
- Ethernet cable (1.5 m)
- SIM Adapter kit
- QSG (Quick Start Guide)
- RMS Flyer
- Packaging box



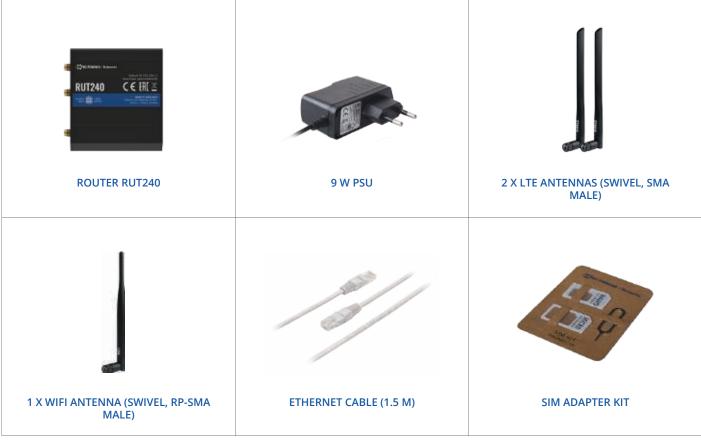

 $<sup>\</sup>mbox{\ensuremath{\star}}$  For all standard order codes standard package contents are the same, execpt for PSU.



# **STANDARD ORDER CODES**

PRODUCT CODE	HS CODE	HTS CODE	PACKAGE CONTAINS
RUT240 06E000	851762	8517.62.00	Standard package with Euro PSU
RUT240 01U000	851762	8517.62.00	Standard package with US PSU
RUT240 02U000	851762	8517.62.00	Standard package with US PSU

For more information on all available packaging options – please contact us directly.

# **AVAILABLE VERSIONS**

PRODUCT CODE	REGION (OPERATOR)	FREQUENCY
RUT240 *8****	Europe, the Middle East, Africa,	<ul> <li>4G (LTE-FDD): B1, B3, B7, B8, B20, B28A</li> <li>4G (LTE-TDD): B38, B40, B41</li> </ul>
KU1240 ********	Korea, Thailand, India, Malaysia	• 3G: B1, B8 • 2G: B3, B8
RUT240 *6****	Europe, the Middle East, Africa,	• 4G (LTE-FDD): B1, B3, B7, B8, B20, B28A
KU1240 *6*****	Korea, Thailand, Malaysia	• 3G: B1, B8 • 2G: B3, B8
		• 4G (LTE-FDD): B1, B3, B5, B7, B8, B20
RUT240 *0****	Europe, the Middle East, Africa, Korea, Thailand, India, Malaysia	• 4G (LTE-TDD): B38, B40, B41
	Norca, Mahana, Mala, Malaysia	● 3G: B1, B5, B8 ● 2G: B3, B8
RUT240 *1****	North America (AT&T, Bell, T-Mobile) <sup>1</sup>	• 4G (LTE-FDD): B2, B4, B12
K01240 " """	North America (AT&T, Bell, 1-Wobile)	• 3G: B2, B4, B5
RUT240 *2****	North America (Verizon)	• 4G (LTE-FDD): B4, B13
		• 4G (LTE-FDD): B1, B2, B3, B4, B5, B7, B8, B28
RUT240 *4****	South America, Australia, New Zealand, Taiwan	• 4G (LTE-TDD): B40
	Zealanu, Talwan	<ul><li>3G: B1, B2, B5, B8</li><li>2G: B2, B3, B5, B8</li></ul>
RUT240 *5****	Japan	<ul><li>4G (LTE-FDD): B1, B3, B8, B18, B19, B26</li><li>4G (LTE-TDD): B41</li></ul>
		• 3G: B1, B6, B8, B19
		• 4G (LTE-FDD): B1, B2, B3, B4, B5, B7, B8, B12, B13, B18, B19, B20, B25, B26, B28
RUT240 *7****	Global	• 4G (LTE-TDD): B38, B39, B40, B41
		• 3G: B1, B2, B4, B5, B6, B8, B19
		• 2G: B2, B3, B5, B8
		• 4G (LTE-FDD): B1, B3, B5, B7, B8, B20
RUT240 *0*00G	Europe, the Middle East, Africa, Korea, Thailand, India (Vodafone)	• 4G (LTE-TDD): B38, B40, B41
	korea, Thalland, India (Vodatone)	• 3G: B1, B5, B8
		• 2G: B3, B8

The price and lead-times for region (operator) specific versions may vary. For more information please contact us.

1 - Router is not certified on T-Mobile, Bell network (In progress).



# **MOUNTING OPTIONS**

# **DIN RAIL KIT**

Parameter	Value
Mounting standard	35mm DIN Rail
Material	Low carbon steel
Weight	57g
Screws included	Philips Pan Head screw #6-32×3/16, 2pcs
Dimensions	82 mm x 46 mm x 20 mm
RoHS Compliant	V

#### **DIN RAIL KIT**

- DIN Rail adapter
- Philips Pan Head screw #6-32×3/16, 2pcs for RUT2xx/RUT9xx



ORDER CODE	HS CODE	HTS CODE
PR5MEC00	73269098	7326.90.98

For more information on all available packaging options – please contact us directly.

# **COMPACT DIN RAIL KIT**

Parameter	Value
Mounting standard	35mm DIN Rail
Material	ABS + PC plastic
Weight	6.5 g
Screws included	Philips Pan Head screw #6-32×3/16, 2pcs
Dimensions	70 mm x 25 mm x 14,5 mm
RoHS Compliant	V

#### **DIN RAIL KIT**

- Compact plastic DIN Rail adapter (70x25x14,5mm)
- Philips Pan Head screw #6-32×3/16, 2pcs

ORDER CODE	HS CODE	HTS CODE
PR5MEC11	73269098	7326.90.98

For more information on all available packaging options - please contact us directly.

# **SURFACE MOUNTING KIT**

Parameter	Value	
Mounting standard	Flat surface mount	
Material	ABS + PC plastic	
Weight	2x5 g	
Screws included	Philips Pan Head screw #6-32×3/16, 2pcs	
Dimensions	25 mm x 48 mm x 7.5 mm	
RoHS Compliant	V	

#### **DIN RAIL KIT**

- Surface mounting kit
- Philips Pan Head screw #6-32×3/16, 2pcs

ORDER CODE	HS CODE	HTS CODE
PR5MEC12	73269098	7326.90.98

For more information on all available packaging options – please contact us directly.





# **RUT240 SPATIAL MEASUREMENTS & WEIGHT**


#### **MAIN MEASUREMENTS**

W x H x D dimensions for RUT240:

Device housing\*: 83 x 25 x 74 Box: 173 x 71 x 148


#### **TOP VIEW**

The figure below depicts the measurements of RUT240 and its components as seen from the top:

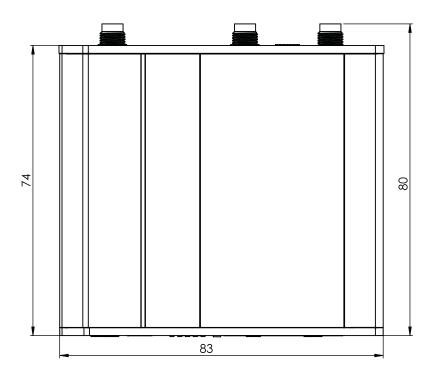

### **RIGHT VIEW**

The figure below depicts the measurements of RUT240 and its components as seen from the right side:  $\frac{1}{2} \left( \frac{1}{2} \right) = \frac{1}{2} \left( \frac{1}{2} \right) \left( \frac{1}$ 

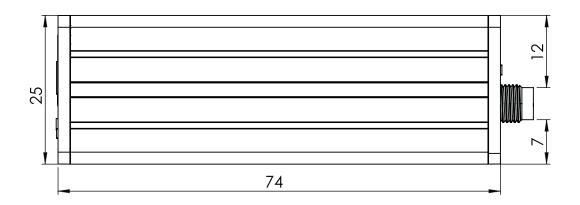


<sup>\*</sup>Housing measurements are presented without antenna connectors and screws; for measurements of other device elements look to the sections below.




#### **FRONT VIEW**

The figure below depicts the measurements of RUT240 and its components as seen from the front panel side:

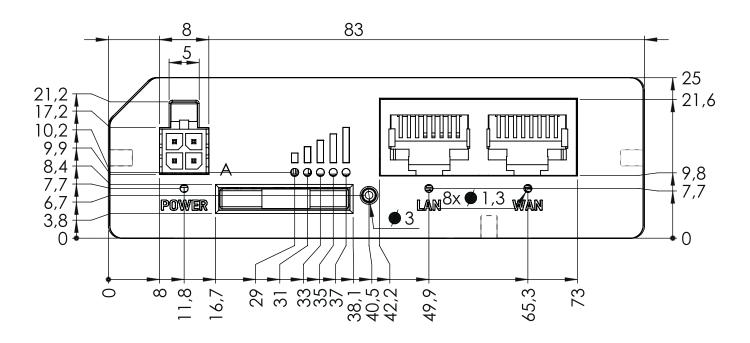

#### **REAR VIEW**


The figure below depicts the measurements of RUT240 and its components as seen from the back panel side:

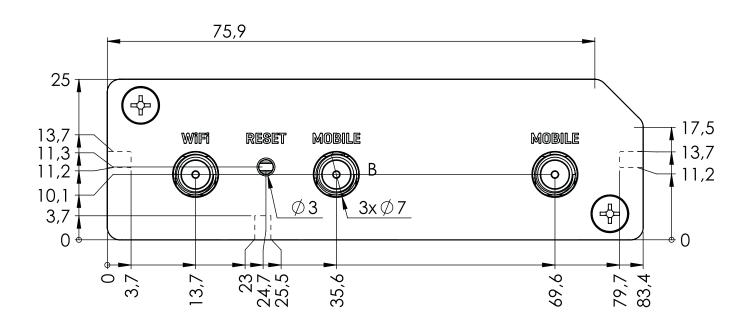



## MOUNTING SPACE REQUIREMENTS

 $The figure \ below \ depicts \ an \ approximation \ of the \ device's \ dimensions \ when \ cables \ and \ antennas \ are \ attached:$ 

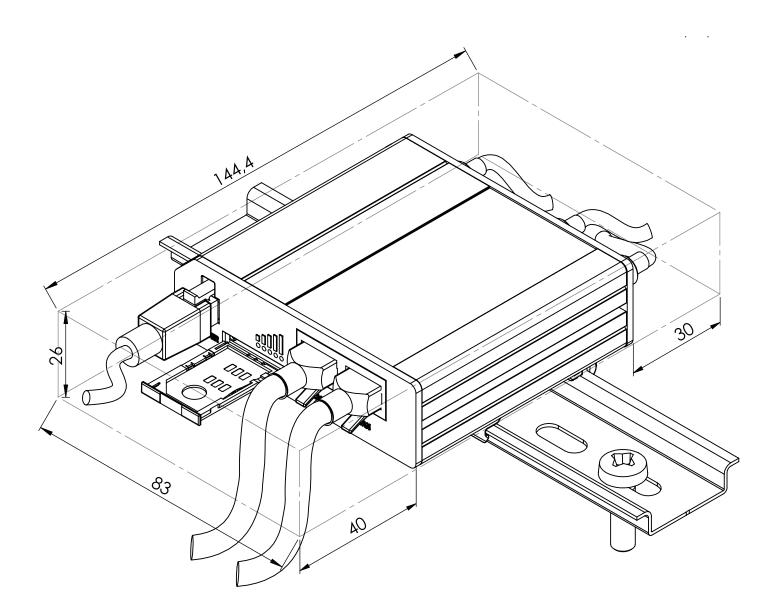



## DIN RAIL

The scheme below depicts protrusion measurements of an attached DIN Rail:

