SERUMONY Floor Stand
Assembling instructions

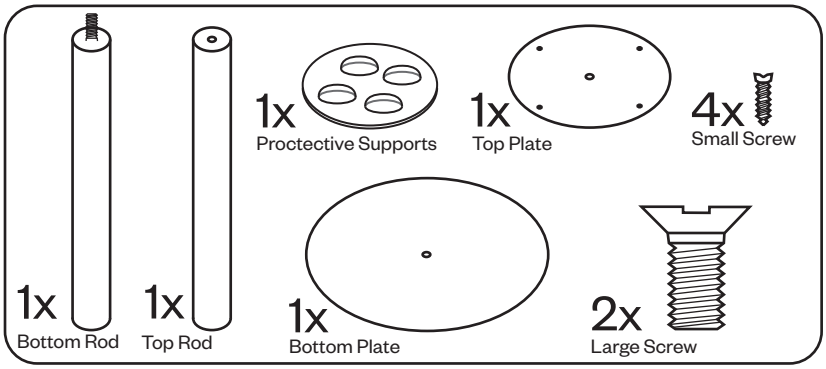

1.

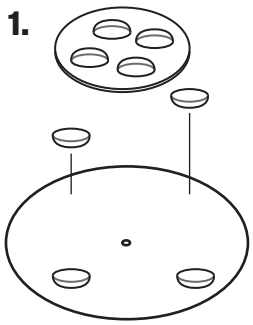

1. Mount the protective supports on the bottom side of the bottom plate.

2.

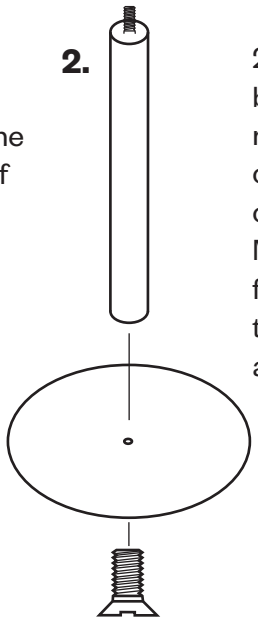

2. Connect the bottom part of the rod to the bottom of the plate by use of 1 large screw. Make sure to fasten the screw tightly by use of an allen key.

3.

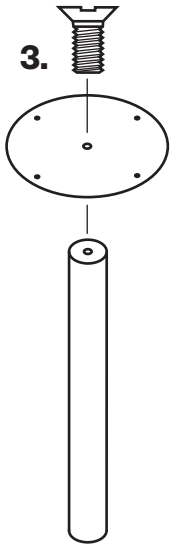

3. Connect the top part of the rod to the top of the plate by use of 1 large screw. Make sure to fasten the screw tightly by use of an allen key.

4.

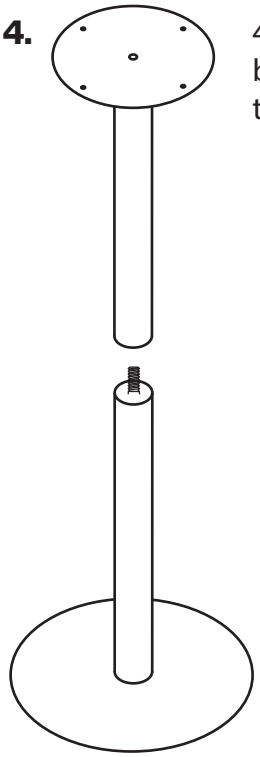

4. Screw the top and bottom part together tightly by hand.

5.

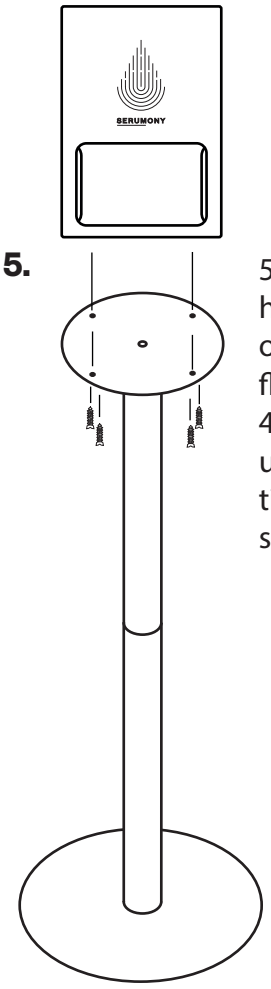

5. Mount the SERUMONY hand sanitizer dispenser on the top plate of the floor stand by use of the 4 small screws. DO NOT use excessive force when tightening the small screws.

Serumony ApS | Kristiansvej 13 | DK-8660 Skanderborg, Denmark | +45 7210 0061 | info@serumony.com | www.serumony.com