



# VX700/5i

700W 5-Channel Class D System Amplifier with Integrated DSP



with NexD<sup>2</sup> SWITCHING TECHNOLOGY

Thank you for purchasing a JL Audio amplifier for your sound system.

Your amplifier has been designed and manufactured to exacting standards in order to ensure years of musical enjoyment. For maximum performance, we highly recommend that you have your new amplifier installed by an authorized JL Audio dealer. Your authorized dealer has the training, expertise and installation equipment to ensure optimum performance from this product. Should you decide to install the amplifier yourself, please take the time to read this manual thoroughly to familiarize yourself with its installation requirements and setup procedures.

If you have any questions regarding the instructions in this manual or any aspect of your amplifier's operation, please contact your authorized JL Audio dealer for assistance. If you need further assistance, please contact the JL Audio Technical Support Department at technical@jlaudio.com or call (954) 443-1100 during business hours.

### Installation Applications

This amplifier is designed for operation with 12 volt, negative-ground electrical systems. Using this product in systems with positive ground and/or voltages other than 12V may result in damage to the product and will void the warranty. This product is not certified or approved for use in aircraft.

### Product Description

This is a five-channel, Class D system amplifier equipped with the second generation of JL Audio's NexD<sup>2</sup>™ high-speed switching technology. It is engineered to deliver reference-grade audio amplification with outstanding efficiency and unprecedented, built-in processing power. Instead of traditional analog processing controlled by knobs and switches, VXi amplifiers feature an integrated DSP (Digital Signal Processor). The amplifier and its integrated DSP are configured using an external device (PC, Tablet or Phone), with the appropriate JL Audio TüN™ application installed. (See **What is TüN?** section for more info.)

### Planning Your Installation

It is important that you take the time to read this manual thoroughly and that you plan your installation carefully. It is very easy to damage expensive vehicle systems in modern automobiles. Never assume that you have found appropriate wires without consulting a reliable wiring diagram or without analyzing with proper test equipment. If you are uncomfortable or unfamiliar with reading diagrams or testing methods, please enlist the services of your authorized JL Audio dealer to perform the installation. Your authorized dealer has the training, expertise and installation equipment to ensure optimum performance from this product. The following are some considerations that you must take into account when planning your installation.

### Safety Considerations

- Install your amplifier in a dry, well-ventilated location that does not interfere with your vehicle's safety equipment (air bags, seat belt systems, ABS brake systems, etc.).
- Do not mount the amplifier in the engine compartment or in any areas of extreme heat.
- Securely mount the amplifier so that it does not come loose in the event of a collision/sudden jolt or as a result of repeated vibrations during normal operation.
- Check before drilling to make sure that you will not be drilling into a fuel tank, gas/brake line, wiring harness, or other vital system.
- Do not run system wiring outside or underneath the vehicle/vessel. This is an extremely dangerous practice, which can result in severe damage/injury.
- Take the necessary precautions when making connections to the vehicle's battery.
- Protect all system wires from sharp edges by carefully routing them, tying them down and using grommets and loom where appropriate.
- Secure all wiring as needed, using cable ties or wire clamps to protect them from moving parts and sharp edges.

### Cooling Efficiency Considerations

The outer shell of your JL Audio amplifier is designed to remove heat from the amplifier circuitry. For optimum cooling performance, this outer shell should be exposed to as large a volume of air as possible. Enclosing the amplifier in a small, poorly ventilated chamber can lead to excessive heat build-up and degraded performance. If an installation calls for an enclosure around the amplifier, we recommend that this enclosure be ventilated with the aid of a fan. In normal applications, fan-cooling is not necessary. If mounting the amplifier under a seat, make sure there is at least 1 inch (2.5 cm) of space above the amplifier's outer shell to permit proper cooling.

### What is Included

- |                                  |                              |
|----------------------------------|------------------------------|
| (1) Amplifier                    | (1) Power Connector          |
| (1) Analog Input/Pre-Out Harness | (1) Speaker Output Harness   |
| (1) JL Audio Badge               | (1) Subwoofer Output Harness |
| (1) USB A/B Cable (6 ft./1.8 m)  | (4) Corner Caps              |
| (2) Black Hex Cap Machine Screws | (1) Corner Cap Tool          |
| (2) Silver Thumbscrews           | (1) 2.5 mm Hex Wrench        |
| (1) Connection Guide             | (1) 3 mm Hex Wrench          |

### JL Audio Badge

To complement the amplifier's mounting orientation, the logo badge includes a recessed key feature allowing it to be affixed at 90 degree increments on the amplifier's top. To install, remove the adhesive backing and press the badge at the desired orientation.

### Corner Cap Installation and Removal

The corner caps are designed to conceal the amplifier's mounting holes and hardware. To install, simply press a corner cap into each mounting hole. To avoid scratching the amplifier's chassis during removal, use the included, plastic corner cap tool and lift below each cap.

### Making Connections

VXi amplifiers utilize removable plugs and harnesses to make the following connections:

#### • Power Connector

To connect the power, ground and remote turn-on wires to the amplifier, back out the set screws on the connector using the supplied hex wrenches. Strip back 3/8 inch (10 mm) of insulation from the end of each wire and insert the bare wire into the receptacle on the power connector plug, seating it firmly so that no bare wire is exposed. While holding each wire in place, tighten each set screw firmly, taking care not to strip the head of the screw. Install the power connector by plugging it into the amplifier's power connector receptacle, pushing firmly.

#### • Analog Input/Pre-Out Harness

This harness includes connections for Signal Input (RCA plugs), Preamp Outputs (RCA plugs), Remote Turn-On Output (wire lead) and Valet Input (wire lead). Select either the included black hex cap machine screws or the silver thumbscrews to secure the Analog Input Harness connector to the amplifier.

#### • Speaker and Subwoofer Output Harnesses


These harnesses have output wire leads to connect with speaker cables.

### Turn-On Mode

VXi amplifiers can be switched on and off using one of three methods, configured by the "Turn On Mode" setting in the TüN™ Software Interface. Refer to the table below for detailed info and decide which option is best suited for your specific system.

Setting	Mode	Function	Connection
Remote	Conventional (Preferred)	Turn-on/off controlled by your source unit.	Connect your source unit's +12V remote turn-on output to the Power Connector's Remote Turn-On Input connection.
DC Offset	DC Offset Sensing (Auto)	Automatically turns on by detecting the presence of small DC signal in OEM audio outputs and turns off (within 5 minutes) after the signal is removed.	This circuit senses the Analog Input 1 only. Note: The sensitivity of this circuit is designed for high-level (speaker level) signals, not for low-level (preamp level) signals. Make sure the OEM audio outputs contain midrange signals.
Signal	Signal Sensing (Auto)	Automatically turns on by detecting full-range OEM audio signals and turns off (within 5 minutes) after the signal is removed (varies, depending on input signal levels).	

## CONNECTION GUIDE

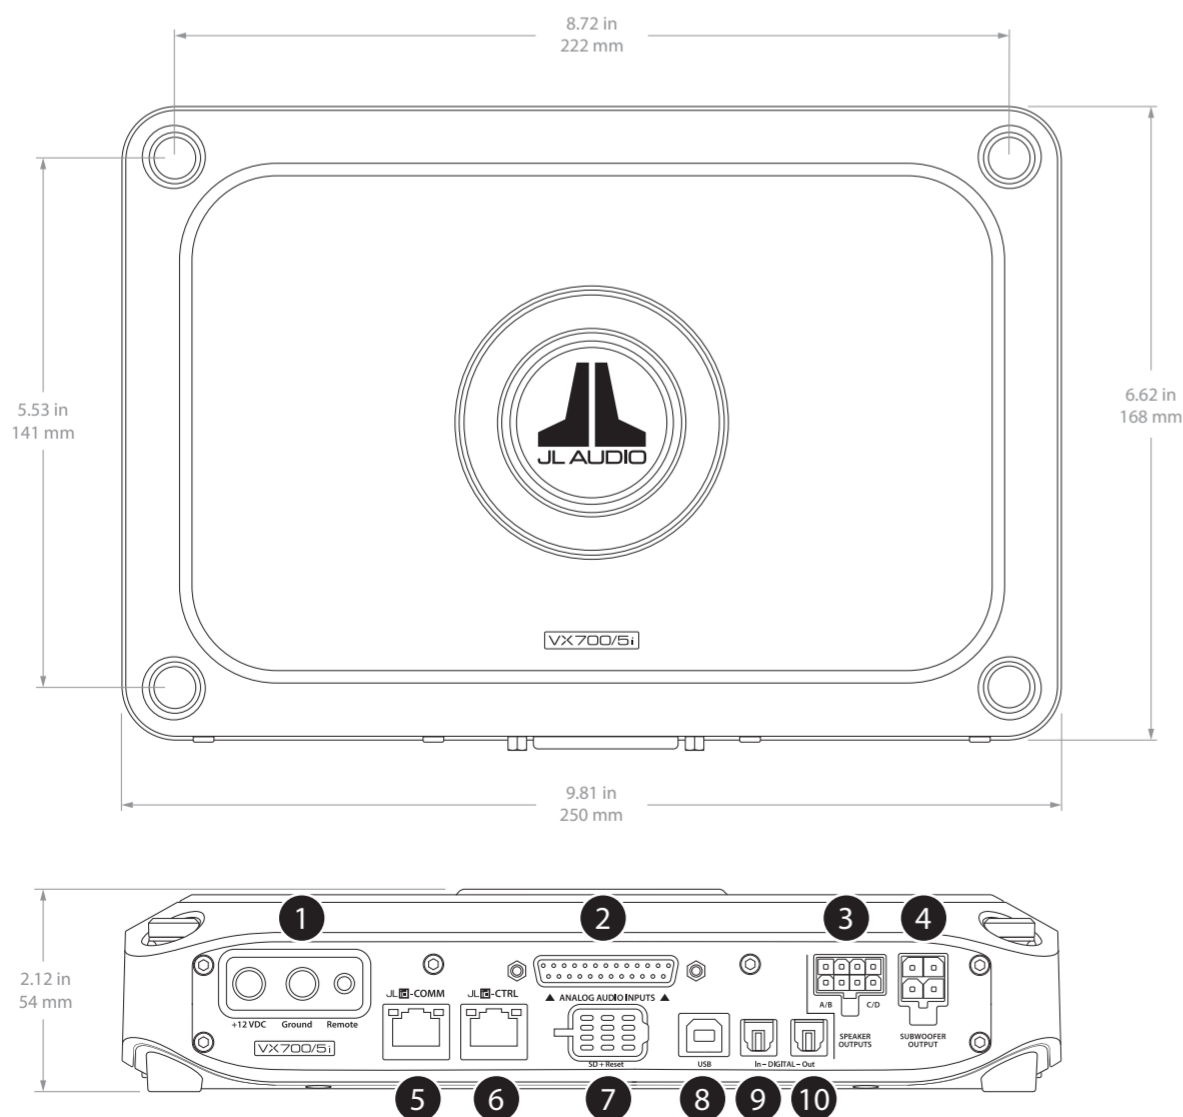

### 1 Power Connector

The VX700/5i's "+12 VDC" and "Ground" connections are designed to accept 4 AWG copper wire. Note: Copper Clad Aluminum (CCA) wire is not recommended. **4 AWG is the required copper wire size for this amplifier.**

- Run copper wire from the positive (+12V) battery post to the amplifier mounting location. If additional amplifiers are being installed, run the appropriate gauge copper wire for the combined, maximum current draw, and install a fused distribution block near the amplifiers.
- An appropriate fuse (sold separately) at the main power wire(s) is vital for vehicle safety. This fuse must be installed within 18 inches (45 cm) of the battery post connection. If this is the only device connected to this main wire, use a 60 A fuse. Do not install the fuse until the power wire has been securely connected to the amplifier.
- The ground connection should be made to a clean, solid metal grounding point using copper wire, and kept as short as possible. The metal surface of the grounding point should be sanded to create a clean, metal-to-metal connection. For optimal grounding, we recommend using a JL Audio ECS master ground lug (XB-MGLU). **All ground connections (source unit and amplifiers) should be made at the same location.**
- The remote connection should be made to the source unit's positive (+12V) remote turn-on output. If your source unit does not have a dedicated remote turn-on output, consider one of the alternative turn-on options. (See **Turn-On Mode** section for more info.)

### 2 Analog Input/Pre-Out Harness

The Analog Input Harness accepts the following connections:

**Line-Level Analog Inputs:** Six female RCA jacks feed a differential-balanced input section, providing a high degree of input flexibility, and retaining superior noise rejection. This type of input architecture also allows the VX700/5i to cleanly accept any analog audio signals up to 16 VRMS, without using a line-output converter.

**Preamp Outputs:** Two female, RCA jacks deliver line-level, analog audio outputs (Max 4 V RMS) that are compatible with most types of aftermarket equipment. These are configured with the TüN™ Software Interface.

**Remote:** This connection provides a positive (+12V) turn-on voltage (475 mA limit) to activate other aftermarket equipment (similar to an aftermarket head unit's remote turn-on lead).

**Valet:** When connected to negative ground, this connection activates the Valet Mode Preset and will remain active until the ground connection is removed. This preset is configured using the TüN™ Software Interface and will override any DRC controlled preset.

### 3 Speaker Output Harness

Connect the speaker output leads to the corresponding speaker wires.

### 4 Subwoofer Output Harness

Connect the subwoofer output leads to the corresponding speaker wires. **Note: Two pairs of wire leads are included to facilitate multiple subwoofer wiring. Both positive and both negative wire leads are connected in parallel inside the harness.**

### 5 JLiD-COMM

Connect optional accessories (VXi-BTC, VXi-HUB, etc.) to this port.

### 6 JLiD-CTRL

Connect optional DRC (Digital Remote Controller) wired controllers to this port.

### 7 SD + Reset

Lift the dust cover to access the following utility functions:

- Reset Buttons:** Use a small pin to perform the following:
  - Reboot Amp** - Press and release the right button.
  - Factory Reset (wipe memory, reboot amp)** - Press and hold the left button for 7 seconds.
- Micro SD Slot:** For service/future expansion.

### 8 USB

This USB A/B port permits connection to a computer for configuration and tuning, using the TüN™ Software.


### 9 DIGITAL-In

Toslink port accepts 2-channel digital audio signal from any optical (S/PDIF) digital output, with a sample rate up to 192 kHz.


### 10 DIGITAL-Out

Provides a digital audio output (24 bit/96 kHz) that is not susceptible to RF interference or noise-generating electrical conditions. By default, this is a pass-through audio output, with no signal processing applied, and intended for use with other equipment that have an optical (Toslink) digital audio input (S/PDIF) port. Using the TüN™ Software Interface, you may configure this output's routing, equalization, output level and DRC control functionality.

Wiring Diagram - VX700/5i

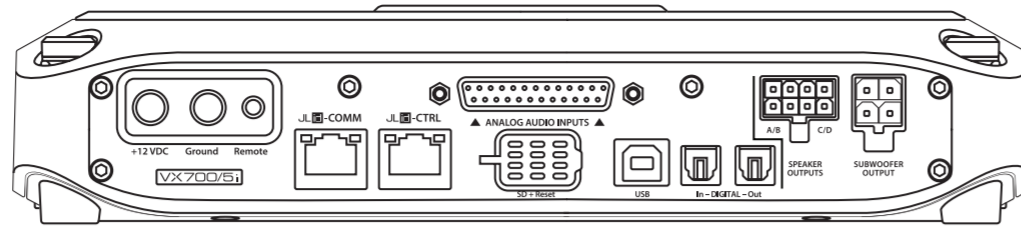

- +12 VDC** - Positive (+12V) Battery Connection
- Ground** - Negative (-) Ground Connection
- Remote** - Positive (+12V) Turn-On Input From Source Unit
- JLid-COMM** - Optional Network Hub or Bluetooth® Communicator Connection (Sold Separately)
- JLid-CTRL** - Optional Digital Remote Controller (DRC) Connection (Sold Separately)

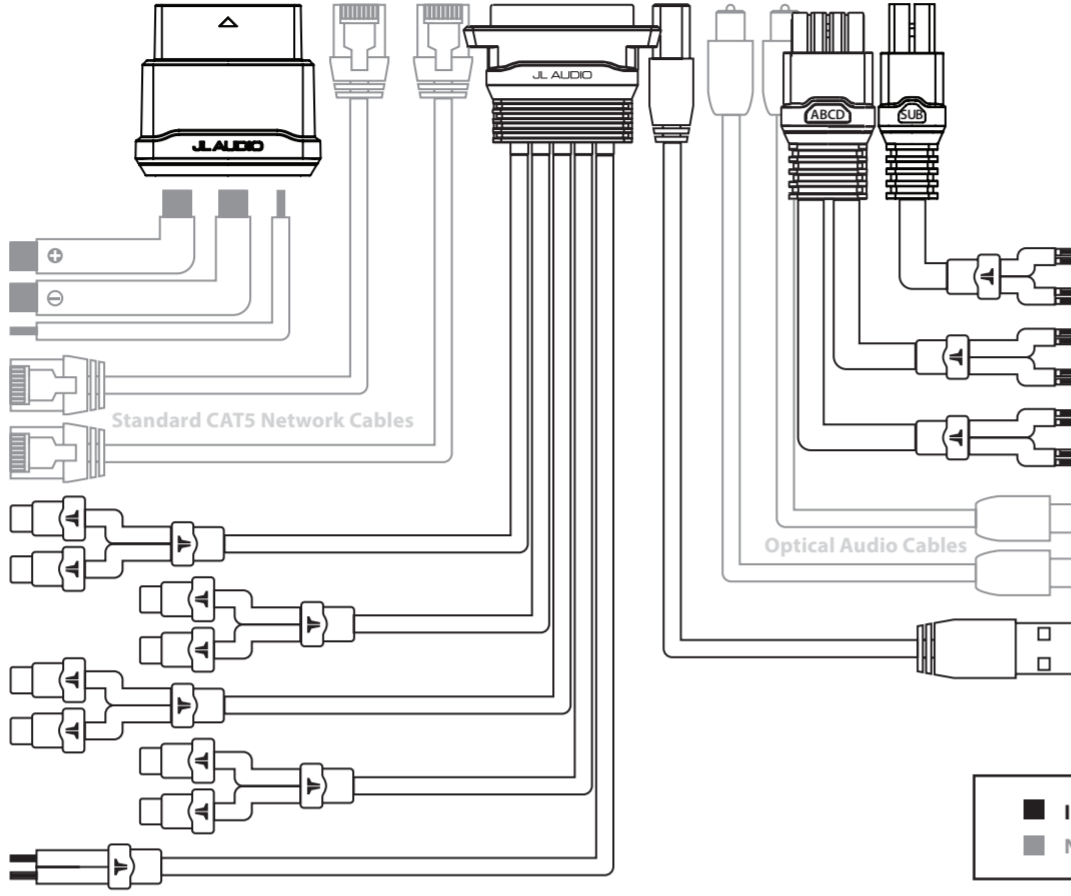

- SUB** - To Subwoofer(s): (+ and -)
- D** - To Speaker(s): (+ and -)
- C** - To Speaker(s): (+ and -)
- B** - To Speaker(s): (+ and -)
- A** - To Speaker(s): (+ and -)
- DIGITAL-Out** - To Optical Digital (S/PDIF) Input on Next Device
- DIGITAL-In** - From Optical Digital (S/PDIF) Source
- USB A/B Cable** - To Computer with TüN™ software installed

ANALOG INPUTS / PRE-OUTS

- Input 6** - Ch. 6 Input
- Input 5** - Ch. 5 Input
- Input 4** - Ch. 4 Input
- Input 3** - Ch. 3 Input
- Input 2** - Ch. 2 Input
- Input 1** - Ch. 1 Input
- Pre-Out Right** - Analog Preamp Output
- Pre-Out Left** - Analog Preamp Output
- Remote** - Turn-On Output (+12V)
- Valet** - Valet Preset Toggle (-)

**Included**  
 **Not Included**

**LED Status/Condition Reporting**

LEDs located on the chassis top and connection panel are used to communicate amplifier status and condition. Refer to the table below for the location and meaning for each behavior.

LED / Location	Behavior	Status/Condition
LED Ring / Amplifier Top	Flashing Blue	Critical Voltage
	Flashing Red	Critical Temperature
	Flashing Yellow	Excessive Current
Upper Left LED / JLid-COMM Port and JLid-CTRL Port	Green	Detecting JLid™ Device
	Blue	JLid™ Connection Success
	Yellow	Invalid JLid™ Device
	Flashing Red	Excessive Current
Upper Right LED / JLid-COMM Port	Flashing Red	Critical Voltage/Temperature
		Excessive Remote Output Current
Upper Right LED / JLid-CTRL Port	Green	Active TüN™ Connection

**Connections**

Power Connector		
Connection	Wire Capacity	Description
+12VDC (+)	4 AWG	Positive (+12V) Power Connection to Battery
Ground (-)	4 AWG	Negative (GND) Chassis Ground Connection
Remote	18 to 10 AWG	Positive (+12V) Remote Turn-On Input from Source Unit
Analog Input Harness		
Label	Plug/Wire Color	Description
Input 1	White RCA	Channel 1 Signal Input
Input 2	Red RCA	Channel 2 Signal Input
Input 3	White RCA	Channel 3 Signal Input
Input 4	Red RCA	Channel 4 Signal Input
Input 5	White RCA	Channel 5 Signal Input
Input 6	Red RCA	Channel 6 Signal Input
Pre-Out Left	White RCA	Preamp Signal Output 1
Pre-Out Right	Red RCA	Preamp Signal Output 2
Remote	Blue	Positive (+12V) Turn-On Output (475 mA limit)
Valet	Green	Negative (GND) Ground Input (activates the Valet Mode Preset)
Speaker Output Harness		
Label	Wire Color	Description
A	White	(+) Positive Speaker Output
	White/Black	(-) Negative Speaker Output
B	Gray	(+) Positive Speaker Output
	Gray/Black	(-) Negative Speaker Output
C	Green	(+) Positive Speaker Output
	Green/Black	(-) Negative Speaker Output
D	Purple	(+) Positive Speaker Output
	Purple/Black	(-) Negative Speaker Output
Subwoofer Output Harness		
Label	Wire Color	Description
SUB	Brown	(+) Positive Subwoofer Output
	Brown/White	(-) Negative Subwoofer Output
SUB	Brown	(+) Positive Subwoofer Output
	Brown/White	(-) Negative Subwoofer Output
Data Connections		
Label	Type	Description/Use
JLid-COMM	RJ45 Jack	Optional accessory connections (VXI-BTC, VXI-HUB, etc)
JLid-CTRL	RJ45 Jack	Optional DRC (Digital Remote Controller) connection
USB	USB A/B Port	Computer connection to configure TüN™ Software Interface
DIGITAL-In	S/PDIF Port	2-channel, optical (Toslink) digital input
DIGITAL-Out	S/PDIF Port	2-channel, optical (Toslink) digital output
SD + Reset	Reset Buttons	Multifunction use (Reboot/Reset/Device Firmware Update mode)
	Micro SD Slot	Used for future expansion

**Specifications**

Amplifier Specifications			
Amplifier Topology	2nd-Gen NexD™ High Speed Class D		
Power Supply Type	Unregulated MOSFET Switching		
Operating Voltage	10 - 15V DC		
Min. Copper Power/GND Wire	4 AWG		
Recommended Fuse	60 A		
Standby Current Draw	2.5 mA		
Input Voltage Range	200 mV - 16 V RMS		
Rated RMS Power @ 14.4V, <1% THD+N	Main @ 4 Ω 75W x 4	Main @ 2 Ω 100W x 4	Main @ 4 Ω Bridged 200W x 2
	Sub @ 4 Ω 180W x 1	Sub @ 3 Ω 240W x 1	Sub @ 2 Ω 300W x 1
Rated RMS Power @ 12.5V, <1% THD+N	Main @ 4 Ω 60W x 4	Main @ 2 Ω 90W x 4	Main @ 4 Ω Bridged 180W x 2
	Sub @ 4 Ω 180W x 1	Sub @ 3 Ω 240W x 1	Sub @ 2 Ω 300W x 1
Frequency Response	Main: 12 Hz - 24 kHz (+0, -1dB) Sub: 12 Hz - 1 kHz (+0, -1dB)		
Analog Inputs	S/N Ratio (A-weighted, 20 kHz noise bandwidth)	Main: 99 dB (Referred to rated power), 80 dB (Referred to 1 W)	
		Sub: 99 dB (Referred to rated power), 72 dB (Referred to 1 W)	
Digital Input	S/N Ratio (A-weighted, 20 kHz noise bandwidth)	Main: 101 dB (Referred to rated power), 82 dB (Referred to 1 W)	
		Sub: 102 dB (Referred to rated power), 80 dB (Referred to 1 W)	
Damping Factor	Main: >100 / 50 Hz @ 4 Ω, >50 / 50 Hz @ 2 Ω Sub: >100 / 50 Hz @ 4 Ω, >50 / 50 Hz @ 2 Ω		
DSP Specifications			
Processor	AKM AK7738, processing at 24 bit/96 kHz		
Analog Inputs	Type	Line-Level, Differential-Balanced	
	Number of Channels	6, via harness-mounted female RCA jacks	
Digital Input	Type	S/PDIF Optical via chassis-mounted Toslink port	
	Bit Depth/Sample Rate	Up to 24 bit/192 kHz	
Analog Outputs	Type	2 Line-Level, via harness-mounted female RCA jacks	
	Max Output Level	4 V RMS	
Digital Output	Type	S/PDIF Optical via chassis-mounted Toslink port	
	Bit Depth/Sample Rate	24 bit/96 kHz	
Dimensions			
L x W x H	9.81 in x 6.62 in x 2.12 in / 250 mm x 168 mm x 54 mm		



**What is TüN?**

TüN™ is software that you use to configure, tune and control your VXi amplifier, and other JL Audio DSP products. TüN™ automatically recognizes what it is connected to, and allows you to make adjustments with a clear interface specifically set up for that product. TüN™ is available for download for free in a variety of applications, for computers and most handheld devices. For more information, visit: [jlaudio.com/tun](http://jlaudio.com/tun)



For Windows® PC or Mac® computers, TüN™ connects via USB and offers complete control and command of the entire VXi feature set from the comfort of your desk or driver's seat. Software also runs in demo mode, without connected amplifiers, for offline setup or demo purposes. Test drive it for free!



For iPad or Android tablets. Enjoy the full-featured TüN™ software experience on your tablet, with the freedom of a wireless connection via Bluetooth®. Requires VXI-BTC Bluetooth® Communicator.



Wireless connection and streamlined options, for fast and simple amplifier setup. Download TüN™ Express for iPhone, iPad and Android phones & tablets. Requires VXI-BTC Bluetooth® Communicator.

**Limited Warranty – Amplifiers (USA)**

JL Audio warrants this product to be free of defects in materials and workmanship for a period of two (2) years from the original date of purchase. This warranty is not transferable and applies only to the original purchaser from an authorized JL Audio dealer. Should service be necessary under this warranty for any reason due to manufacturing defect or malfunction, JL Audio will (at its discretion), repair or replace the defective product with new or remanufactured product at no charge. Damage caused by the following is not covered under warranty: accident, misuse, abuse, product modification or neglect, failure to follow installation instructions, unauthorized repair attempts, misrepresentations by the seller. This warranty does not cover incidental or consequential damages and does not cover the cost of removing or reinstalling the unit(s). Cosmetic damage due to accident or normal wear and tear is not covered under warranty.

**Warranty is void if the product's serial number has been removed or defaced.**

All applicable implied warranties are limited in duration to the period of the express warranty as provided herein beginning with the date of the original purchase at retail, and no warranties, whether express or implied, shall apply to this product thereafter. Some states do not allow limitations on implied warranties, therefore these exclusions may not apply to you. This warranty gives you specific legal rights, and you may also have other rights, which vary from state to state.

**If you need service on your JL AUDIO product:**

All warranty returns should be sent to JL Audio 's Amplifier Service Facility freight-prepaid through an authorized JL Audio dealer and must be accompanied by proof of purchase (a copy of the original sales receipt). Direct returns from consumers or non-authorized dealers will be refused unless specifically authorized by JL Audio with a valid return authorization number. Warranty expiration on products returned without proof of purchase will be determined from the manufacturing date code. Coverage may be invalidated as this date is previous to purchase date. Non-defective items received will be returned freight-collect. Customer is responsible for shipping charges and insurance in sending the product to JL Audio. Freight damage on returns is not covered under warranty.

**For Service Information in the U.S.A. please call JL Audio Customer Service:**

(954) 443-1100 9:00 AM – 5:30 PM (Eastern Time Zone)  
**JL Audio, Inc.**  
 10369 North Commerce Pkwy. Miramar, FL 33025  
 (Do not send product for repair to this address)

**International Warranties:**

Products purchased outside the United States of America are covered only by that country's distributor and not by JL Audio, Inc.