



## Bread Slicers

Models SB-TW-0025, 0013, 0019, 0016, 0011

Items 10246, 10247, 10248, 10249, 10250

## Instruction Manual



For questions or assistance with this  
product call OMCAN Toll Free:

1 800 465 0234

Customer Service

or

visit the Support section of

[www.omcan.com](http://www.omcan.com)

*Revised - 02/27/2017*

Toll Free: 1-800-465-0234

Fax: 905-607-0234

Email: [service@omcan.com](mailto:service@omcan.com)

[www.omcan.com](http://www.omcan.com)



NEMA  
5 - 15  
125 VAC / 15 AMP



# Table of Contents

Model SB-TW-0025 / Model SB-TW-0013 / Model SB-TW-0019  
Model SB-TW-0016 / Model SB-TW-0011

---

<b>Section</b>	<b>Page</b>
General Information -----	3 - 4
Safety and Warranty -----	4 - 5
Technical Specifications -----	5
Installation -----	6
Operation -----	6
Maintenance -----	6 - 7
Troubleshooting -----	7
Parts Breakdown -----	8 - 13
Electrical Schematics -----	14
Warranty Registration -----	15



# General Information

**Omcan Manufacturing and Distributing Company Inc., Food Machinery of America, Inc. dba Omcan and Omcan Inc. are not responsible for any harm or injury caused due to any person's improper or negligent use of this equipment. The product shall only be operated by someone over the age of 18, of sound mind, and not under the influence of any drugs or alcohol, who has been trained in the correct operation of this machine, and is wearing authorized, proper safety clothing. Any modification to the machine voids any warranty, and may cause harm to individuals using the machine or in the vicinity of the machine while in operation.**

## CHECK PACKAGE UPON ARRIVAL

Upon receipt of an Omcan shipment please inspect for external damage. If no damage is evident on the external packaging, open carton to ensure all ordered items are within the box, and there is no concealed damage to the machine. If the package has suffered rough handling, bumps or damage (visible or concealed), please note it on the bill of lading before accepting the delivery and contact Omcan within 24 hours, so we may initiate a claim with the carrier. A detailed report on the extent of the damage caused to the machine must be filled out within three days, from the delivery date shown in the shipping documents. Omcan has no recourse for damaged products that were shipped collect or third party.

**Before operating any equipment, always read and familiarize yourself with all operation and safety instructions.**

**Omcan would like to thank you for purchasing this machine. It's of the utmost importance to save these instructions for future reference. Also save the original box and packaging for shipping the equipment if servicing or returning of the machine is required.**

**Omcan Fabrication et distribution Companie Limité et Food Machinery d'Amerique, dba Omcan et Omcan Inc. ne sont pas responsables de tout dommage ou blessure causé du fait que toute personne ait utilisé cet équipement de façon irrégulière. Le produit ne doit être exploité que par quelqu'un de plus de 18 ans, saine d'esprit, et pas sous l'influence d'une drogue ou d'alcool, qui a été formé pour utiliser cette machine correctement, et est vêtu de vêtements de sécurité approprié. Toute modification de la machine annule toute garantie, et peut causer un préjudice à des personnes utilisant la machine ou des personnes à proximité de la machine pendant son fonctionnement.**

## VÉRIFIEZ LE COLIS DÈS RÉCEPTION

Dès réception d'une expédition d'Omcan veuillez inspecter pour dommages externes. Si aucun dommage n'est visible sur l'emballage externe, ouvrez le carton afin de s'assurer que tous les éléments commandés sont dans la boîte, et il n'y a aucun dommage dissimulé à la machine. Si le colis n'a subi aucune mauvaises manipulations, de bosses ou de dommages (visible ou cachée), notez-le sur le bond de livraison avant d'accepter la livraison et contactez Omcan dans les 24 heures qui suivent, pour que nous puissions engager une réclamation auprès du transporteur. Un rapport détaillé sur l'étendue des dommages causés à la machine doit être rempli dans un délai de trois jours, à compter de la date de livraison indiquée dans les documents d'expédition. Omcan n'a aucun droit de recours pour les produits endommagés qui ont été expédiées ou cueillies par un tiers transporteur.

# General Information

---

Avant d'utiliser n'importe quel équipement, toujours lire et vous familiariser avec toutes les opérations et les consignes de sécurité.

Omcan voudrais vous remercier d'avoir choisi cette machine. Il est primordial de conserver ces instructions pour une référence ultérieure. Également conservez la boîte originale et l'emballage pour l'expédition de l'équipement si l'entretien ou le retour de la machine est nécessaire.

Omcan Empresa De Fabricacion Y Distribucion Inc. Y Maquinaria De Alimentos De America, Inc. dba Omcan y Omcan Inc. no son responsables de ningun daño o perjuicio causado por cualquier persona inadecuada o el uso descuidado de este equipo. El producto solo podra ser operado por una persona mayor de 18 años, en su sano juicio y no bajo alguna influencia de droga o alcohol, y que este ha sido entrenado en el correcto funcionamiento de esta máquina, y ésta usando ropa apropiada y autorizada. Cualquier modificación a la máquina anula la garantía y puede causar daños a las personas usando la máquina mientras esta en el funcionamiento.

## REVISE EL PAQUETE A SU LLEGADA

Tras la recepcion de un envio Omcan favor inspeccionar daños externos. Si no hay daños evidentes en el empaque exterior, Habra el carton para asegurararse que todos los articulos solicitados estén dentro de la caja y no encuentre daños ocultos en la máquina. Si el paquete ha sufrido un manejo de poco cuidado, golpes o daños (visible o oculto) por favor anote en la factura antes de aceptar la entrega y contacte Omcan dentro de las 24 horas, de modo que podamos iniciar una reclamación con la compañía. Un informe detallado sobre los daños causados a la máquina debe ser llenado en el plazo de tres días, desde la fecha de entrega que se muestra en los documentos de envío. Omcan no tiene ningun recurso por productos dañados que se enviaron a recoger por terceros.

**Antes de utilizar cualquier equipo, siempre lea y familiarizarse con todas las instrucciones de funcionamiento y seguridad.**

Omcan le gustaría darle las gracias por la compra de esta máquina. Es de la mayor importancia para salvar estas instrucciones para futuras consultas. Además, guarda la caja original y el embalaje para el envío del equipo si servicio técnico o devolución de la máquina que se requiere.

# Safety and Warranty

---

## DANGER

### TO REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK, CAREFULLY FOLLOW THESE INSTRUCTIONS

For your safety, this equipment has been verified by qualified technicians and carefully crated before shipment. The freight company takes full responsibility for the delivery of this equipment in good condition, by accepting to deliver it.



# Safety and Warranty

- The manufacturer suggests to read this manual carefully.
- The bread slicer is manufactured with first quality materials by experienced technicians. Normal use and adequate maintenance will guarantee a reliable service for years to come.
- The SM302 bread slicer is available in four different slice thickness (1/2, 5/8, 3/4 and 1 inch).
- A nameplate fixed to the left side of the slicer specifies the serial number, model number, amperage, voltage and frequency.
- Drawings, electrical diagrams and replacement part numbers are included in this manual

**BEFORE USING THE BREAD SLICER, VERIFY THAT NOTHING OBSTRUCTS THE CHUTE BLADE AND TIGHTEN THE GUIDE ADJUSTMENT.**

## 1 YEAR PARTS AND LABOR WARRANTY

Within the warranty period, contact Omcan Inc. at 1-800-465-0234 to schedule an Omcan authorized service technician to repair the equipment locally.

Unauthorized maintenance will void the warranty. Warranty covers electrical and part failures, not improper use.

Please see [www.omcan.com/warranty.html](http://www.omcan.com/warranty.html) for complete info.

## WARNING:

The packaging components (cardboard, polyethylene, and others) are classified as normal solid urban waste and can therefore be disposed of without difficulty.

In any case, for suitable recycling, we suggest disposing of the products separately (differentiated waste) according to the current norms.

**DO NOT DISCARD ANY PACKAGING MATERIALS IN THE ENVIRONMENT!**

# Technical Specifications

Model	SB-TW-0025	SB-TW-0013	SB-TW-0019	SB-TW-0016	SB-TW-0011
HP			0.25		
Size	1" / 25mm	1/2" / 13mm	3/4" / 19mm	5/8" / 16mm	7/16" / 11mm
Electrical			110V/60/1		
Weight			176 lbs. / 79.8 kgs.		
Dimensions			26" x 29.5" x 29.5" / 660 x 749 x 749mm		
Item Number	10246	10247	10248	10249	10250

# Installation

---

Open the crate and remove all materials used for packing as well as the accessories. Put the slicer on a stable table or counter and make sure the slicer is level. Each unit is set up to be used with the electrical supply specified on the nameplate fixed on the left side of the slicer.

# Operation

---

1. Make sure there are no obstructions in the chute.
2. Adjust the side and top guide a 1/2 inch from each side of the bread and a 1/2 inch from the top.
3. Use only cold bread in the slicer.
4. Start the slicer with the main switch on the left side.
5. Put the bread in the chute and by using the wood bread pusher exert pressure on the bread. When the bread comes out, remove it and put it on the bread bagger on the top of the slicer. Take a bag and insert over the bagger and the bread; then remove them and close the bag.

**WARNING: NEVER TRY TO PUSH OR PULL OUT THE BREAD WITH YOUR HANDS WHEN THE SLICER IS ON. ALWAYS DISCONNECT THE ELECTRIC CORD OR MAIN POWER BREAKER.**

# Maintenance

---

We recommend cleaning the slicer every day to prevent accumulation of bread pieces. Use a small vacuum to clean the bread crumbs.

## CHANGING BLADES

### TO REMOVE THE BLADES

1. Remove the top cover and the guide.
2. Remove the exit chute.
3. Remove the support angle on each side of the chute (10mm key).
4. Unscrew bolt.
5. Unscrew the bottom bolt on the blade frame.
6. Turn the frame cam wheel with the v belt.
7. Use the special tool to remove the blades one by one.

Tool sold separately, Item number 78617.

### TO INSTALL THE NEW BLADES

1. Use the special tool to install the blades one by one.
2. Install the blade frame tighten the bottom bolt and make sure the frames are aligned.
3. Install the angle support on each side of the chute (10mm key).
4. Install the exit chute.
5. Install the top cover and the guide.



# Maintenance

**Always cut off the main power before replacing any parts.**

## Troubleshooting

Problems	Solutions
The slicer does not turn on when powered.	Check if the electric cord is connected. Check the breaker of the building. Check the breaker on the side of the slicer. If the slicer is still not working, call a technician or us.
The slicer does not slice properly.	Make sure the bread is not hot. Check if the blade is clean. Check the guide adjustment. If the slicer still does not slice properly, change the blade.

## REFERENCE

Item Number	Model Number	Description	Manufacturer Model Number
10246	SB-TW-0025	Bread Slicer 1" / 25mm Thickness 0.25 HP / 186 W 110V/60/1	SM3021
10247	SB-TW-0013	Bread Slicer 0.5" / 13mm Thickness 0.25 HP / 186 W 110V/60/1	SM30212
10248	SB-TW-0019	Bread Slicer 0.75" / 19mm Thickness 0.25 HP / 186 W 110V/60/1	SM30234
10249	SB-TW-0016	Bread Slicer 0.6" / 16mm Thickness 0.25 HP / 186 W 110V/60/1	SM30258
10250	SB-TW-0011	Bread Slicer 0.4" / 11mm Thickness 0.25 HP / 186 W 110V/60/1	SM302716

# Parts Breakdown

---


**Model SB-TW-0025** 10246

**Model SB-TW-0013** 10247

**Model SB-TW-0019** 10248

**Model SB-TW-0016** 10249

**Model SB-TW-0011** 10250

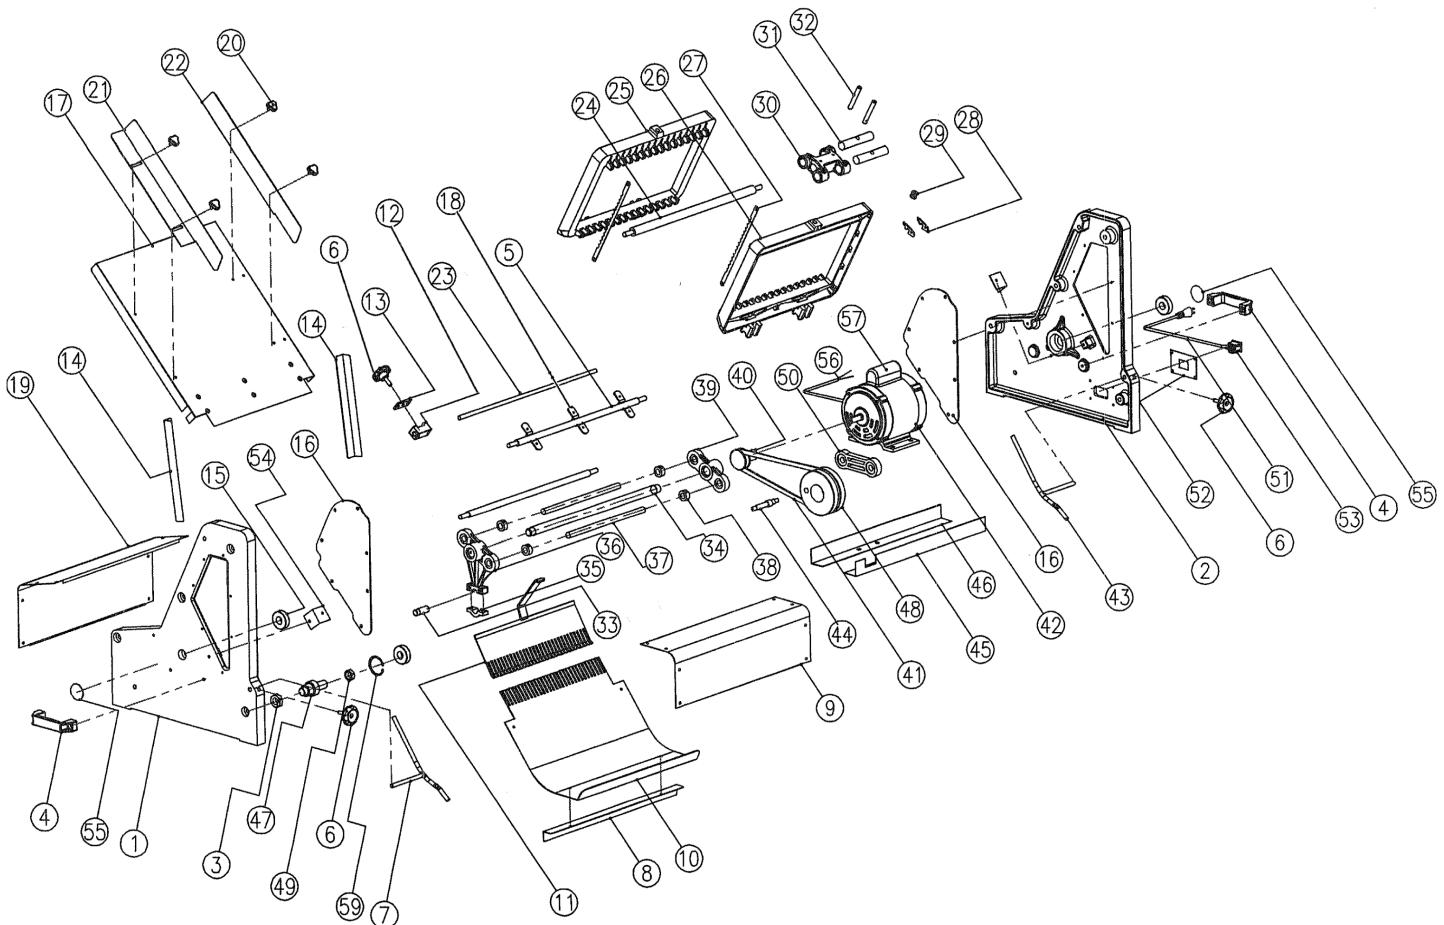



# Parts Breakdown

## Model SB-TW-0025 10246

Item No.	Description	Position	Item No.	Description	Position	Item No.	Description	Position
27137	Left Bracket for SM3021	1	20847	Left Guide Bar for SM3021	21	14764	Belt for SM3021	41
27138	Right Bracket for SM3021	2	20867	Right Guide Bar for SM3021	22	14765	Motor for SM3021	42
20840	Screw Nut for SM3021	3	20848	Slide Board Shaft for SM3021	23	20853	Division Plate to Toast (R) for SM3021	43
20859	Handle for SM3021	4	20868	Main Shaft for SM3021	24	20876	Join Pin for SM3021	44
20841	Fixed Lever for SM3021	5	14761	Knife Shaft Left for SM3021	25	20875	Motor Seat (Front) for SM3021	45
20860	Plastic Lock Bolt for SM3021	6	27139	Knife Shaft Right for SM3021	26	20856	Motor Seat (Right) for SM3021	46
20842	Left Division Plate to Toast for SM3021	7	14836	Knife for SM3021	27	20857	Drive Pulley for SM3021	47
20861	L Plate Fix Bolt for SM3021	8	14762	Knife Blade Fixed Block for SM3021	28	20877	Pulley for SM3021	48
23772	Front Cover for SM3021	9	14763	Spring for SM3021	29	20858	Screw Nut for SM3021	49
18995	Plate for Receiving Bread for SM3021	10	20849	Tee Tube for SM3021	30	20878	Plastic Linking Rod for SM3021	50
18996	Pressing Plate to Fixed Base for SM3021	11	20850	Driving Rod Link for SM3021	31	20851	Cable for SM3021	51
20862	Division Plate to Fixed Base for SM3021	12	23770	Driving Rod Link for SM3021	32	20879	Switch plate for SM3021	52
20843	Fixed Block for SM3021	13	20869	Driving Shaft for SM3021	33	18998	Switch for SM3021	53
20880	L Plate for SM3021	14	20863	Fixed Rod for Knife Shelf for SM3021	34	20870	L Plate for SM3021	54
20844	Bearing for SM3021	15	20871	Linking Bar Join Block for SM3021	35	27140	Circular Sticker for SM3021	55
20864	Acrylic Plate for SM3021	16	20852	Linking Bar Seat (L) for SM3021	36	27141	Motor Cable for SM3021	56
20845	Upper Slide Board for SM3021	17	20872	Fixed Rod for Knife Shelf for SM3021	37	20855	Capacitor for SM3021	57
20865	Slide Board Fixed Block for SM3021	18	20873	Bush for SM3021	38	72260	Washer for SM3021	59
20846	Rear Cover for SM3021	19	20854	Linking Bar Seat (R) for SM3021	39	39499	Knife Assembly 1" for SM3021	
20866	Lock Bolt for SM3021	20	20874	Drive Pulley for SM3021	40			

# Parts Breakdown

**Model SB-TW-0013 10247**

Item No.	Description	Position	Item No.	Description	Position	Item No.	Description	Position
27137	Left Bracket for SM30212	1	20847	Left Guide Bar for SM30212	21	14764	Belt for SM30212	41
27138	Right Bracket for SM30212	2	20867	Right Guide Bar for SM30212	22	14765	Motor for SM30212	42
20840	Screw Nut for SM30212	3	20848	Slide Board Shaft for SM30212	23	20853	Division Plate to Toast (R) for SM30212	43
20859	Handle for SM30212	4	20868	Main Shaft for SM30212	24	20876	Join Pin for SM30212	44
20841	Fixed Lever for SM30212	5	28339	Knife Shaft Left for SM30212	25	20875	Motor Seat (Front) for SM30212	45
20860	Plastic Lock Bolt for SM30212	6	28343	Knife Shaft Right for SM30212	26	20856	Motor Seat (Right) for SM30212	46
20842	Left Division Plate to Toast for SM30212	7	14836	Knife for SM30212	27	20857	Drive Pulley for SM30212	47
20861	L Plate Fix Bolt for SM30212	8	14762	Knife Blade Fixed Block for SM30212	28	20877	Pulley for SM30212	48
23772	Front Cover for SM30212	9	14763	Spring for SM30212	29	20858	Screw Nut for SM30212	49
28331	Plate for Receiving Bread for SM30212	10	20849	Tee Tube for SM30212	30	20878	Plastic Linking Rod for SM30212	50
28335	Pressing Plate to Fixed Base for SM30212	11	20850	Driving Rod Link for SM30212	31	20851	Cable for SM30212	51
20862	Division Plate to Fixed Base for SM30212	12	23770	Driving Rod Link for SM30212	32	20879	Switch plate for SM30212	52
20843	Fixed Block for SM30212	13	20869	Driving Shaft for SM30212	33	18998	Switch for SM30212	53
20880	L Plate for SM30212	14	20863	Fixed Rod for Knife Shelf for SM30212	34	20870	L Plate for SM30212	54
20844	Bearing for SM30212	15	20871	Linking Bar Join Block for SM30212	35	27140	Circular Sticker for SM30212	55
20864	Acrylic Plate for SM30212	16	20852	Linking Bar Seat (L) for SM30212	36	27141	Motor Cable for SM30212	56
20845	Upper Slide Board for SM30212	17	20872	Fixed Rod for Knife Shelf for SM30212	37	20855	Capacitor for SM30212	57
20865	Slide Board Fixed Block for SM30212	18	20873	Bush for SM30212	38	72260	Washer for SM30212	59
20846	Rear Cover for SM30212	19	20854	Linking Bar Seat (R) for SM30212	39	27051	Knife Assembly 1/2" for SM30212	
20866	Lock Bolt for SM30212	20	20874	Drive Pulley for SM30212	40			



# Parts Breakdown

## Model SB-TW-0019 10248

Item No.	Description	Position	Item No.	Description	Position	Item No.	Description	Position
27137	Left Bracket for SM30234	1	20847	Left Guide Bar for SM30234	21	14764	Belt for SM30234	41
27138	Right Bracket for SM30234	2	20867	Right Guide Bar for SM30234	22	14765	Motor for SM30234	42
20840	Screw Nut for SM30234	3	20848	Slide Board Shaft for SM30234	23	20853	Division Plate to Toast (R) for SM30234	43
20859	Handle for SM30234	4	20868	Main Shaft for SM30234	24	20876	Join Pin for SM30234	44
20841	Fixed Lever for SM30234	5	28340	Knife Shaft Left for SM30234	25	20875	Motor Seat (Front) for SM30234	45
20860	Plastic Lock Bolt for SM30234	6	28344	Knife Shaft Right for SM30234	26	20856	Motor Seat (Right) for SM30234	46
20842	Left Division Plate to Toast for SM30234	7	14836	Knife for SM30234	27	20857	Drive Pulley for SM30234	47
20861	L Plate Fix Bolt for SM30234	8	14762	Knife Blade Fixed Block for SM30234	28	20877	Pulley for SM30234	48
23772	Front Cover for SM30234	9	14763	Spring for SM30234	29	20858	Screw Nut for SM30234	49
28332	Plate for Receiving Bread for SM30234	10	20849	Tee Tube for SM30234	30	20878	Plastic Linking Rod for SM30234	50
28336	Pressing Plate to Fixed Base for SM30234	11	20850	Driving Rod Link for SM30234	31	20851	Cable for SM30234	51
20862	Division Plate to Fixed Base for SM30234	12	23770	Driving Rod Link for SM30234	32	20879	Switch plate for SM30234	52
20843	Fixed Block for SM30234	13	20869	Driving Shaft for SM30234	33	18998	Switch for SM30234	53
20880	L Plate for SM30234	14	20863	Fixed Rod for Knife Shelf for SM30234	34	20870	L Plate for SM30234	54
20844	Bearing for SM30234	15	20871	Linking Bar Join Block for SM30234	35	27140	Circular Sticker for SM30234	55
20864	Acrylic Plate for SM30234	16	20852	Linking Bar Seat (L) for SM30234	36	27141	Motor Cable for SM30234	56
20845	Upper Slide Board for SM30234	17	20872	Fixed Rod for Knife Shelf for SM30234	37	20855	Capacitor for SM30234	57
20865	Slide Board Fixed Block for SM30234	18	20873	Bush for SM30234	38	72260	Washer for SM30234	59
20846	Rear Cover for SM30234	19	20854	Linking Bar Seat (R) for SM30234	39	24575	Knife Assembly 3/4" for SM30234	
20866	Lock Bolt for SM30234	20	20874	Drive Pulley for SM30234	40			

# Parts Breakdown

**Model SB-TW-0016 10249**

Item No.	Description	Position	Item No.	Description	Position	Item No.	Description	Position
27137	Left Bracket for SM30258	1	20847	Left Guide Bar for SM30258	21	14764	Belt for SM30258	41
27138	Right Bracket for SM30258	2	20867	Right Guide Bar for SM30258	22	14765	Motor for SM30258	42
20840	Screw Nut for SM30258	3	20848	Slide Board Shaft for SM30258	23	20853	Division Plate to Toast (R) for SM30258	43
20859	Handle for SM30258	4	20868	Main Shaft for SM30258	24	20876	Join Pin for SM30258	44
20841	Fixed Lever for SM30258	5	28341	Knife Shaft Left for SM30258	25	20875	Motor Seat (Front) for SM30258	45
20860	Plastic Lock Bolt for SM30258	6	28345	Knife Shaft Right for SM30258	26	20856	Motor Seat (Right) for SM30258	46
20842	Left Division Plate to Toast for SM30258	7	14836	Knife for SM30258	27	20857	Drive Pulley for SM30258	47
20861	L Plate Fix Bolt for SM30258	8	14762	Knife Blade Fixed Block for SM30258	28	20877	Pulley for SM30258	48
23772	Front Cover for SM30258	9	14763	Spring for SM30258	29	20858	Screw Nut for SM30258	49
28333	Plate for Receiving Bread for SM30258	10	20849	Tee Tube for SM30258	30	20878	Plastic Linking Rod for SM30258	50
28337	Pressing Plate to Fixed Base for SM30258	11	20850	Driving Rod Link for SM30258	31	20851	Cable for SM30258	51
20862	Division Plate to Fixed Base for SM30258	12	23770	Driving Rod Link for SM30258	32	20879	Switch plate for SM30258	52
20843	Fixed Block for SM30258	13	20869	Driving Shaft for SM30258	33	18998	Switch for SM30258	53
20880	L Plate for SM30258	14	20863	Fixed Rod for Knife Shelf for SM30258	34	20870	L Plate for SM30258	54
20844	Bearing for SM30258	15	20871	Linking Bar Join Block for SM30258	35	27140	Circular Sticker for SM30258	55
20864	Acrylic Plate for SM30258	16	20852	Linking Bar Seat (L) for SM30258	36	27141	Motor Cable for SM30258	56
20845	Upper Slide Board for SM30258	17	20872	Fixed Rod for Knife Shelf for SM30258	37	20855	Capacitor for SM30258	57
20865	Slide Board Fixed Block for SM30258	18	20873	Bush for SM30258	38	72260	Washer for SM30258	59
20846	Rear Cover for SM30258	19	20854	Linking Bar Seat (R) for SM30258	39	18997	Knife Assembly 5/8" for SM30258	
20866	Lock Bolt for SM30258	20	20874	Drive Pulley for SM30258	40			



# Parts Breakdown

## Model SB-TW-0011 10250

Item No.	Description	Position	Item No.	Description	Position	Item No.	Description	Position
27137	Left Bracket for SM302716	1	20847	Left Guide Bar for SM302716	21	14764	Belt for SM302716	41
27138	Right Bracket for SM302716	2	20867	Right Guide Bar for SM302716	22	14765	Motor for SM302716	42
20840	Screw Nut for SM302716	3	20848	Slide Board Shaft for SM302716	23	20853	Division Plate to Toast (R) for SM302716	43
20859	Handle for SM302716	4	20868	Main Shaft for SM302716	24	20876	Join Pin for SM302716	44
20841	Fixed Lever for SM302716	5	28342	Knife Shaft Left for SM302716	25	20875	Motor Seat (Front) for SM302716	45
20860	Plastic Lock Bolt for SM302716	6	28346	Knife Shaft Right for SM302716	26	20856	Motor Seat (Right) for SM302716	46
20842	Left Division Plate to Toast for SM302716	7	14836	Knife for SM302716	27	20857	Drive Pulley for SM302716	47
20861	L Plate Fix Bolt for SM302716	8	14762	Knife Blade Fixed Block for SM302716	28	20877	Pulley for SM302716	48
23772	Front Cover for SM302716	9	14763	Spring for SM302716	29	20858	Screw Nut for SM302716	49
28334	Plate for Receiving Bread for SM302716	10	20849	Tee Tube for SM302716	30	20878	Plastic Linking Rod for SM302716	50
28338	Pressing Plate to Fixed Base for SM302716	11	20850	Driving Rod Link for SM302716	31	20851	Cable for SM302716	51
20862	Division Plate to Fixed Base for SM302716	12	23770	Driving Rod Link for SM302716	32	20879	Switch plate for SM302716	52
20843	Fixed Block for SM302716	13	20869	Driving Shaft for SM302716	33	18998	Switch for SM302716	53
20880	L Plate for SM302716	14	20863	Fixed Rod for Knife Shelf for SM302716	34	20870	L Plate for SM302716	54
20844	Bearing for SM302716	15	20871	Linking Bar Join Block for SM302716	35	27140	Circular Sticker for SM302716	55
20864	Acrylic Plate for SM302716	16	20852	Linking Bar Seat (L) for SM302716	36	27141	Motor Cable for SM302716	56
20845	Upper Slide Board for SM302716	17	20872	Fixed Rod for Knife Shelf for SM302716	37	20855	Capacitor for SM302716	57
20865	Slide Board Fixed Block for SM302716	18	20873	Bush for SM302716	38	72260	Washer for SM302716	59
20846	Rear Cover for SM302716	19	20854	Linking Bar Seat (R) for SM302716	39	24560	Knife Assembly 7/16" for SM302716	
20866	Lock Bolt for SM302716	20	20874	Drive Pulley for SM302716	40			

# Electrical Schematics


**Model SB-TW-0025** 10246

**Model SB-TW-0013** 10247

**Model SB-TW-0019** 10248

**Model SB-TW-0016** 10249

**Model SB-TW-0011** 10250

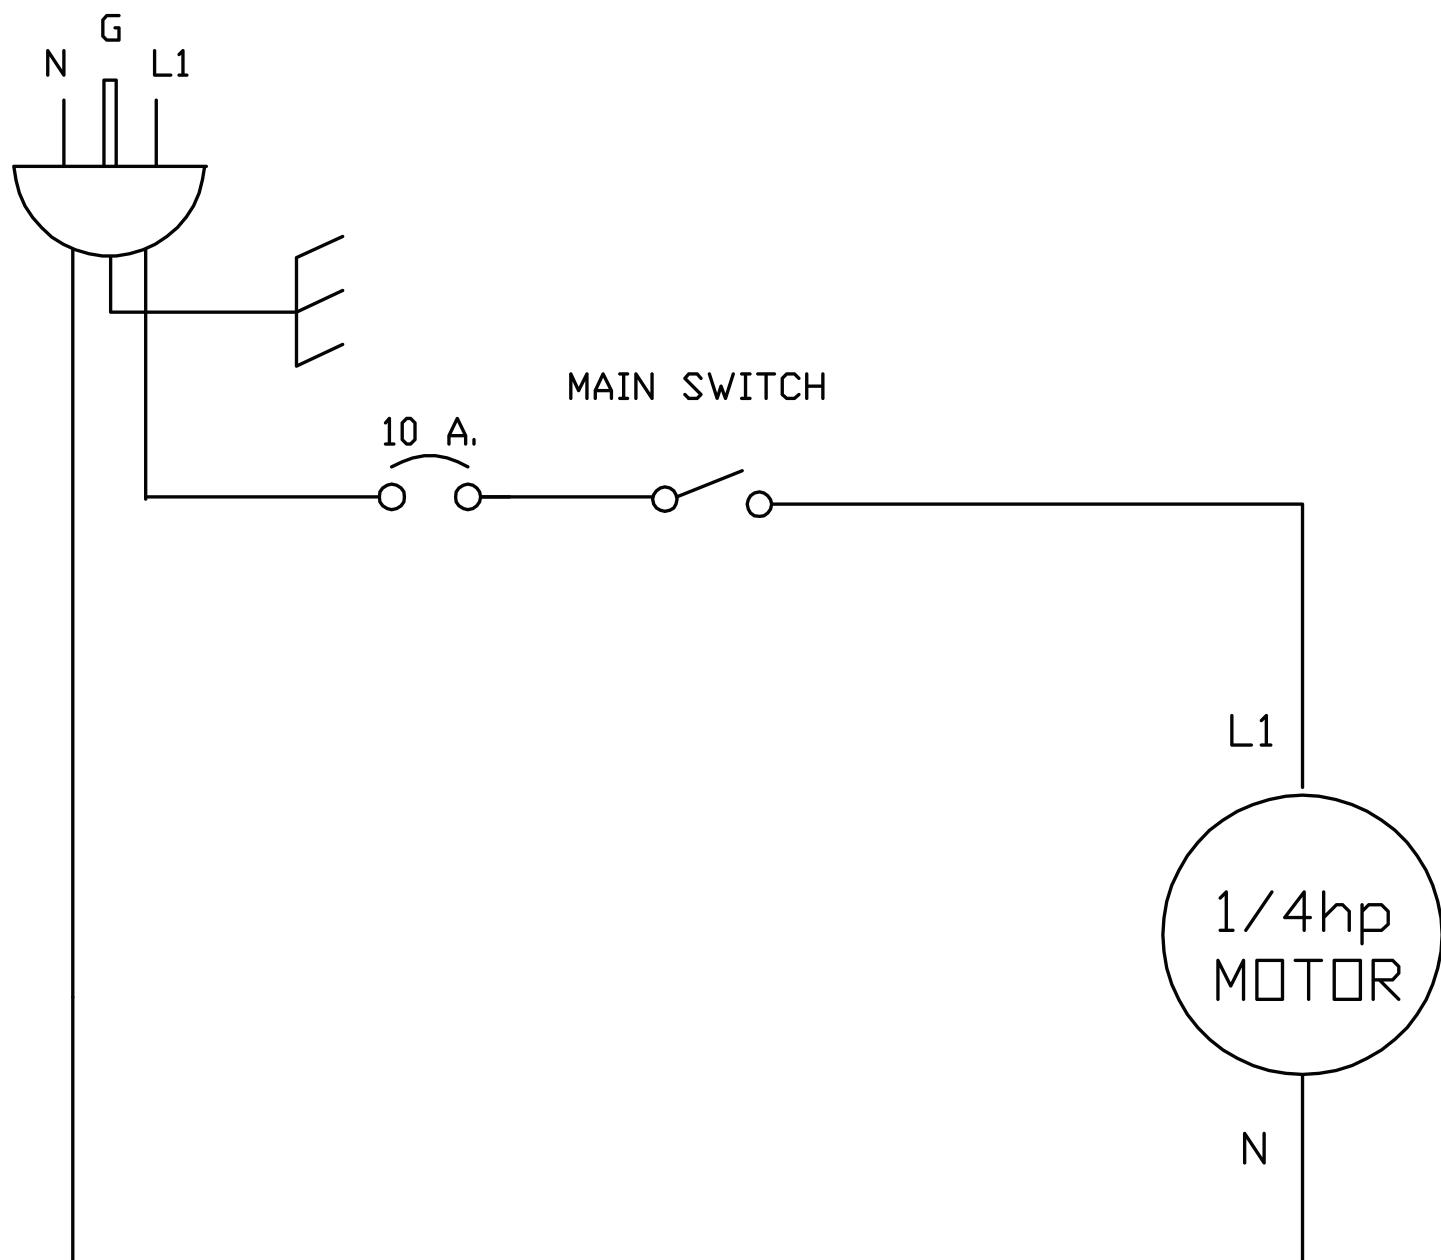



# Warranty Registration

Thank you for purchasing an Omcan product. To register your warranty for this product, complete the information below, tear off the card at the perforation and then send to the address specified below. You can also register online by visiting:

Merci d'avoir acheté un produit Omcan. Pour enregistrer votre garantie pour ce produit, complétez les informations ci-dessous, détachez la carte au niveau de la perforation, puis l'envoyer à l'adresse spécifiée ci-dessous. Vous pouvez également vous inscrire en ligne en visitant:

Gracias por comprar un producto Omcan usted. Para registrar su garantía para este producto, complete la información a continuación, cortar la tarjeta en la perforación y luego enviarlo a la dirección indicada a continuación. También puede registrarse en línea en:

**[www.omcan.com/warrantyregistration.html](http://www.omcan.com/warrantyregistration.html)**

**For mailing in Canada**

**Pour postale au Canada**

**Por correo en Canadá**

**For mailing in the US**

**Pour diffusion aux États-Unis**

**Por correo en los EE.UU.**

**OMCAN**

PRODUCT WARRANTY REGISTRATION  
3115 Pepper Mill Court,  
Mississauga, Ontario  
Canada, L5L 4X5

**OMCAN**

PRODUCT WARRANTY REGISTRATION  
4450 Witmer Industrial Estates, Unit 4,  
Niagara Falls, New York  
USA, 14305

*or email to: [service@omcan.com](mailto:service@omcan.com)*



Purchaser's Information

Name: \_\_\_\_\_ Company Name: \_\_\_\_\_

Address: \_\_\_\_\_ Telephone: \_\_\_\_\_

City: \_\_\_\_\_ Province or State: \_\_\_\_\_ Postal or Zip: \_\_\_\_\_ Email Address: \_\_\_\_\_

Country: \_\_\_\_\_ Type of Company: \_\_\_\_\_

Restaurant    Bakery    Deli

Butcher    Supermarket    Caterer

Institution (specify): \_\_\_\_\_

Other (specify): \_\_\_\_\_

Dealer from which Purchased: \_\_\_\_\_

Dealer City: \_\_\_\_\_ Dealer Province or State: \_\_\_\_\_

Invoice: \_\_\_\_\_

Model Name: \_\_\_\_\_ Model Number: \_\_\_\_\_ Serial Number: \_\_\_\_\_

Machine Description: \_\_\_\_\_

Date of Purchase (MM/DD/YYYY): \_\_\_\_\_ Date of Installation (MM/DD/YYYY): \_\_\_\_\_

Would you like to extend the warranty?  Yes  No

**Thank you for choosing Omcan | Merci d'avoir choisi Omcan | Gracias por elegir Omcan**



Since 1951 Omcan has grown to become a leading distributor of equipment and supplies to the North American food service industry. Our success over these many years can be attributed to our commitment to strengthen and develop new and existing relationships with our valued customers and manufacturers. Today with partners in North America, Europe, Asia and South America, we continually work to improve and grow the company. We strive to offer customers exceptional value through our qualified local sales and service representatives who provide convenient access to over 3,500 globally sourced products.

---

Depuis 1951 Omcan a grandi pour devenir un des "leaders" de la distribution des équipements et matériel pour l'industrie des services alimentaires en Amérique du Nord. Notre succès au cours de ces nombreuses années peut être attribué à notre engagement à renforcer et à développer de nouvelles et existantes relations avec nos clients et les fabricants de valeur. Aujourd'hui avec des partenaires en Amérique du Nord, Europe, Asie et Amérique du Sud, nous travaillons continuellement à améliorer et développer l'entreprise. Nous nous efforçons d'offrir à nos clients une valeur exceptionnelle grâce à nos ventes locales qualifiées et des représentants de service qui offrent un accès facile à plus de 3500 produits provenant du monde entier.

---

Desde 1951 Omcan ha crecido hasta convertirse en un líder en la distribución de equipos y suministros de alimentos en América del Norte industria de servicios. Nuestro éxito en estos años se puede atribuir a nuestro compromiso de fortalecer y desarrollar nuevas relaciones existentes con nuestros valiosos clientes y fabricantes. Hoy con socios de América del Norte, Europa, Asia y América del Sur, que trabajan continuamente para mejorar y crecer la empresa. Nos esforzamos por ofrecer a nuestros clientes valor excepcional a través de nuestro local de ventas y representantes de los servicios que proporcionan un fácil acceso a más de 3,500 productos con origen a nivel mundial.

