



User manual

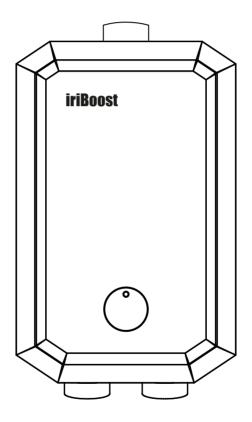

IriBoost

CONGRATULATIONS ON YOUR NEW PRODUCT FROM IRIDIUM WATERPROOF COMMUNICATION SYSTEMS

IriBoost

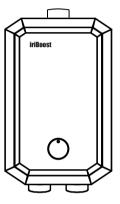

IWCS HOPE YOU WILL ENJOY THE BENEFITS OF TROUBLE FREE HIGH QUALITY INTERCOM. PLEASE READ THESE INSTRUCTIONS CAREFULLY BEFORE FIRST USE. IF INSTALLED, OPERATED AND MAINTAINED ACCORDING TO THIS MANUAL THE IriBoost WILL BE A RELIABLE PARTNER FOR MANY YEARS TO COME.

> THOMAS B SVENNINGSEN **CO-FOUNDER OF IWCS**

| | 1.1 Disclaimer1.2 Copyright1.3 Trademark1.4 Safety Warning | Page: Page: Page: Page: | 4 4 4 5 | | |
|----------------------------|---|---|----------------------------|--|--|
| 2. Unboxing | | | | | |
| | 2.1 In the box | Page: | 6 | | |
| 3. Installation | | | | | |
| 4 Onour | 3.1 Drill Template 1:1 3.2 Tools 3.3 Mounting 3.4 Bracket Placement 3.5 Installing the iriBoost | Page: Page: Page: Page: Page: | 7 9 9 10 11 | | |
| 4. Operation | | | | | |
| | 4.1 User guide | Page: | 12 | | |
| 5. Service And Maintenance | | | | | |
| | 5.1 Specifications5.2 Cleaning5.3 Warrenty5.4 Service and upgrades5.5 Maintenance | Page: Page: Page: Page: Page: Page: | 13 13 13 13 13 | | |



3450 Allerød

+45 43 43 26 26 info@iwcs.eu www.iwcs.eu



1. Introduction

1.1 Disclaimer

Any responsibility or liability for loss or damage in connection with the use of this product and the accompanying documentation is disclaimed by IWCS.

The information in this manual is provided for information purposes only, is subject to change without notice and may contain errors or inaccuracies.

Manuals issued by IWCS are periodically revised and updated.

Anyone relying on this information should acquire the most current version e.g. upon request at info@iwcs.eu

IWCS is not responsible for the content or accuracy of any translations or reproductions, in the whole or in part, of this manual from any other source.

1.2 Copyright

2024 Iridium Waterproof Communication Systems ApS. All right reserved. Printed in Denmark.

1.3 Trademark

IriBoost is a Trademark by Iridium Waterproof Communication Systems ApS.

| Revision | Release date | Release note |
|----------|--------------|-----------------|
| 1.1 | 19-03-2024 | General Revisit |



Hejrevang 13 3450 Allerød

+45 43 43 26 26 info@iwcs.eu www.iwcs.eu

1.4 Safety warning

The following general safety precautions must be observed during all phases of operation, service and repair of this equipment. Failure to comply with these precautions or with specific warnings elsewhere in this manual violates safety standards of design, manufacture and intended use of the equipment. IWCS assumes no liability for the customer's failure to comply with these requirements.

EMC / RF EXPOSURE

IriBoost is CE and UKCA certified as stated in the Declaration of Conformity.



FIRE

In case of fire, harmful gases and fumes may occur.

One should immediately leave the area and seek help.
In case of suspected smoke in the lungs, a doctor should be consulted



POWER LOSS

Power interruptions limited to IriBoost will not affect other users communication. A general power outage will turn off the entire intercom system. IWCS is not responsible for any power outages or consequences thereof, of any kind.



WARRANTY LIMITATIONS

IMPORTANT - This unit is a sealed waterproof unit (classified IP67). To create and maintain its waterproof integrity it has been assembled in a controlled environment using special equipment. This unit is NOT a user serviceable unit, and under no circumstances should the unit be opened except by authorized personnel. Unauthorized opening of the unit will invalidate the warranty.



DISPOSAL

When disposing of IriBoost and related equipment, it must happen in accordance with applicable national law.






6 Unboxing

2.1 In The Box


1 x IriBoost

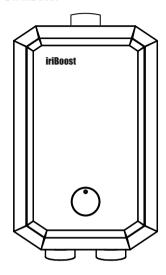

1 x Mounting Bracket

1 x User Manual









3.1 Drill Template 1:1



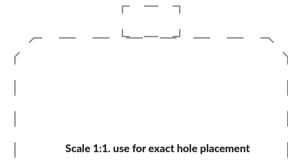

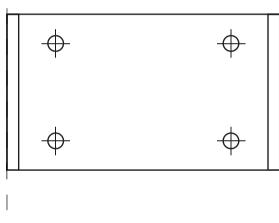



Hejrevang 13


3450 Allerød

Installation

3.2 Tools

Before installation please prepare the following tools:

- Tape
- 4,5 or 3,3 mm drill bits
- Screw heads may not exceed 7 mm
- Silicone based sealant





3.3 Installation

When mounting the IriBoost, it is essential to consider the material and the appropriate drill bit size. Please note the following guidelines:

If you are using wood screws you will need:

- 3x 4 mm screws.
- Drill 3.3 mm holes.

If you are using machine screws you will need:

- 3x 4 mm screws.
- 3x locking bolts.
- 3x washers.
- Drill 4.5 mm holes.



Hejrevang 13

3450 Allerød


Denmark

Backside of drill template

^{*}Note that no mounting equipment is included in the box.

3.4 Bracket placement

The minimum distance from the underside of the bracket to the nearest surface should be no less than **150** *millimeters* to ensure proper cable clearance.

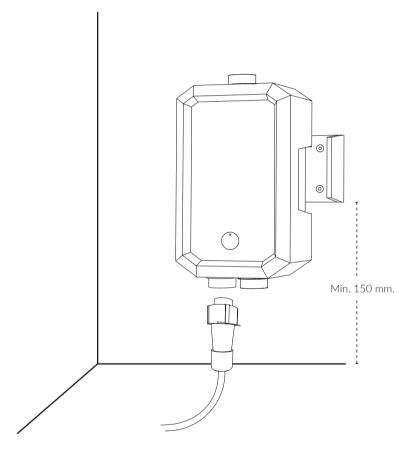


3.5 Installing the iriBoost

Once the bracket is securely in place, you can proceed to insert the iriBoost into the designated slot. You might need to wiggle the iriBoost slightly to make it fit between the bracket arms.

Securely in place


Gently use your hands to apply pressure and push the iriBoost into place within the bracket. Ensure a firm and secure fit by pressing it all the way until you feel a snap, indicating that it is properly seated in the sockets. It is important to note that this should be done manually without the use of any tools. Avoid excessive force or using tools as it may cause damage to the device or bracket.

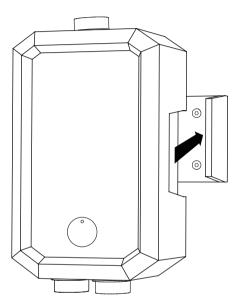



12 Operation

4.1 User Guide

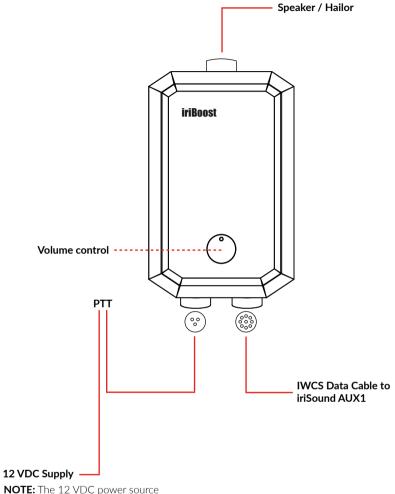

NOTE: The 12 VDC power source and the iriSound MUST have common ground.

Hejrevang 13

3450 Allerød



5.1 Specifications

| iriBoost | |
|-------------------|-----------------------|
| Weight | 230 g |
| Size | 110x75x50 mm |
| Waterproof | IP67 |
| Temperature range | -30 to +60 °C |
| Audio resolution | 20 - 20.000 Hz |
| Interfaces | 1 x PWR (12 VDC) |
| Power Supply | 10-16 VDC / 10A (max) |
| Part number | IR-20-1220-01 |

5.2 Cleaning

Do not use chemicals or solvents to clean your IriBoost. Use only fresh water. Pressure, friction, sharp objects, etc. can damage the product and the warranty may be void.

5.3 Warranty

iriBoost is covered by a two (2) year warranty.

5.4 Service / Upgrades

Any Service or additional Upgrades must be handled by IWCS Do not try to open or modify the IWCS product.

5.5 Maintenance

If your IWCS IriBoost has been exposed to saltwater, chemicals or any other solvents/liquids, immediately rinse with freshwater and wipe with a dry cloth.





14

iriBoost is developed, designed and manufactured by

IWCS Aps

Hejrevang 13 3450 Allerød Denmark

+45 4343 2626

info@iwcs.eu www.iwcs.eu

